
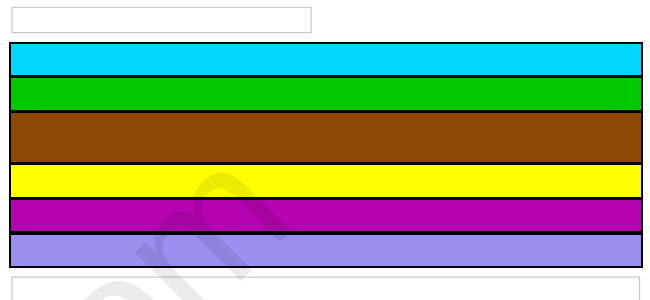


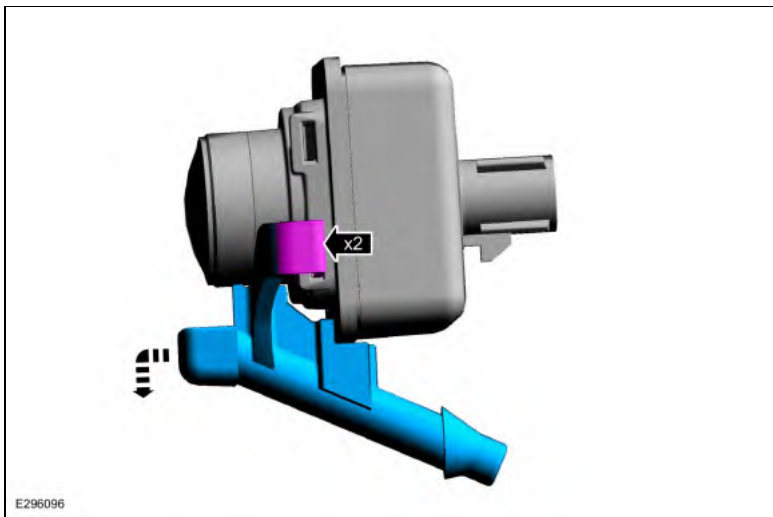

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** Carry out the following step if installing a new front camera.
Initialize the camera.
Refer to: Parking Aid Camera Initialization (413-13B Parking Aid - Vehicles With: Parking Aid Camera, General Procedures).
3. Carry out the 360° camera alignment.
Refer to: 360 Degree View Camera Alignment (413-13B Parking Aid - Vehicles With: Parking Aid Camera, General Procedures).


Image Processing Module B (IPMB)

Removal


1. **NOTE:** If installing a new IPMB, it is necessary to upload the module configuration information to the scan tool prior to removing the module. This information must be downloaded into the new IPMB after installation.

Using a diagnostic scan tool, begin the PMI process for the IPMB following the onscreen instructions

2. Remove the front scuff plate trim panel.
Refer to: Front Scuff Plate Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).
3. Remove the pin-type retainers, the nut and the RH insulation panel.
 - Disconnect the electrical connector.

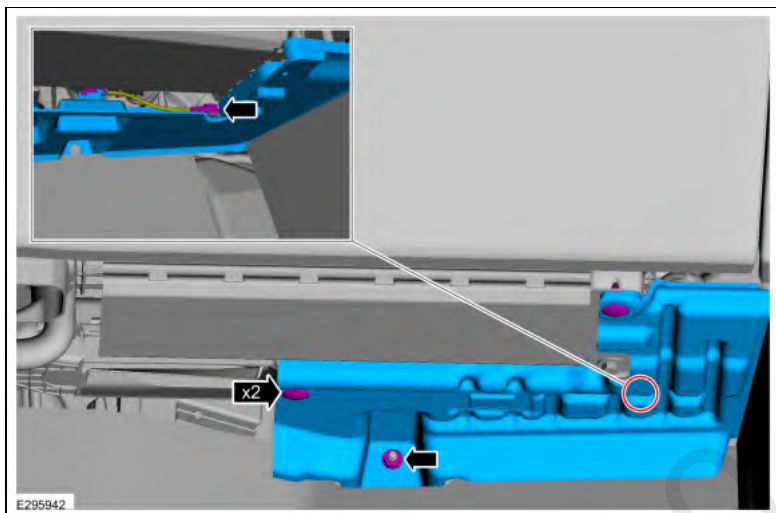

4. Position the carpet for access.

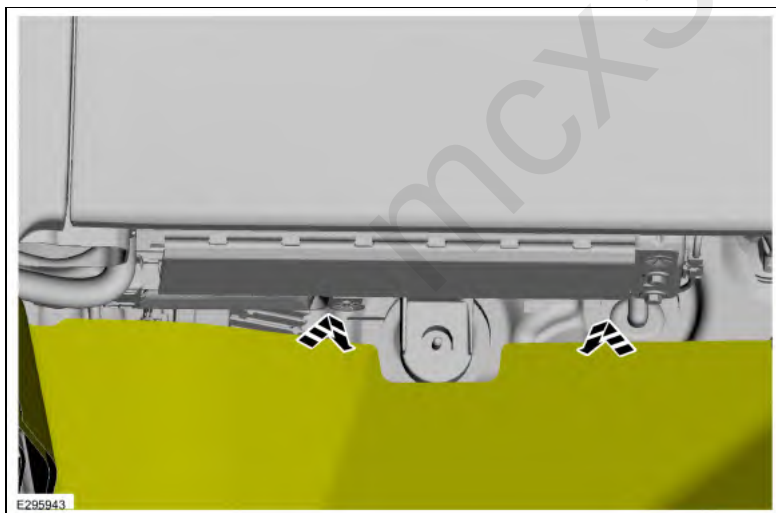

5. Disconnect the electrical connectors, release the wiring guides and position the harness aside.

