


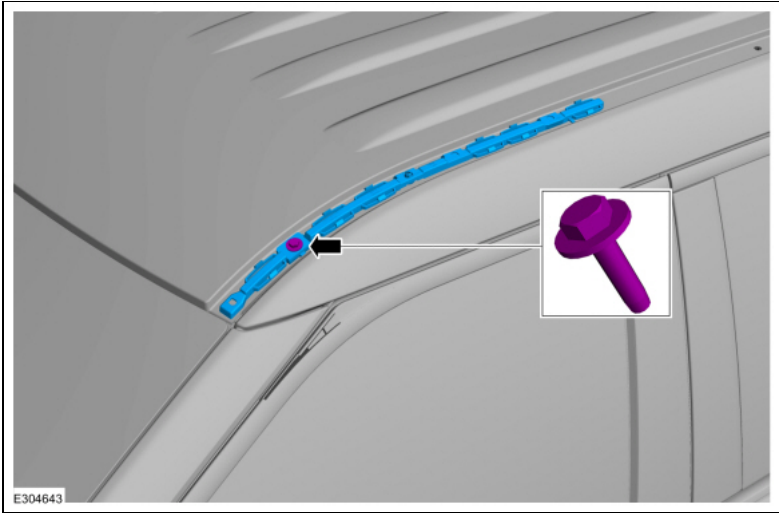


Installation

NOTE: Wipe the surface with rubbing Alcohol to clear any adhesive.

NOTE: Make sure that a new component is installed.

- 1. Install the roof moulding clip.
Torque: 42 lb.in (4.8 Nm)

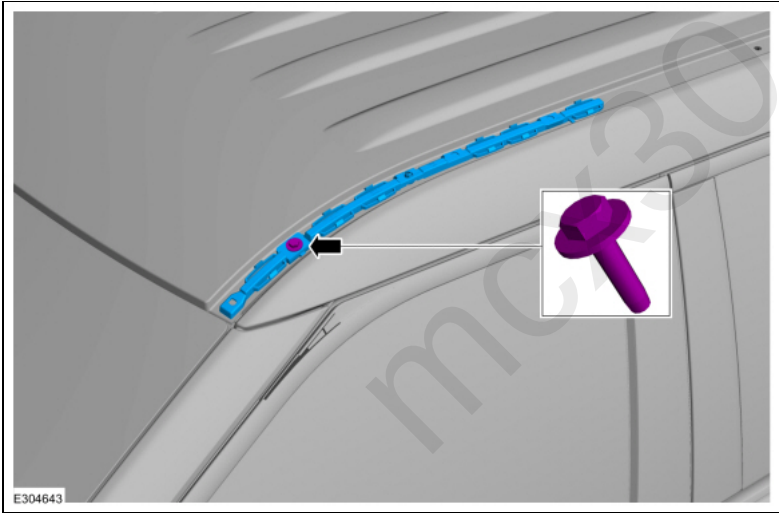

- 2. Install the roof moulding.