



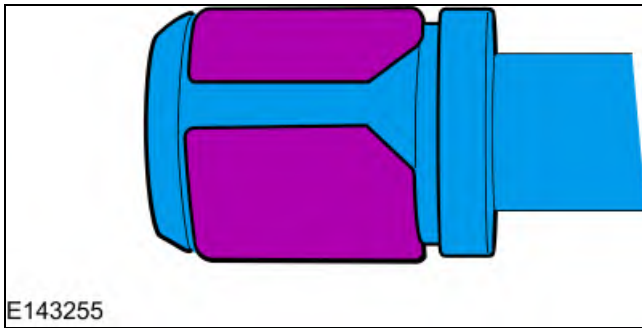

5. To connect, verify the C-lock coupler lock ring is in the locked position.
6. **NOTE:** *The lock ring flexes open slightly to allow the male fitting to enter the C-lock coupler.*
NOTE: *The lock ring can be heard as it snaps into the lock position.*
Insert the male fitting into the C-lock coupler.
7. Gently pull on the C-lock coupler to verify it is seated correctly.

mcx30.com