
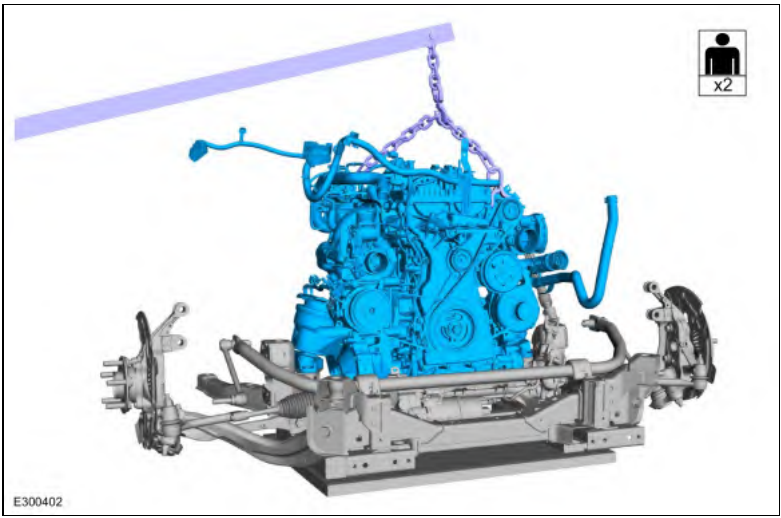
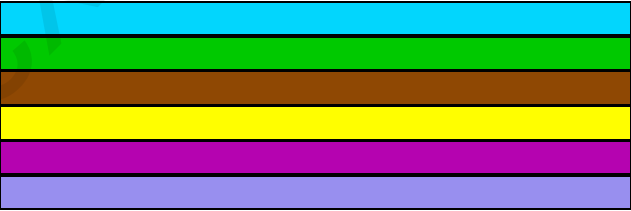


4. **NOTE:** AWD shown, RWD similar.
Make sure the board is still in position to support the engine.

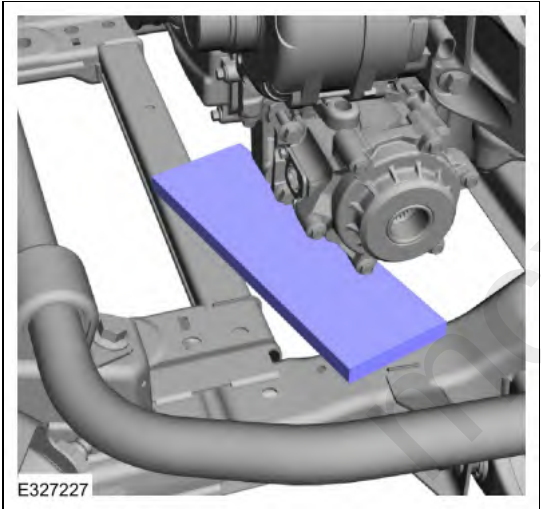

5. Install the RH motor mount bolts and tighten in sequence shown.
Torque: 76 lb.ft (103 Nm)