



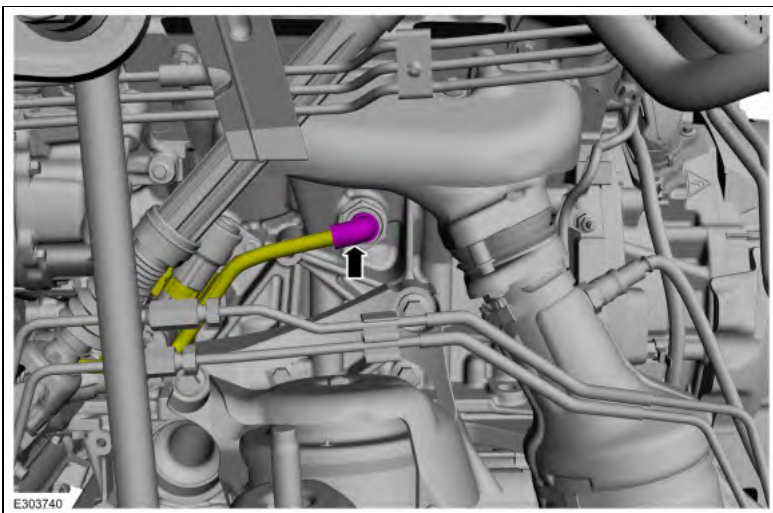

6. Remove the block heater.
Torque: 30 lb.ft (40 Nm)

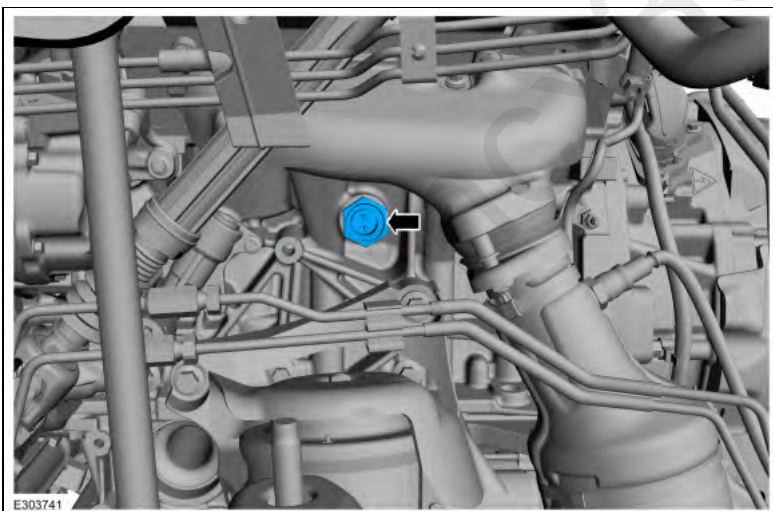

Installation

1. To install, reverse the removal procedure.
2. Fill and bleed the cooling system.
Refer to: Engine Cooling System Draining, Vacuum Filling and Bleeding (303-03D Engine Cooling - 3.3L Duratec-V6 4-cyl Hybrid (BP), General Procedures).