


3. After installation, make sure the A/C compressor belt is correctly seated on all the pulleys.

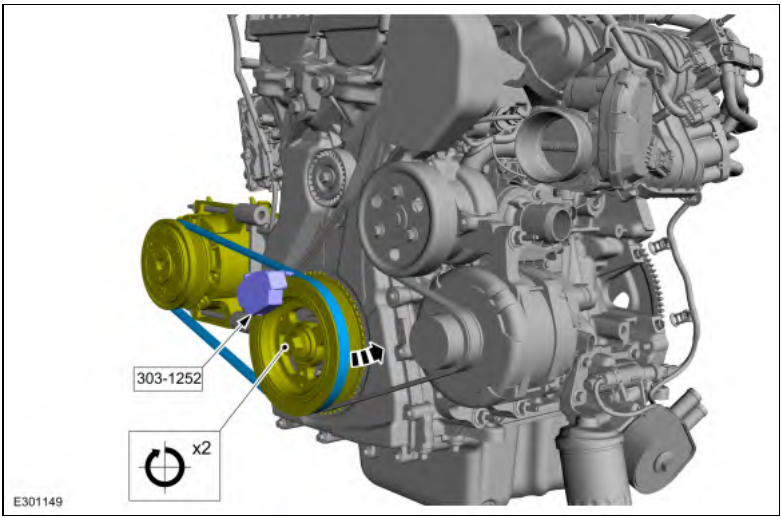