

REMOVAL AND INSTALLATION > HEATED STEERING WHEEL MODULE (HSWM) > REMOVAL

1.



NOTE: This step is only necessary when installing a new component.



NOTE: The PMI process must begin with the current HSWM installed. If the current HSWM does not respond to the diagnostic scan tool, the tool may prompt for As-Built Data as part of the repair.

Using a diagnostic scan tool, begin the PMI process for the HSWM following the on-screen instructions.


2.

Lower the steering column opening trim panel.



3.

Disconnect the HSWM electrical connector.

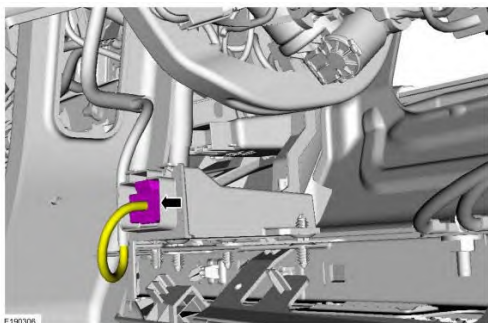

4.