

6.

 **NOTE:** The lock ring flexes open slightly to allow the male fitting to enter the C-lock coupler.

 **NOTE:** The lock ring can be heard as it snaps into the lock position.

Insert the male fitting into the C-lock coupler.

7.

Gently pull on the C-lock coupler to verify it is seated correctly.

GENERAL PROCEDURES > WASHER HOSE REPAIR

Repair

 **NOTE:** This procedure may be carried out on rubber hoses only. If a plastic washer hose is damaged, a new washer hose must be installed.

1.


Locate and verify the damaged washer hose.

2.

Cut the hose cleanly and remove the damaged portion of the washer hose.

Dimension

: 0.5000 in (12.7 mm)

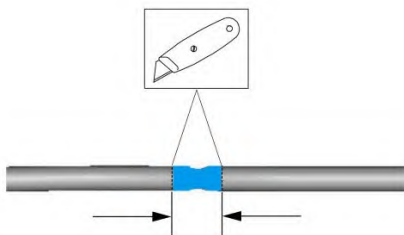

E222505

3.

Install a windshield washer hose adapter between the cut ends of the hose.