

5.

Within 10 seconds of turning the second key to OFF, insert the new, unprogrammed PATS key into the ignition lock cylinder and turn the ignition lock cylinder to RUN (maintain the key in RUN for approximately 6 seconds).

6.



NOTE: A maximum of 8 keys can be programmed into the vehicle.

Repeat steps 1-5 to program additional keys.

REMOVAL AND INSTALLATION > PASSIVE ANTI-THEFT SYSTEM (PATS) TRANSCIVER > REMOVAL

1.

Remove the steering column shrouds. REFER to: Steering Column Shrouds .


2.

1.

Disconnect the electrical connector.

2.

Detach the tabs and remove the PATS transceiver.

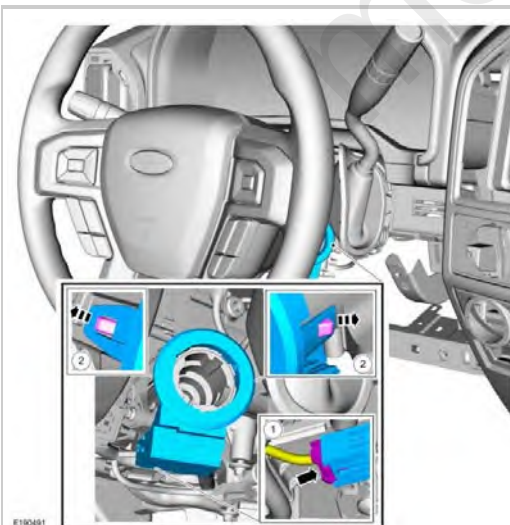

REMOVAL AND INSTALLATION > PASSIVE ANTI-THEFT SYSTEM (PATS)