

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > HIGH MOUNTED STOPLAMP > REMOVAL


All vehicles

1.

Lower the rear of the headliner. Refer to: Headliner - Lowering - Regular Cab . Refer to: Headliner - Lowering - SuperCab . Refer to: Headliner - Lowering - SuperCrew .

2.

Disconnect the center high mounted stoplamp electrical connector.

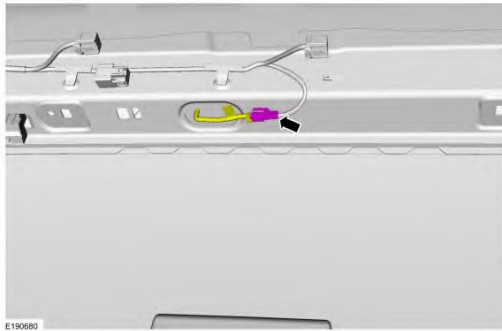

3.

Remove the screws and the center high mounted stoplamp assembly.



Vehicles equipped with incandescent bulbs

4.

Remove the screws and position the high mounted stoplamp aside.