

Materials

Name	Specification
Motorcraft® Orange Concentrated Antifreeze/Coolant VC-3-B	WSS-M97B44-D

REMOVAL AND INSTALLATION > COOLANT INLET PIPE > REMOVAL

1.

Remove the thermostat housing. REFER to: Thermostat Housing .


2.



NOTE: Intake manifold removed for clarity.

Remove the coolant pipe.

Discard the O-ring seals.

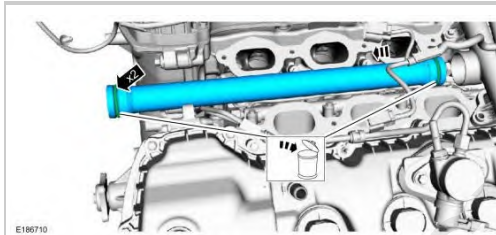

REMOVAL AND INSTALLATION > COOLANT INLET PIPE > INSTALLATION

1.



NOTE: Intake manifold removed for clarity.

Install new O-ring seals and lubricate them with clean engine coolant.

Material

: Motorcraft® Orange Concentrated Antifreeze/Coolant / VC-3-B (WSS-M97B44-D)

Install the coolant pipe.