


: 18 lb.ft (24 Nm)

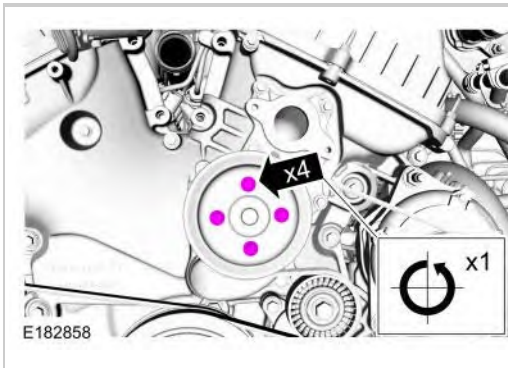


8.

Position the degas bottle back and tighten the bolts.

Torque

: 62 lb.in (7 Nm)

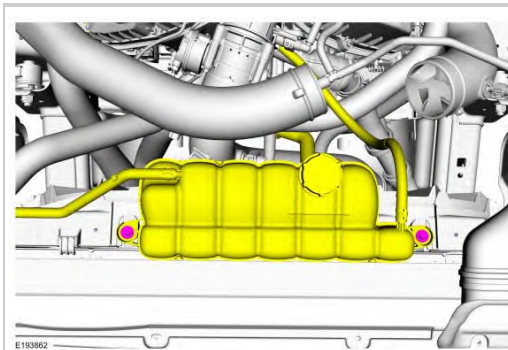

9.

Install the air cleaner outlet pipe. REFER to: AIR CLEANER OUTLET PIPE .

10.

Fill and bleed the cooling system. REFER to: Cooling System Draining and Vacuum Filling .

REMOVAL AND INSTALLATION > COOLING FAN MOTOR AND SHROUD > REMOVAL

1.

With the vehicle in NEUTRAL, position it on a hoist. REFER to: Jacking and Lifting - Overview .

2.


Remove the air cleaner outlet pipe. REFER to: AIR CLEANER OUTLET PIPE .

3.

Remove the air cleaner. REFER to: AIR CLEANER .


4.

Disconnect the electrical connector and detach the wiring harness retainer. Disconnect the quick connect coupling. REFER to: QUICK RELEASE COUPLING .

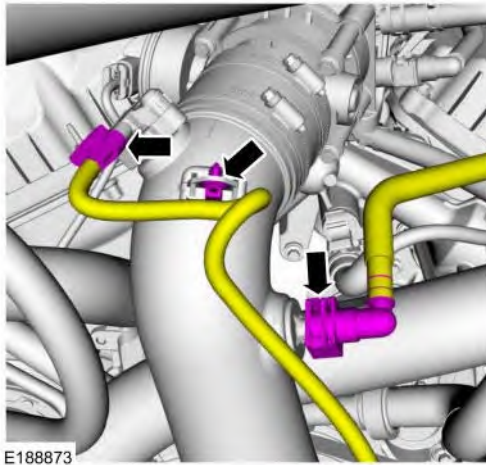

5.

Loosen the clamps and remove the CAC-to-TB (throttle body) pipe.

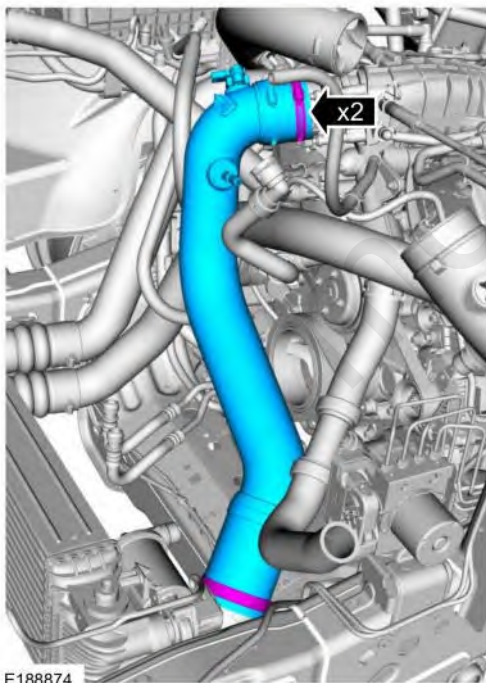


6.

Remove the bolts and position the degas bottle aside.


Torque

: 62 lb.in (7 Nm)

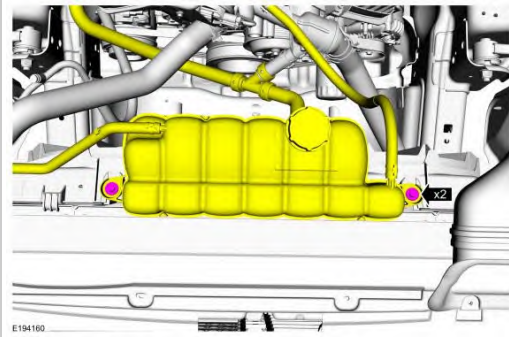


7.

Disconnect the cooling fan electrical connectors.

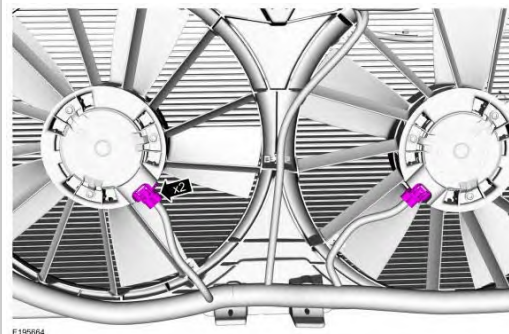

8.

Detach the pin-type retainers and harness retainer that secure the wiring harness to the cooling fan shroud.

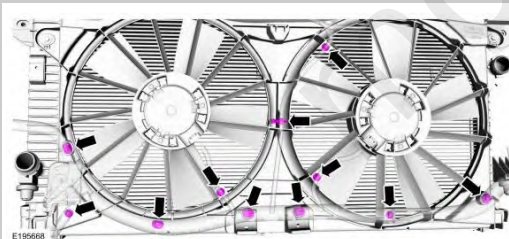

9.

Position the wiring harness aside.

