

A-Pillar Trim Panel

Special Tool(s) / General Equipment

Interior Trim Remover

Removal

NOTE: *LH side shown, RH side similar.*

NOTE: *Removal steps in this procedure may contain installation details.*

1. Position the assist handle covers aside.
Use the General Equipment: Interior Trim Remover




2. Remove the A-pillar trim panel.

1. Remove the bolts.

Torque: 55 lb.in (6.2 Nm)

2. Release the retainer.
3. If equipped, disconnect the speaker electrical connector.
4. Release the clips and remove the A-pillar trim panel.

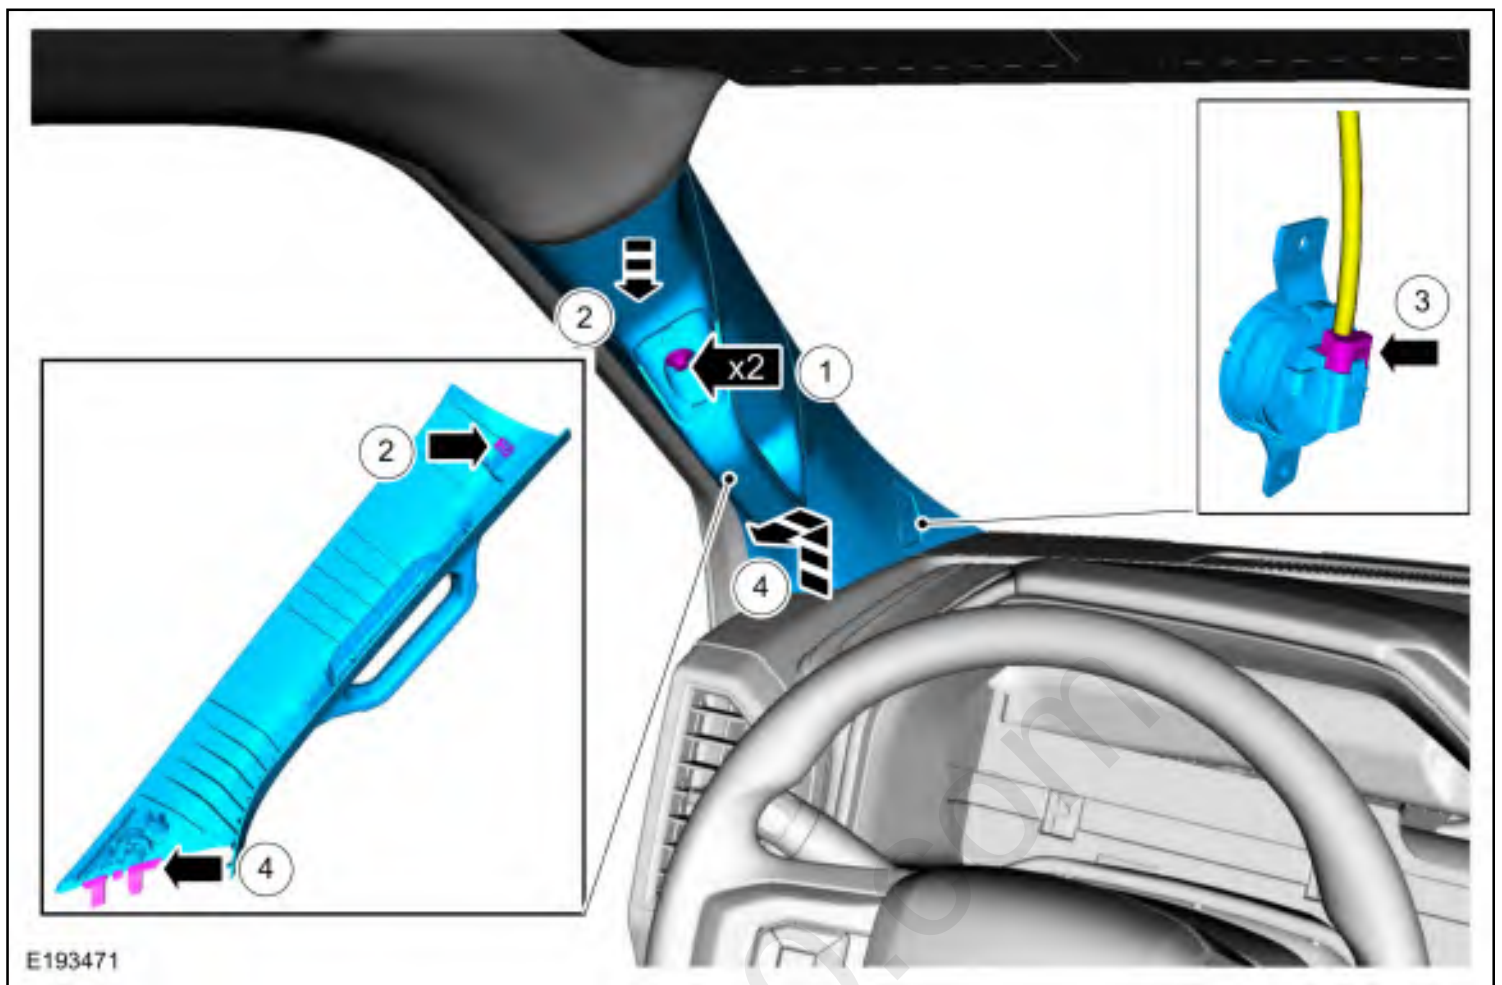

Installation

1. To install, reverse the removal procedure.


Copyright © 2018 Ford Motor Company

Headliner - Lowering - SuperCab

Base Part Number: Base Part Number: 5451916

1. Remove the following items:
 1. On both sides, remove the A-pillar trim panels.
Refer to: [A-Pillar Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
 2. On both sides, remove the B-pillar trim panels.
Refer to: [B-Pillar Trim Panel - SuperCab](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. **NOTE:** *LH side shown, RH side similar.*

On both sides, release the clips and remove the upper striker covers.

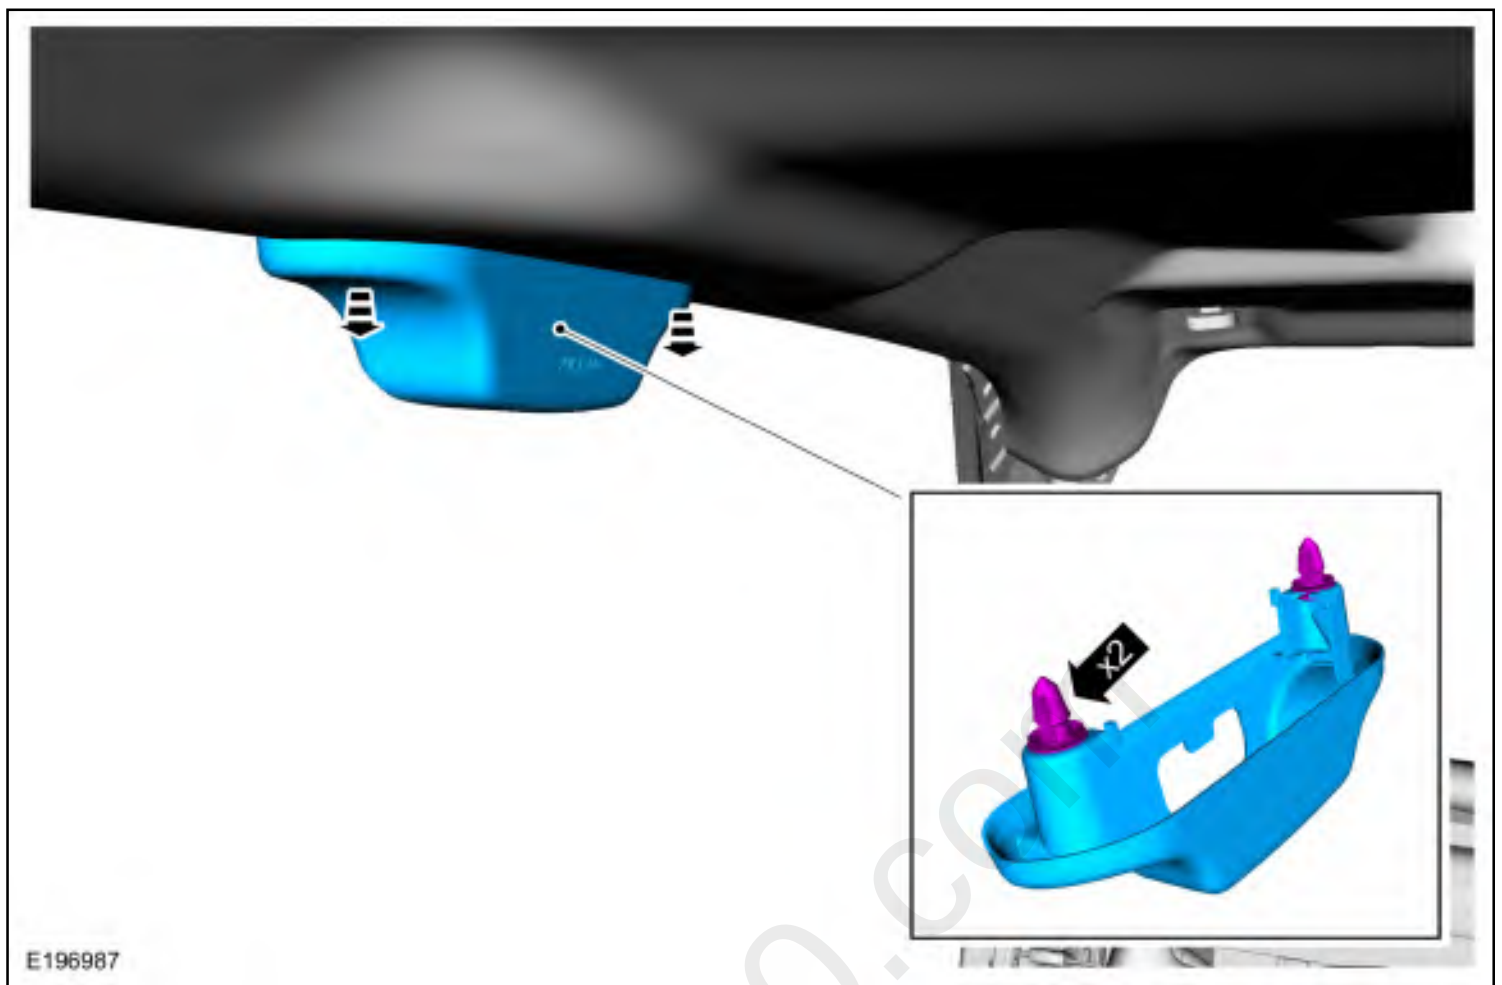


3. **NOTE:** *LH side shown, RH side similar.*

On both sides.

Remove the sun visor.


1. Remove the retainer cover.
2. Remove the retainer.
3. Remove the sun visor.
4. If equipped.
Disconnect the electrical connector.

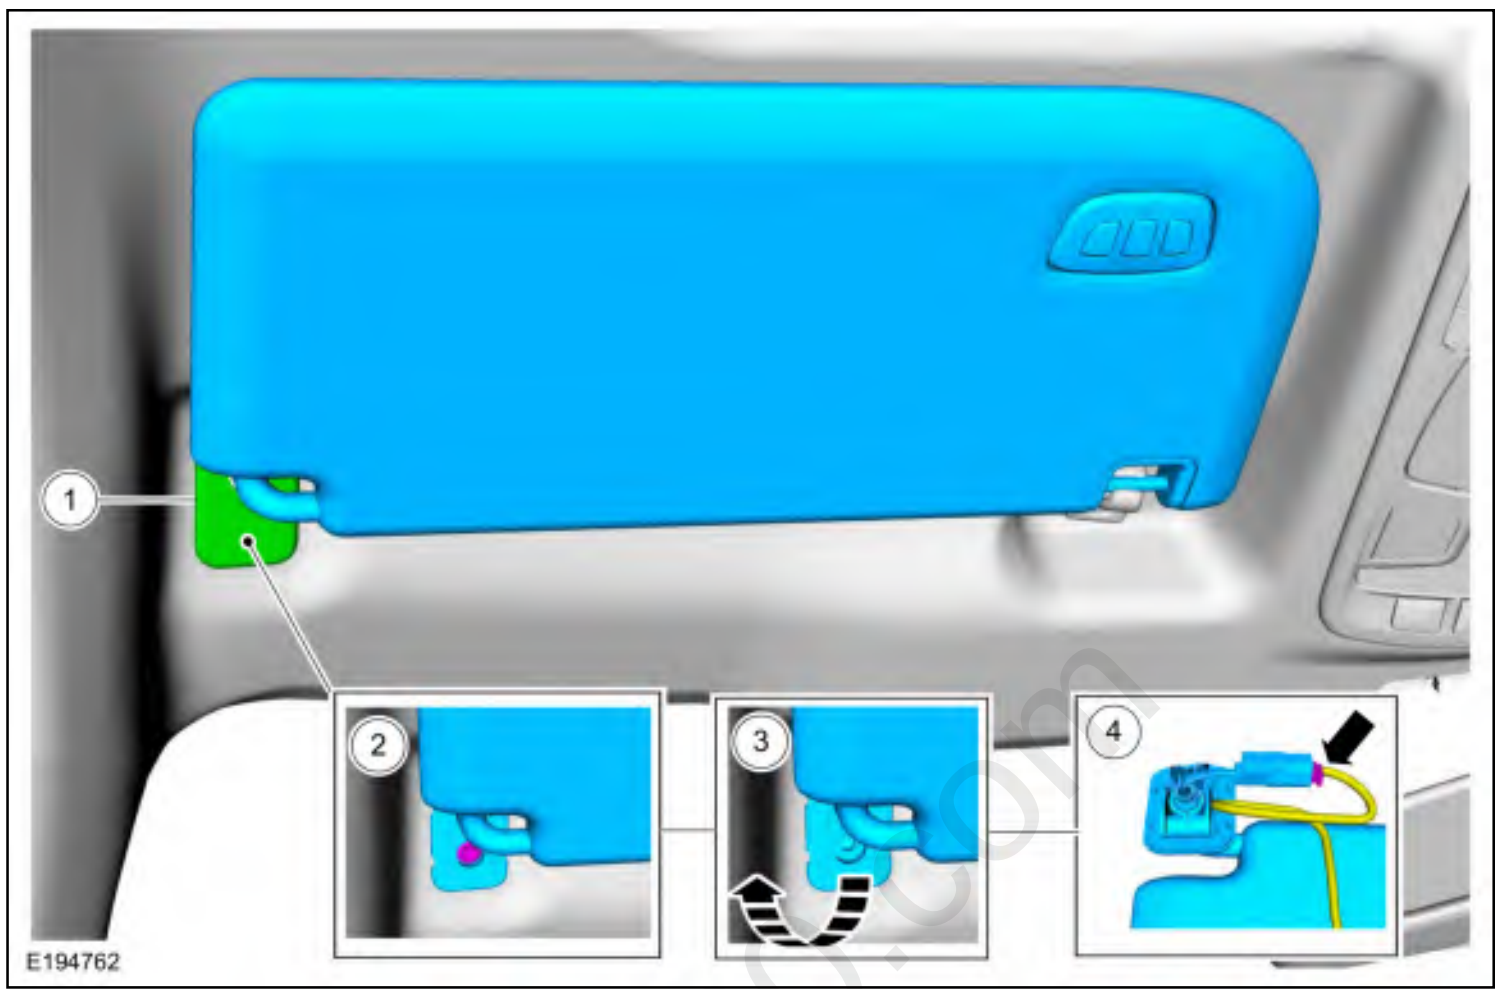


4. **NOTE:** *LH side shown, RH side similar.*

On both sides.


Remove the retainers and the sun visor clips.

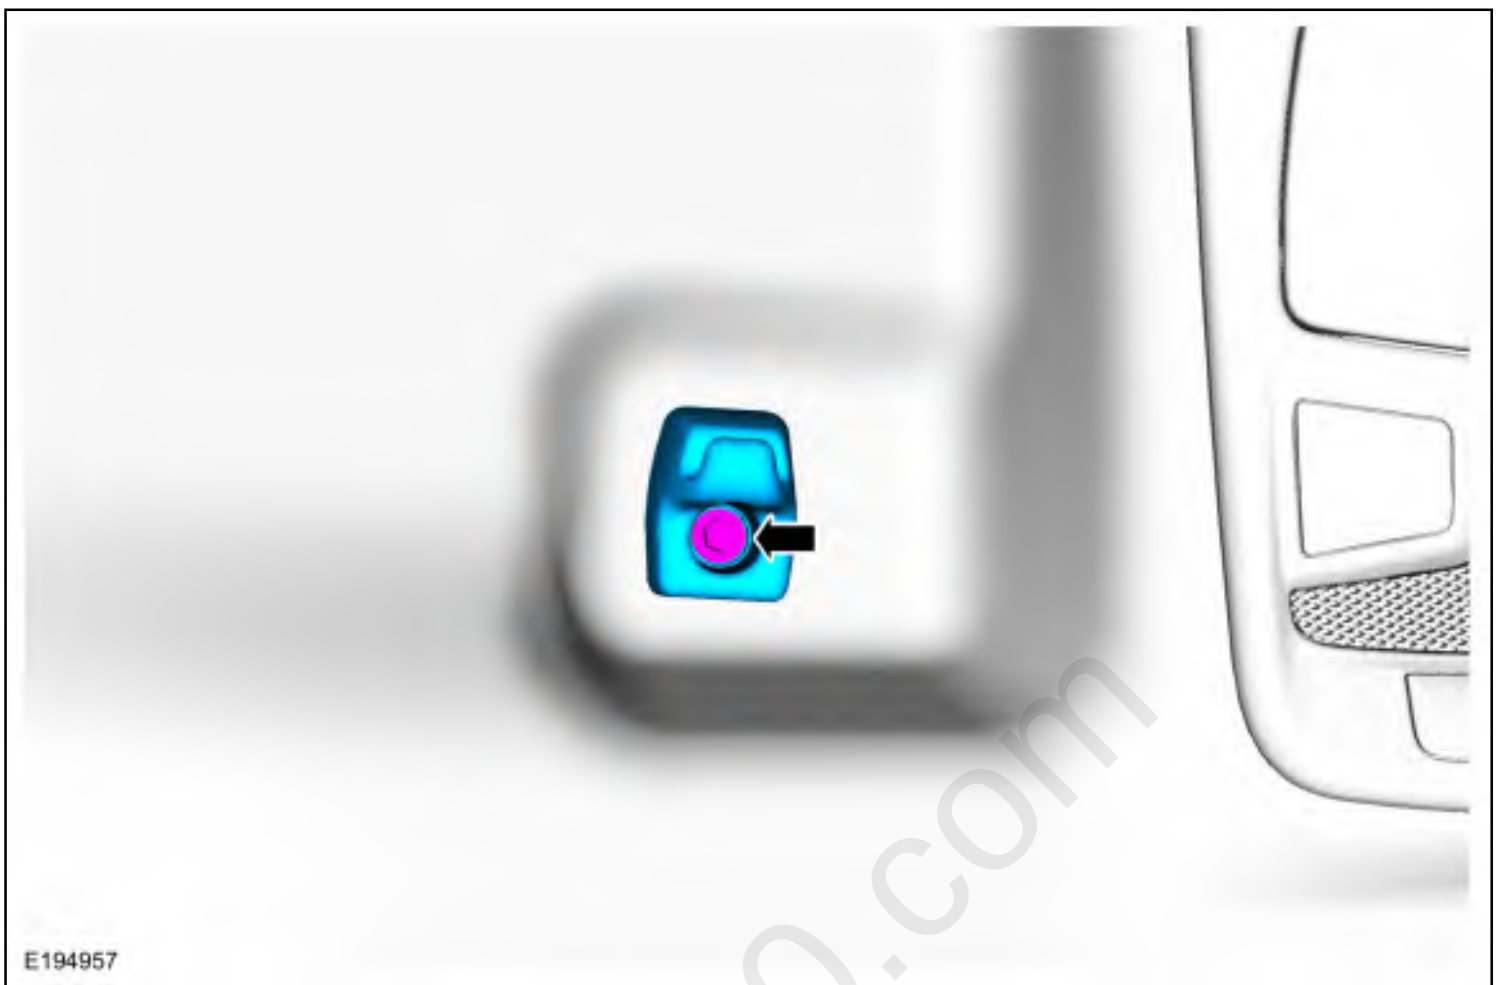


5. If equipped.
Release the clips and remove the rain sensor covers.

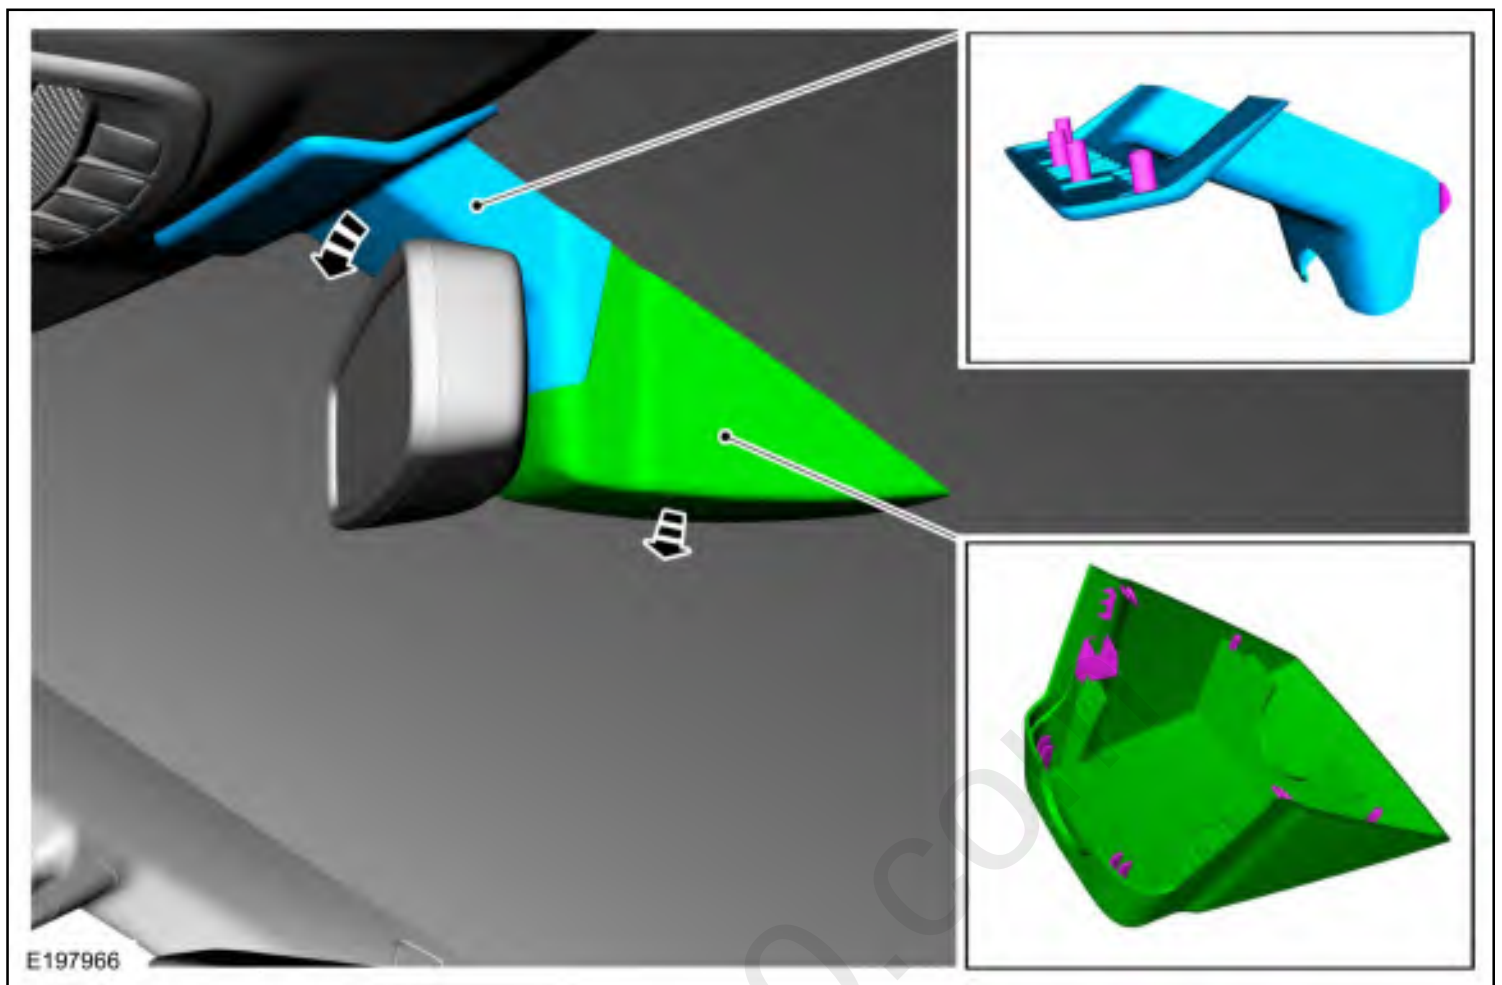

6. If equipped.
Disconnect the rear view mirror electrical connector.

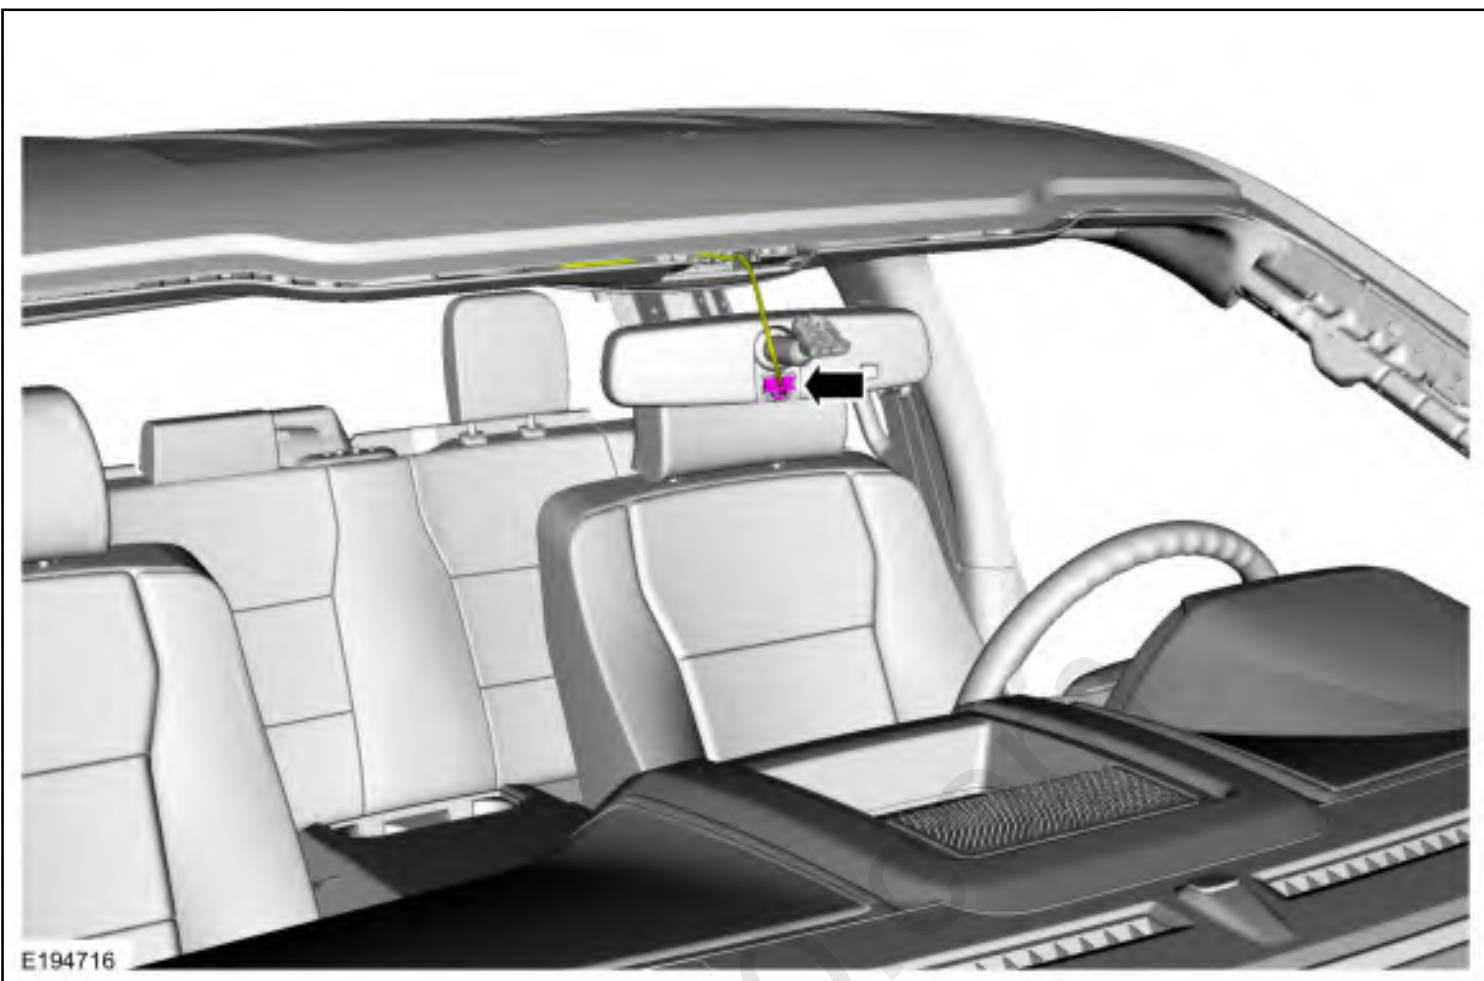


7. If equipped.
Disconnect the rain sensor electrical connector.

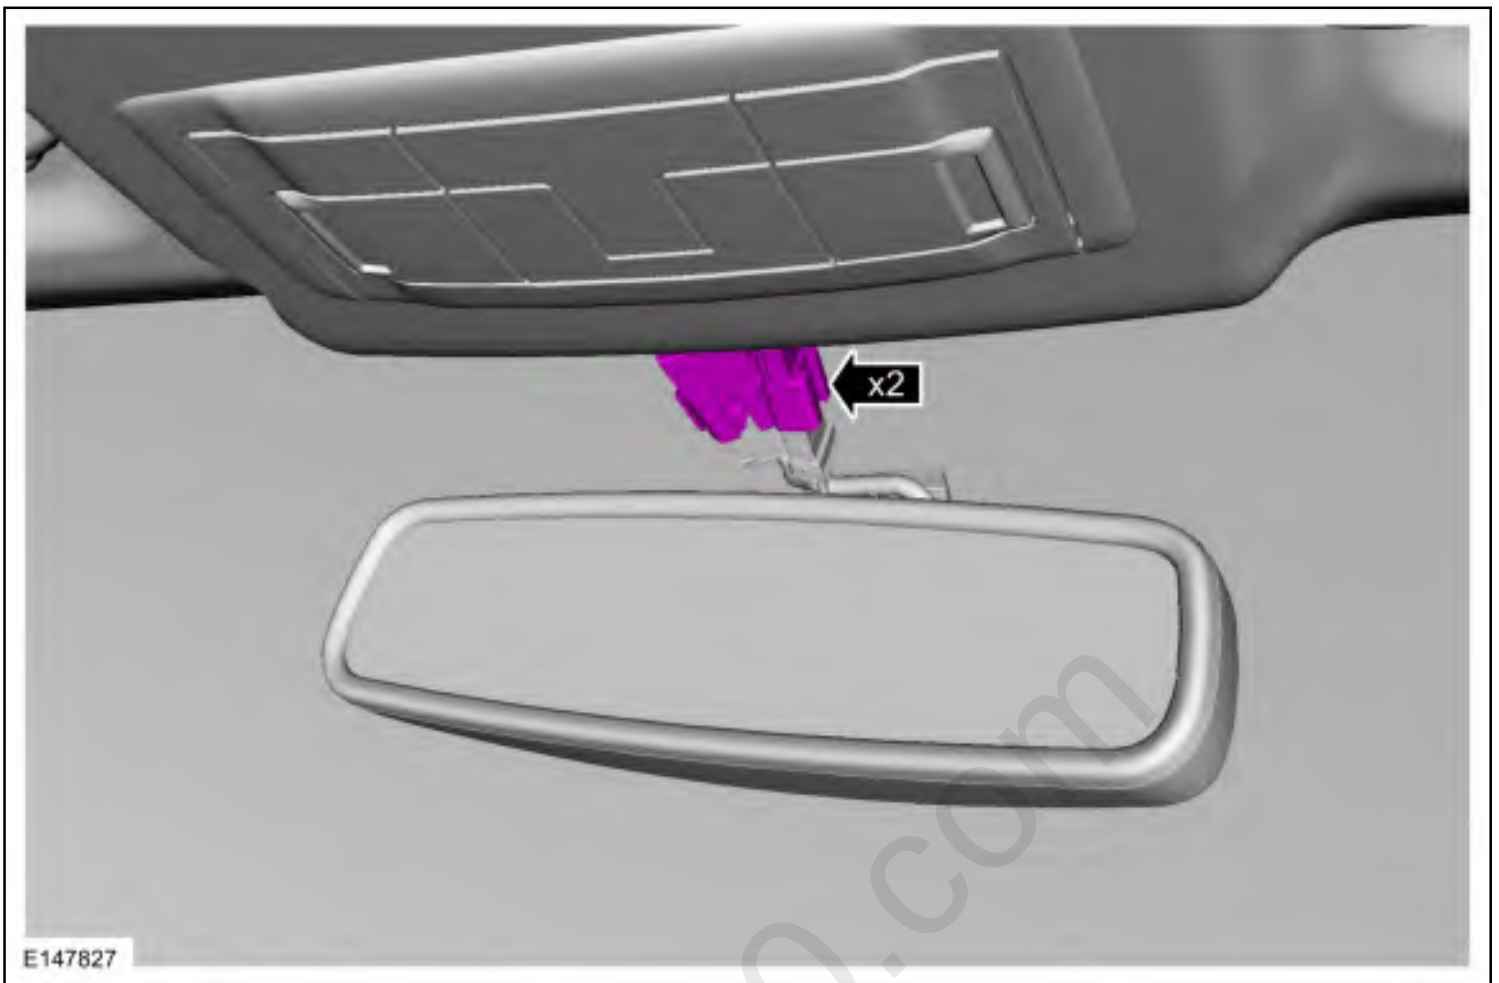


8. On both sides.

Remove the garment hooks.


1. Open the garment hook retainer cover.
2. Remove the retainer and the garment hook.

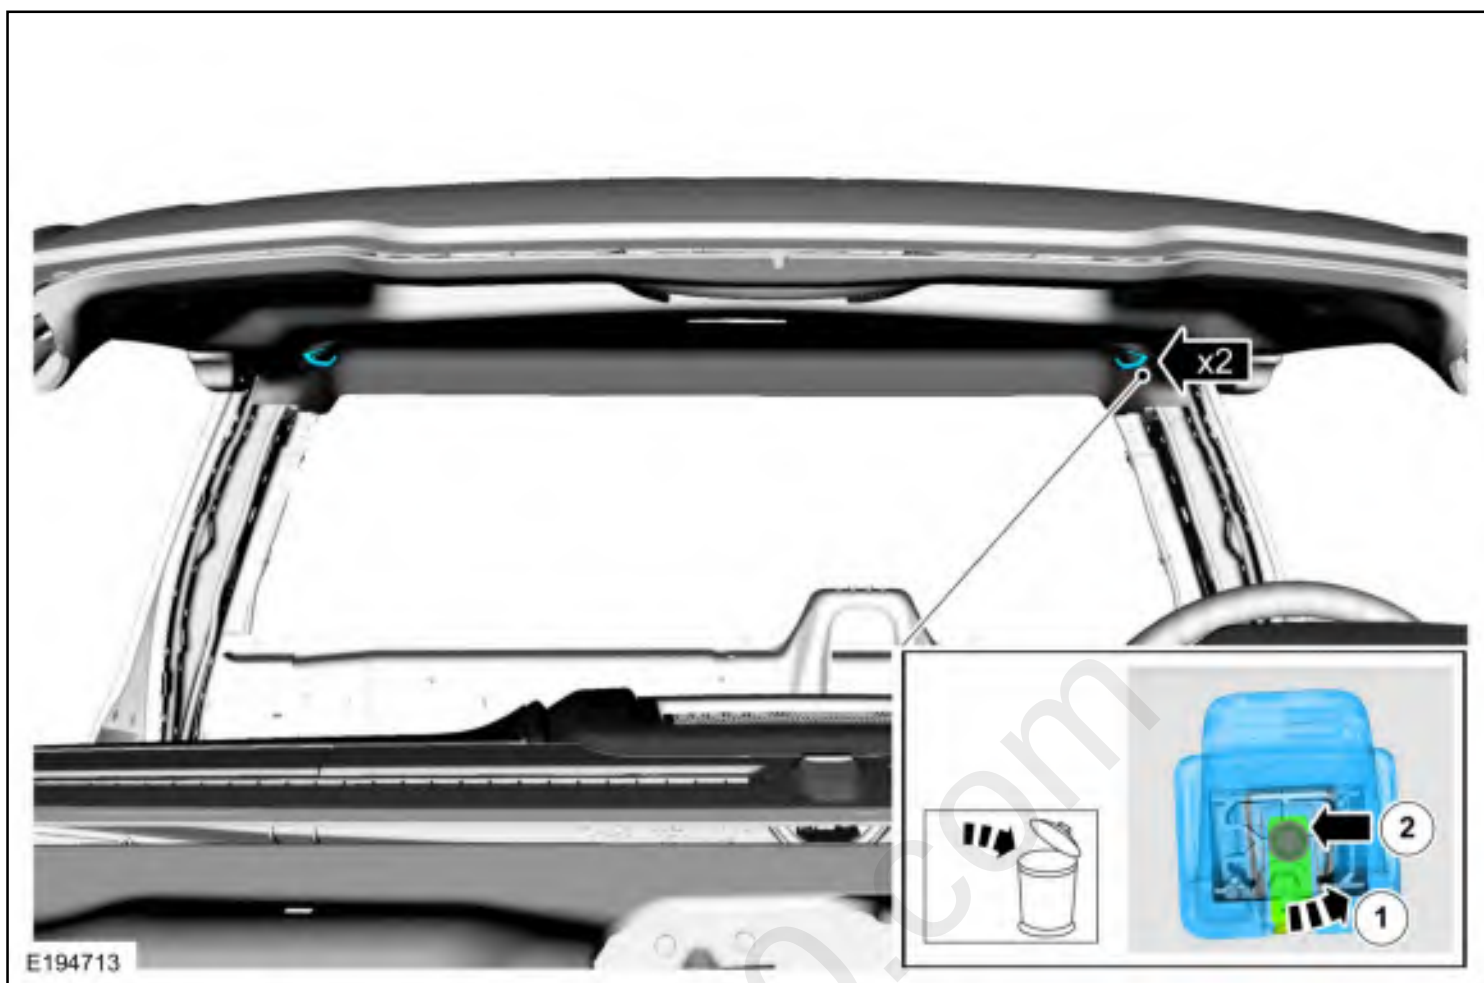

9. Disconnect the headliner wiring harness connectors and position aside the wiring harness.

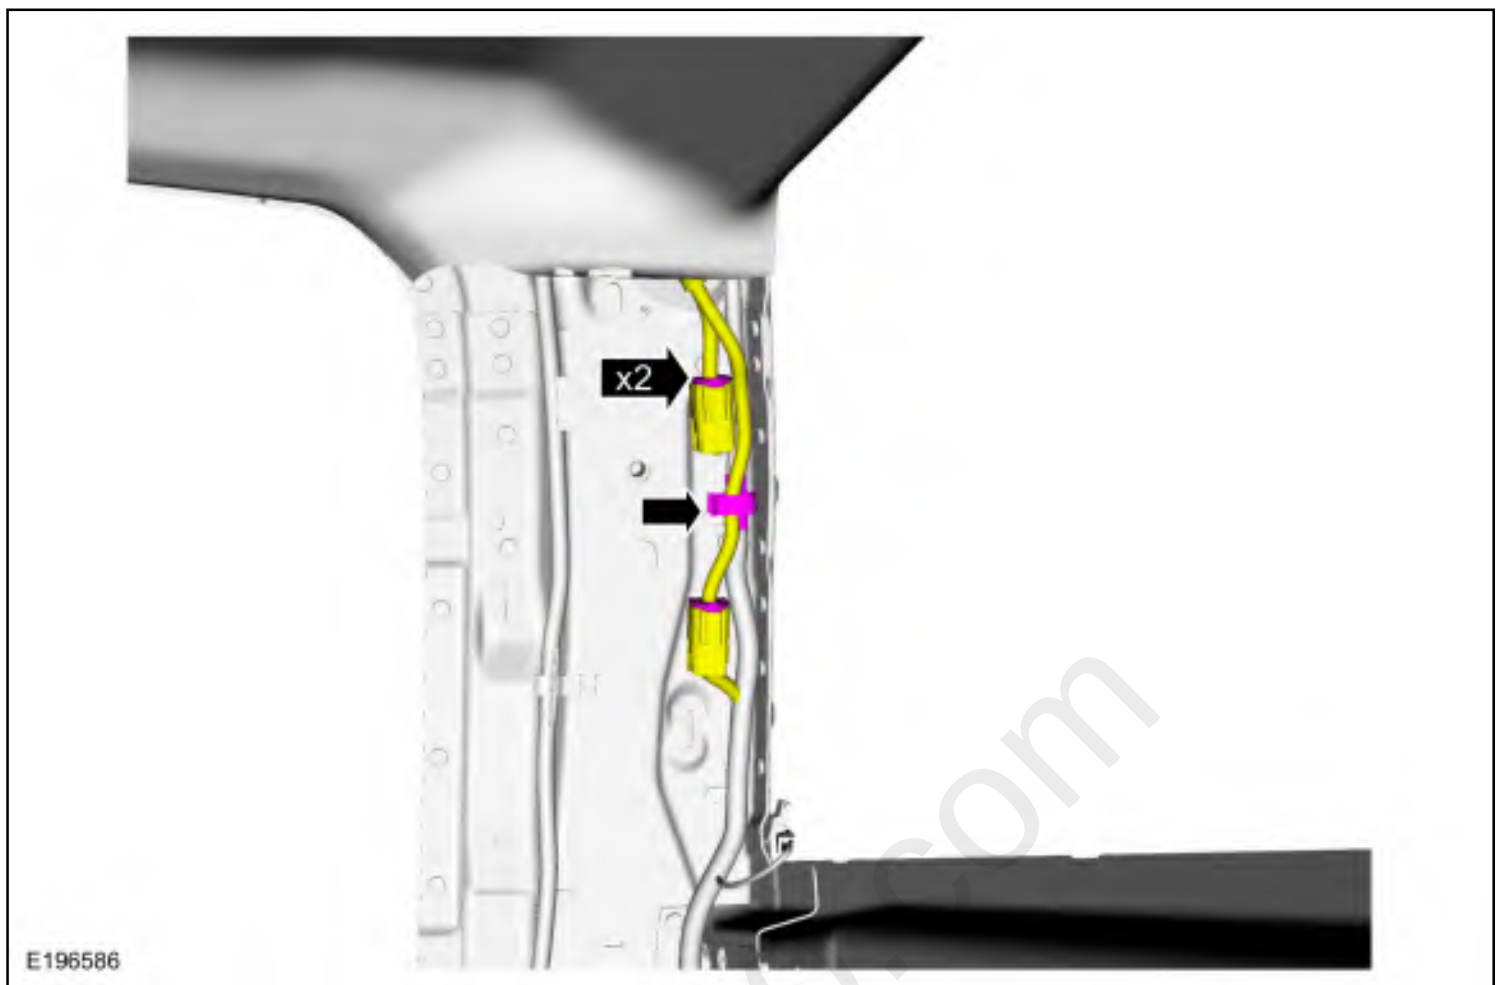

10. Release the clips and lower the headliner.

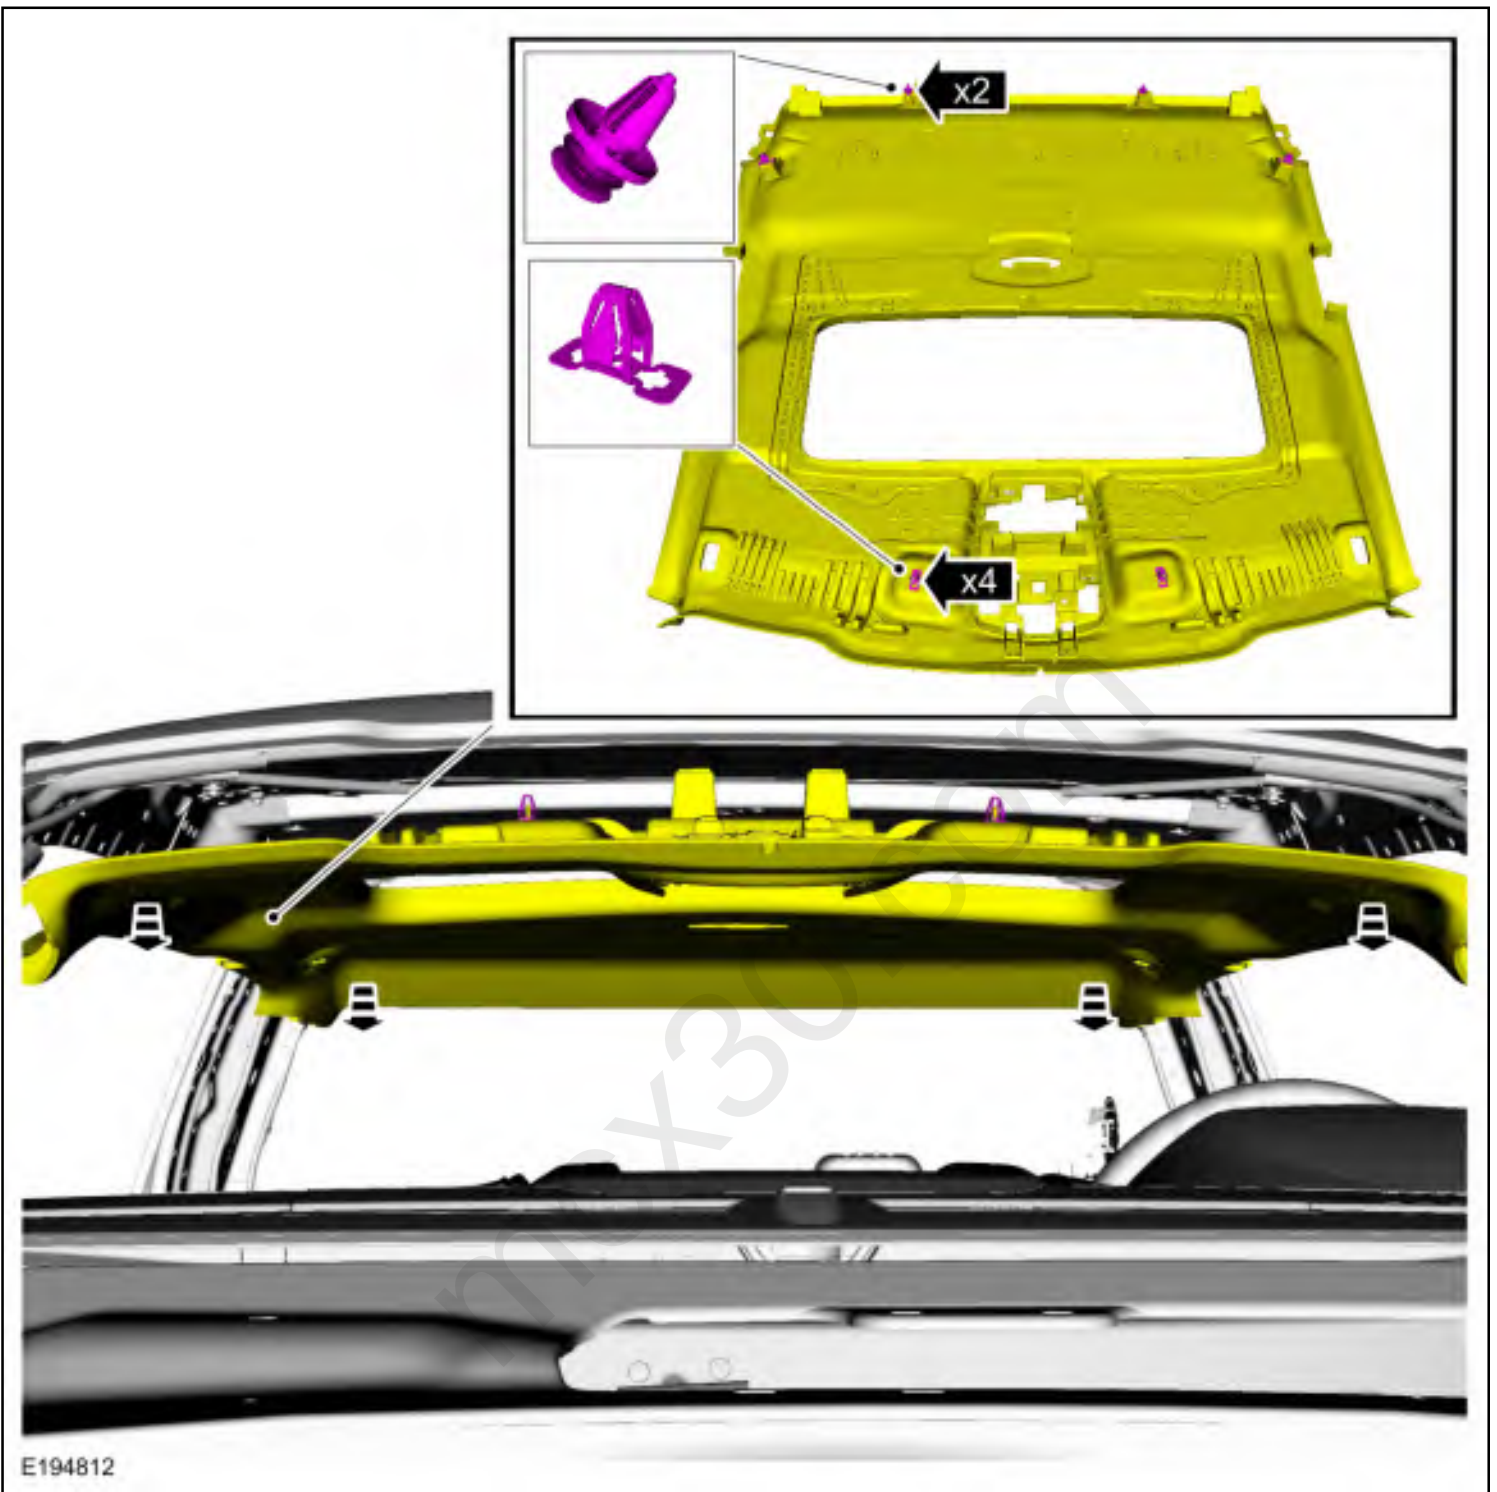

Headliner - Regular Cab

Base Part Number: Base Part Number: 5451916

Materials

Name	Specification
3M™ Super-Fast Repair Adhesive 04747	-


Removal

1. Remove the following items:
 1. On both sides, remove the A-pillar trim panels.
Refer to: [A-Pillar Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
 2. On both sides, remove the B-pillar trim panels.
Refer to: [B-Pillar Trim Panel - Regular Cab](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

2. **NOTE:** *LH side shown, RH side similar.*


On both sides, remove the sun visor.

1. Remove the retainer cover.
2. Remove the retainer.
3. Remove the sun visor.
4. If equipped, disconnect the electrical connector.

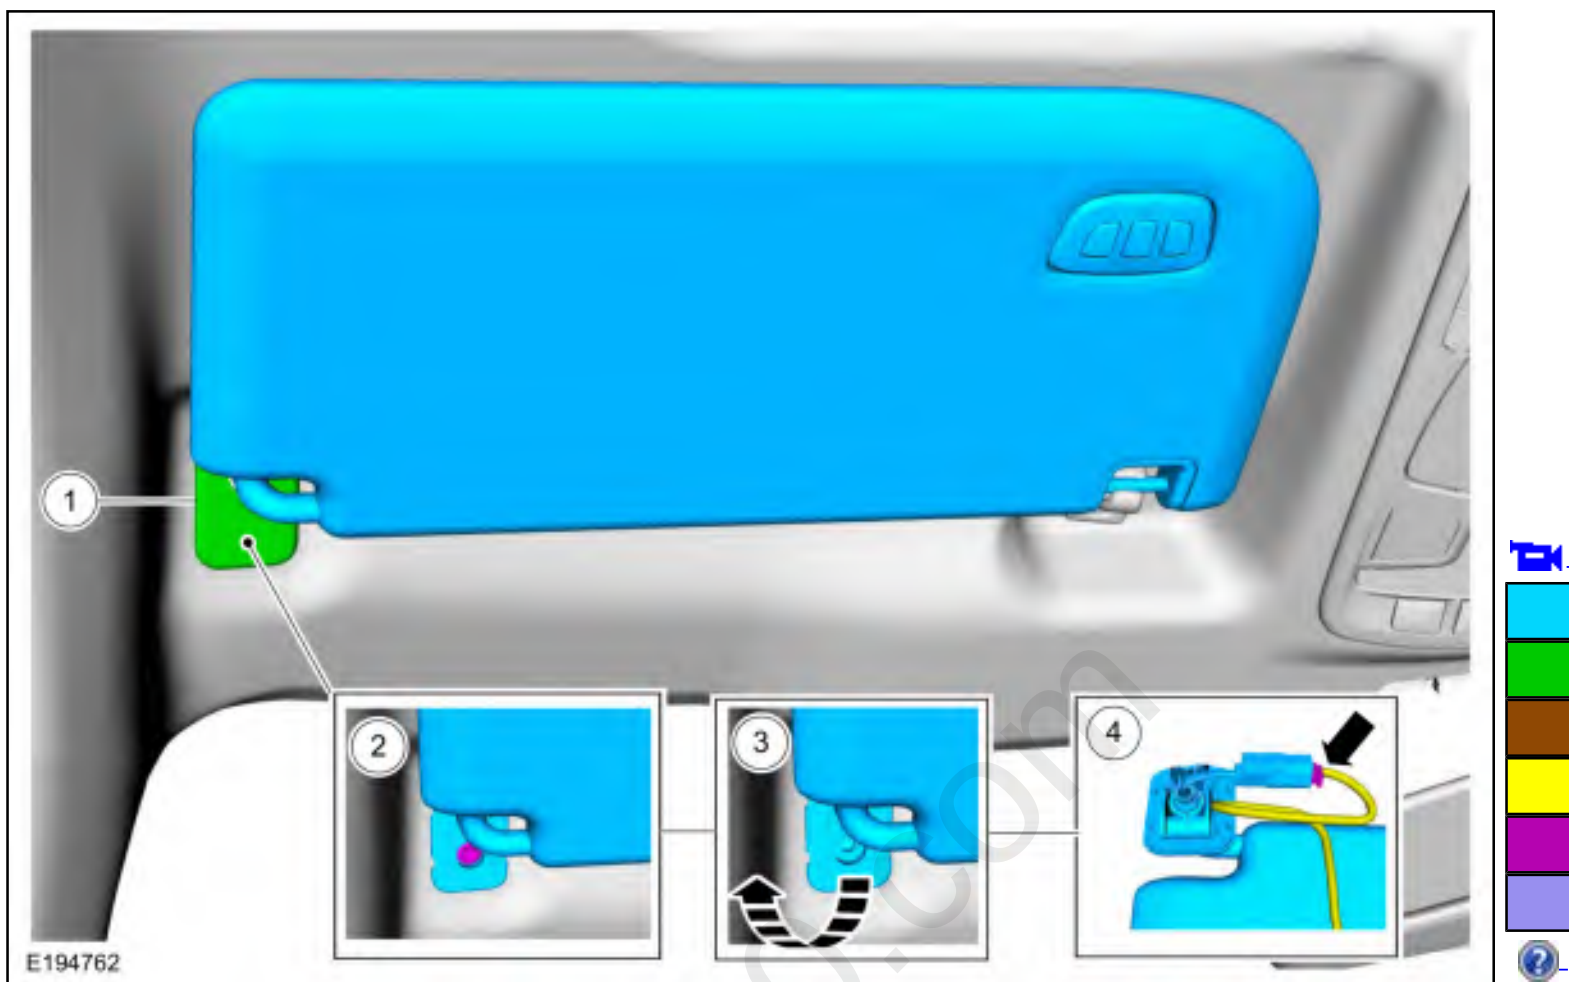

3. **NOTE:** *LH side shown, RH side similar.*


On both sides, remove the retainers and the sun visor clips.

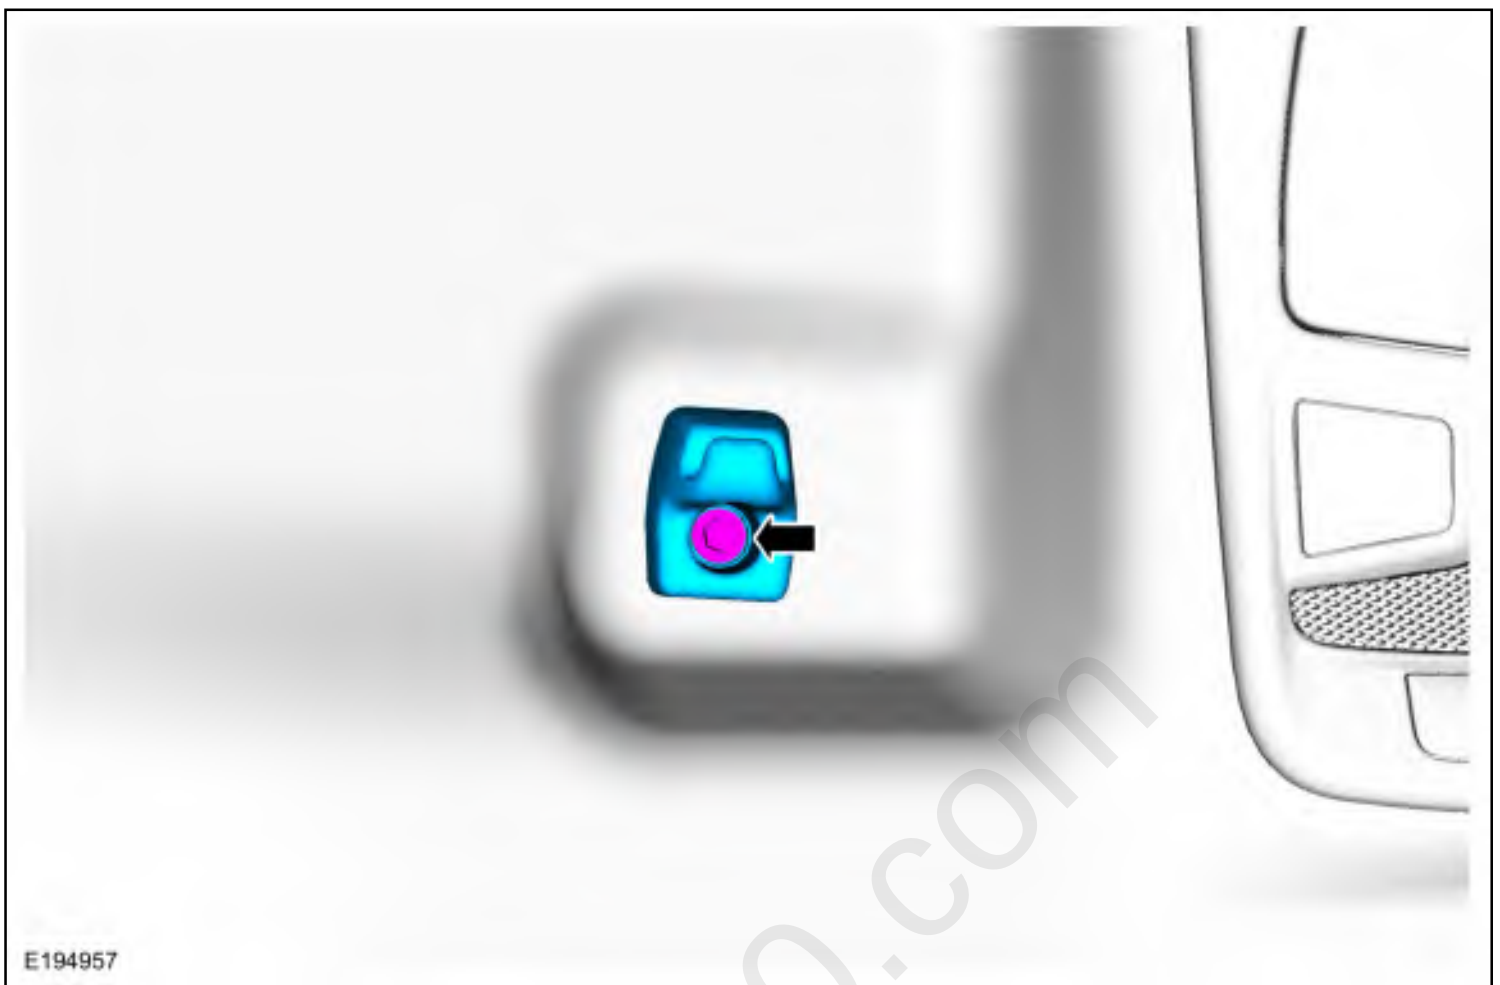


4. If equipped, disconnect the rear view mirror electrical connector.




5. On both sides, remove and discard the garment hooks.
 1. Open the garment hook retainer cover.
 2. Remove the retainer and the garment hook.

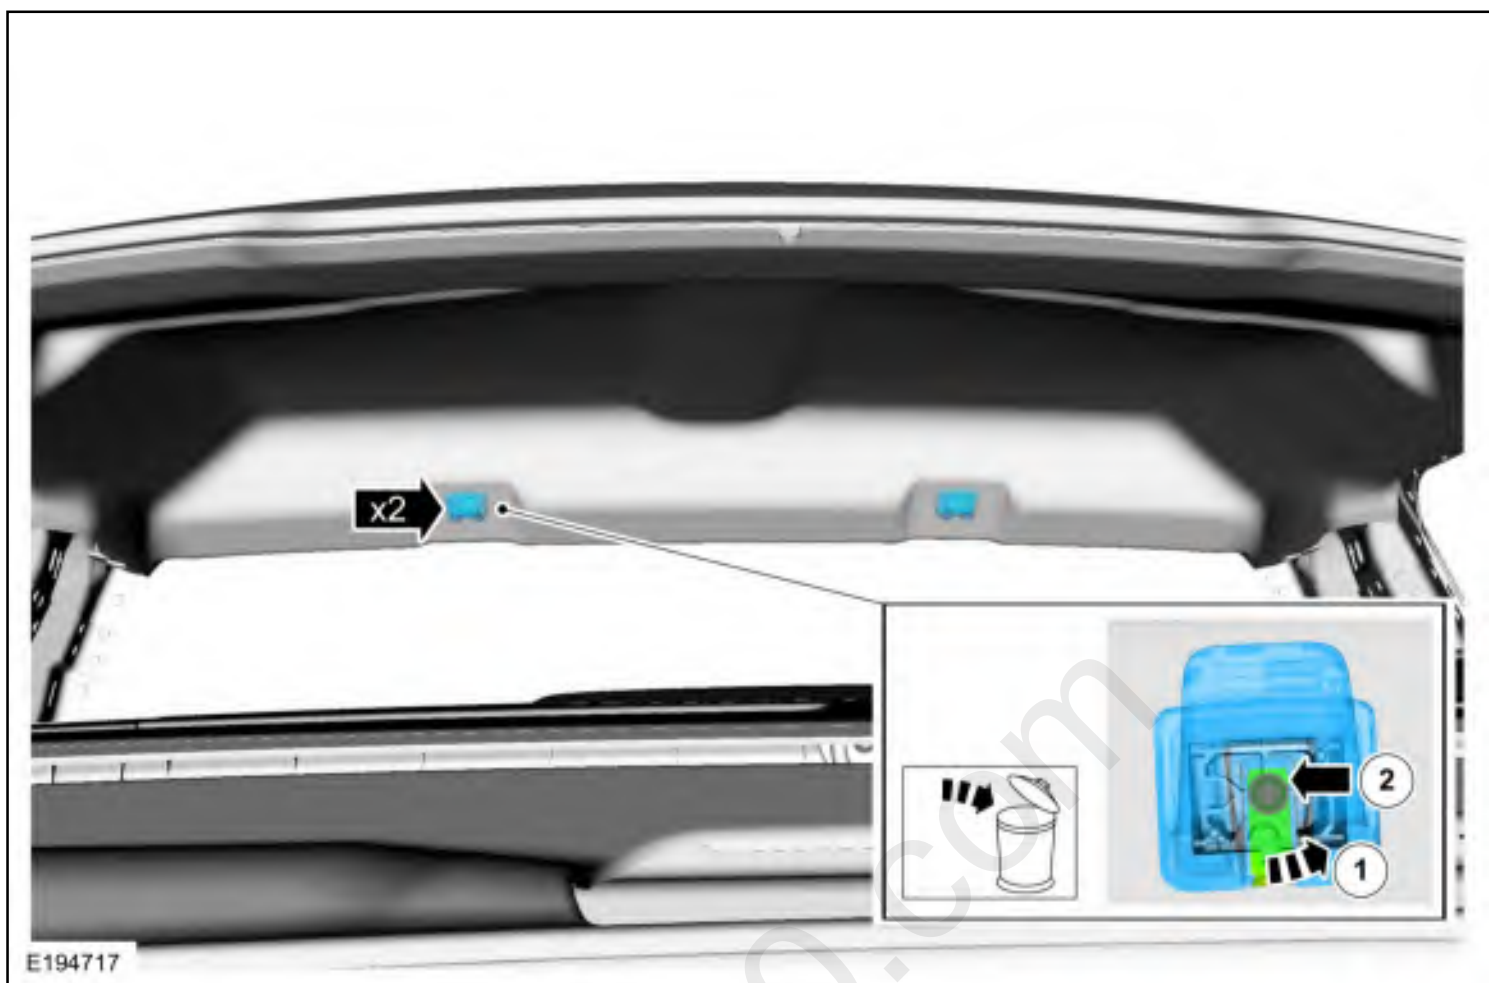


6. Disconnect the headliner wiring harness connectors and position aside the wiring harness.

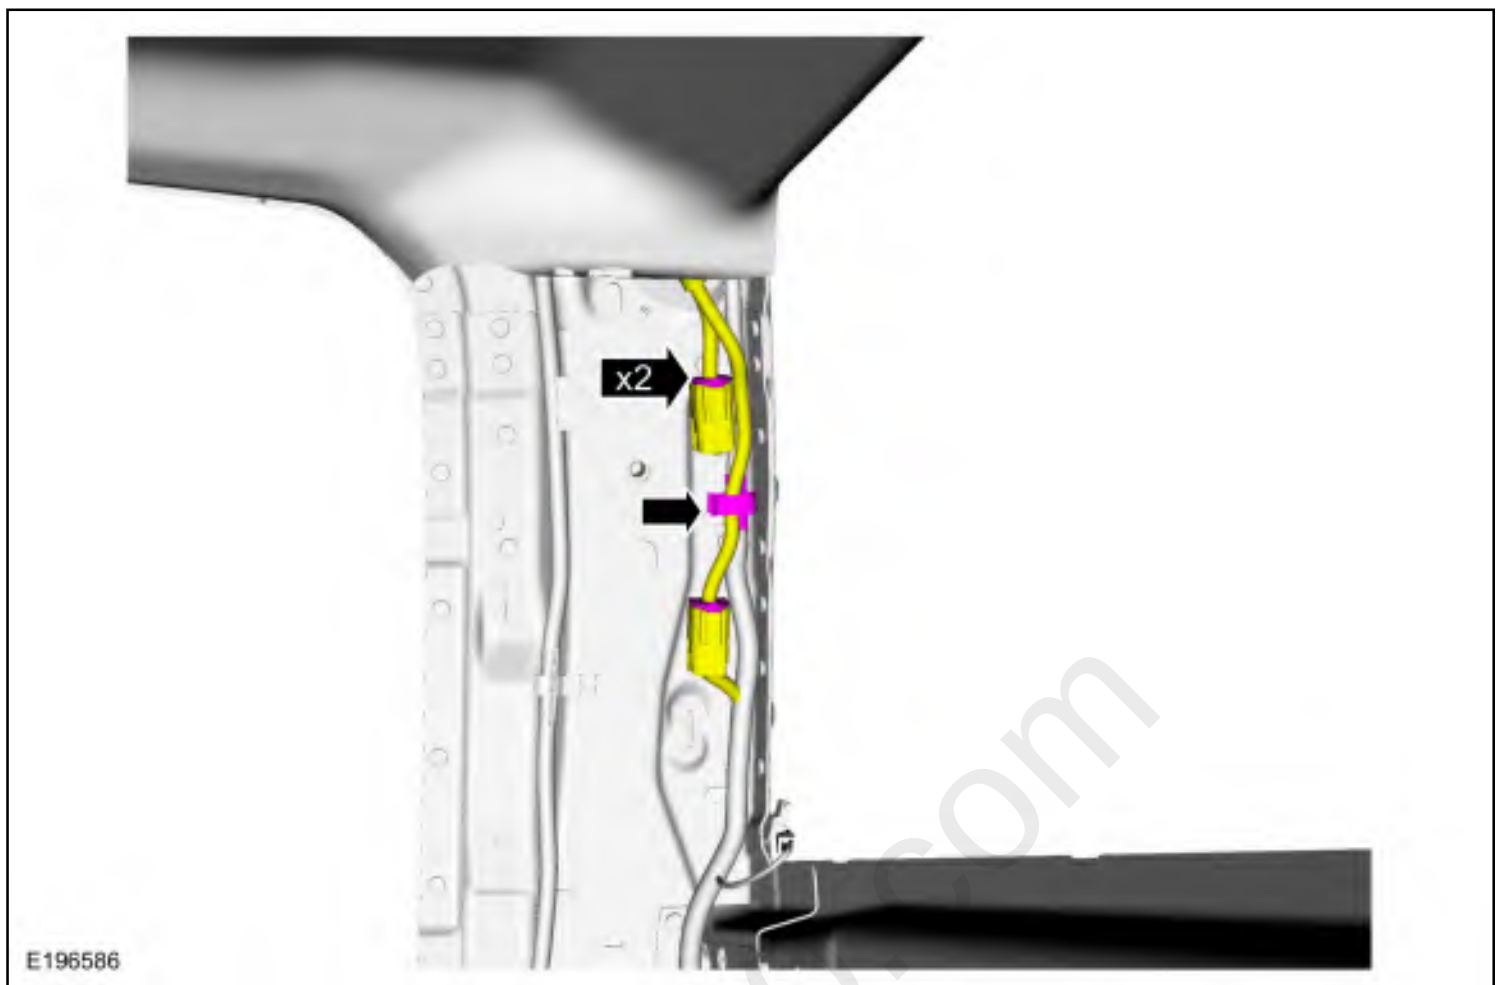

7. Release the clips and lower the headliner.

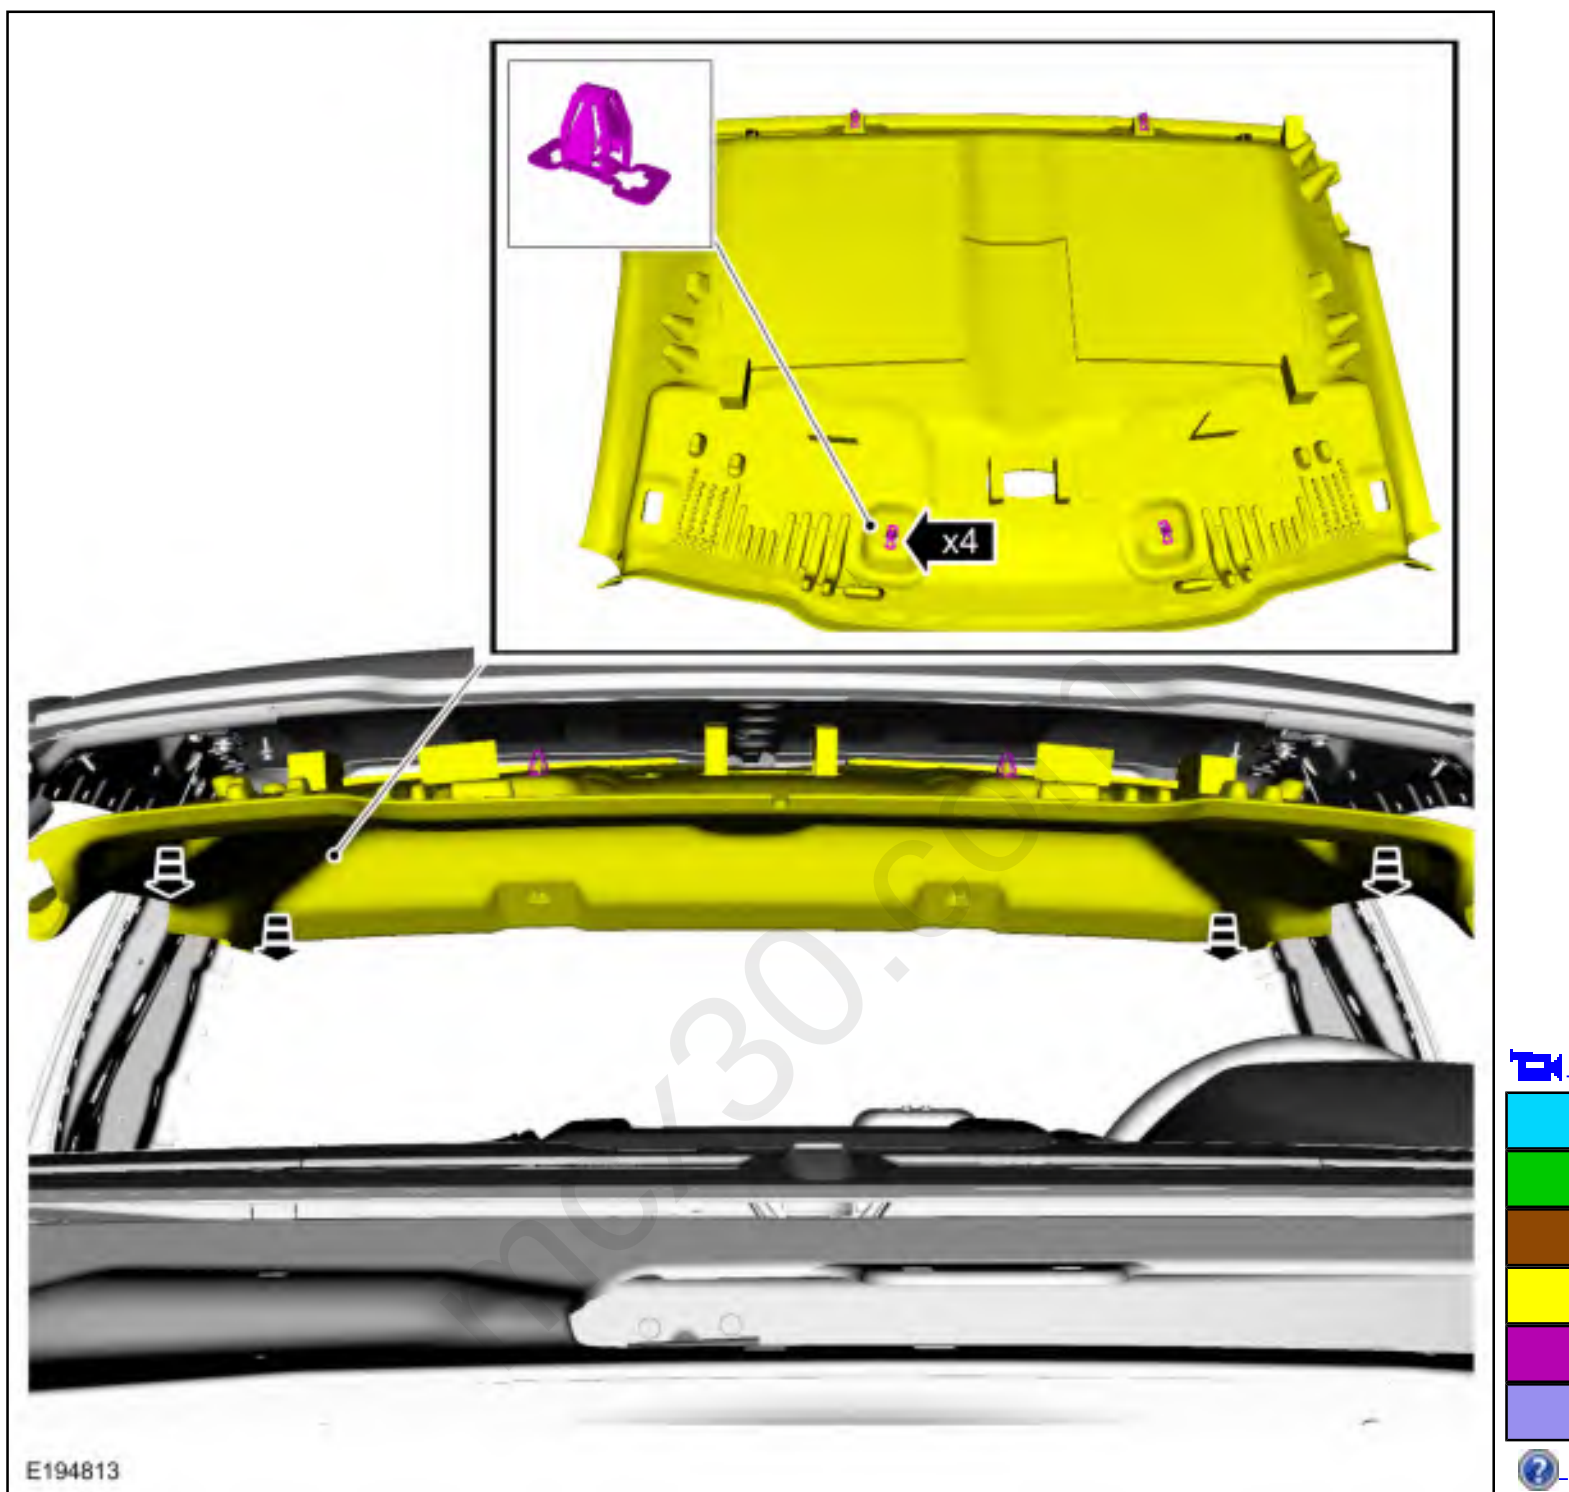

8. Remove the headliner.

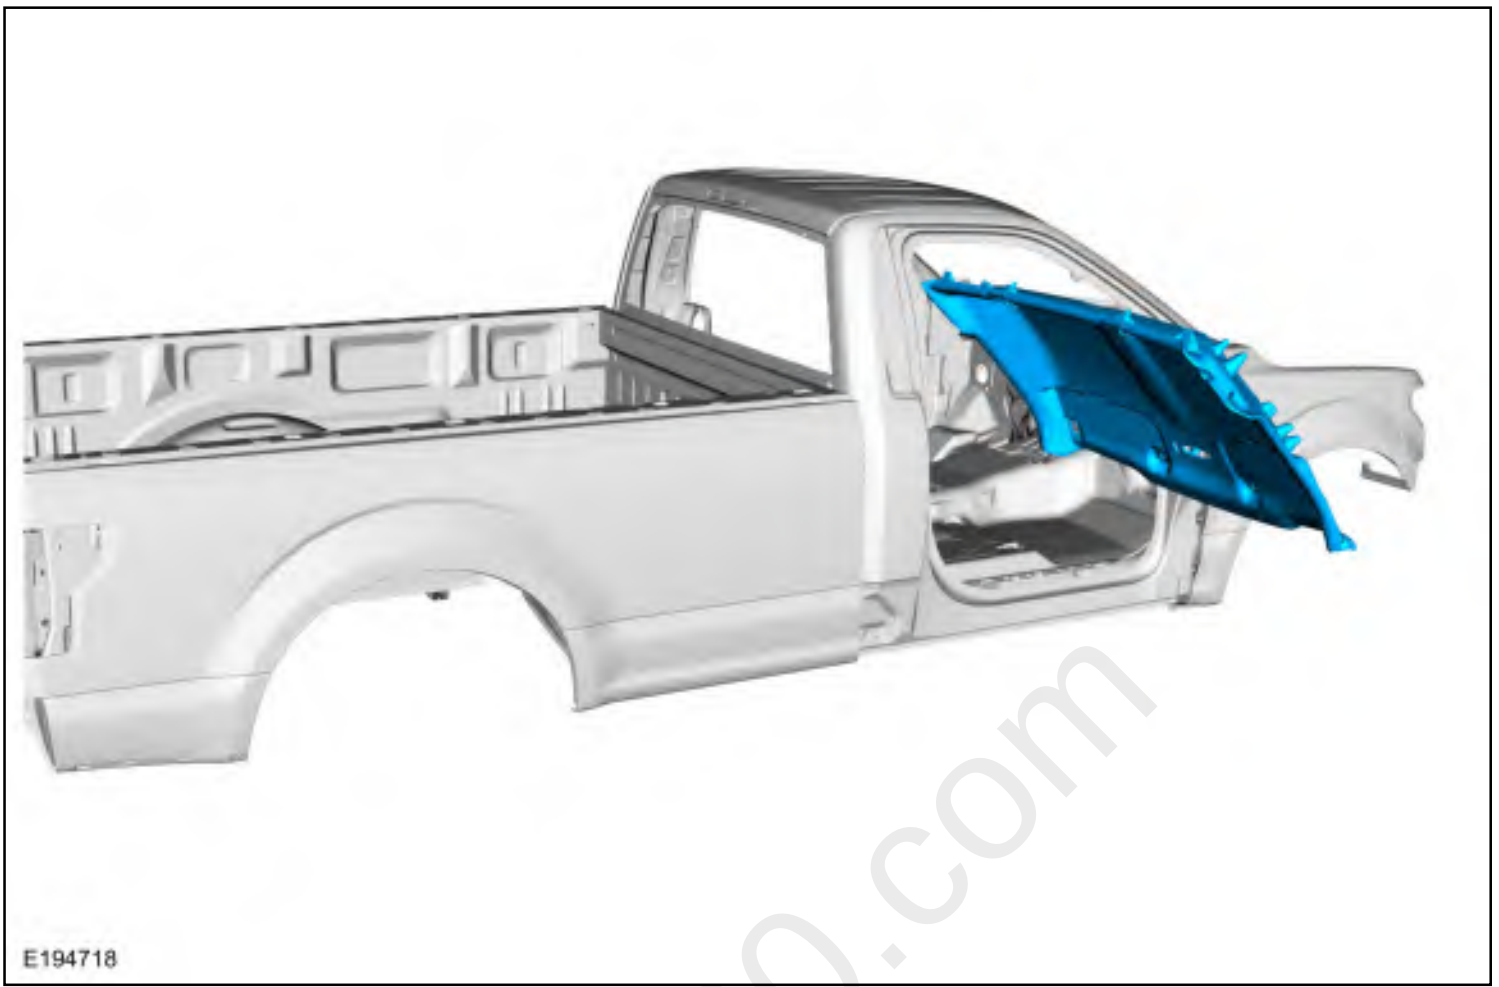

Installation

1. **NOTE:** *These steps are only necessary when installing a new component.*

NOTE: *When transferring the headliner harness to a new headliner note the location of each electrical connector during removal and maintain those locations when transferring the harness. If equipped with noise cancellation the microphone connectors are the same but are not interchangeable and must maintain their original locations for the system to operate correctly.*

NOTE: *Obtain the specified adhesive commercially. Depending on the headliner and optional wire harness(es), the purchase of multiple tubes is suggested.*

1. Using tape, mark the wire at the exit points for proper length from headliner-to-body/ roof connectors.
2. Carefully remove the wire harness from the original headliner.
3. Using a marking tool, mark the new headliner with the routing and exit points of the wire harness from the original headliner.
4. **NOTICE:** **Make sure not to damage the wire harness when cutting the excess adhesive from the wire harness.**

Cut and remove any excess adhesive from the wire harness.

5. Position the wire harness onto the new headliner, making sure the harness has enough length to be connected to the body/ roof connectors at the tape location(s) applied earlier. Apply tape to temporarily hold the wire harness in position on the headliner.
6. Apply the adhesive in the same location as the factory installed adhesive along the full length of the wire harness-to-headliner to avoid any NVH concern(s).

Material: 3M™ Super-Fast Repair Adhesive / 04747

2. **NOTE:** *Transfer parts as necessary.*

To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company

mcx30.com

Rear Door Trim Panel - SuperCab


Base Part Number: Base Part Number: 27406

Removal


NOTE: *LH side shown, RH side similar.*

NOTE: *Removal steps in this procedure may contain installation details.*

1. Remove the rear door upper trim panel.
 1. Remove the D-ring trim cover.
 2. Remove the safety belt D-ring bolt and position aside the safety belt.
Torque: 30 lb.ft (40 Nm)
 3. Release the clips and remove the rear door upper trim panel.

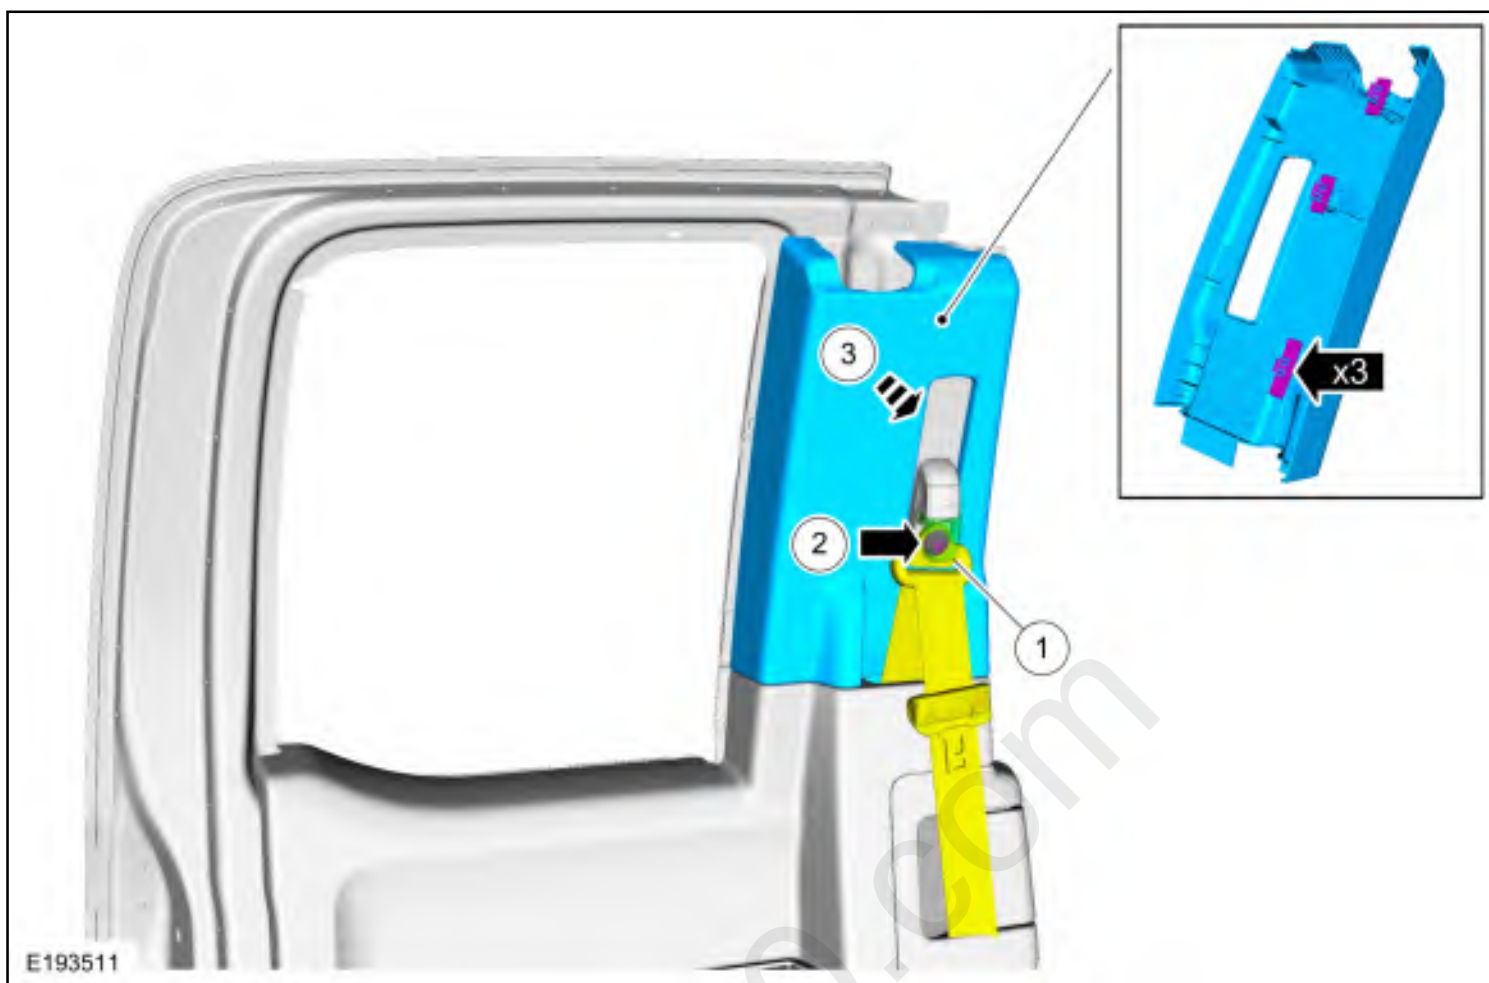

2. Remove the inside door handle cover.

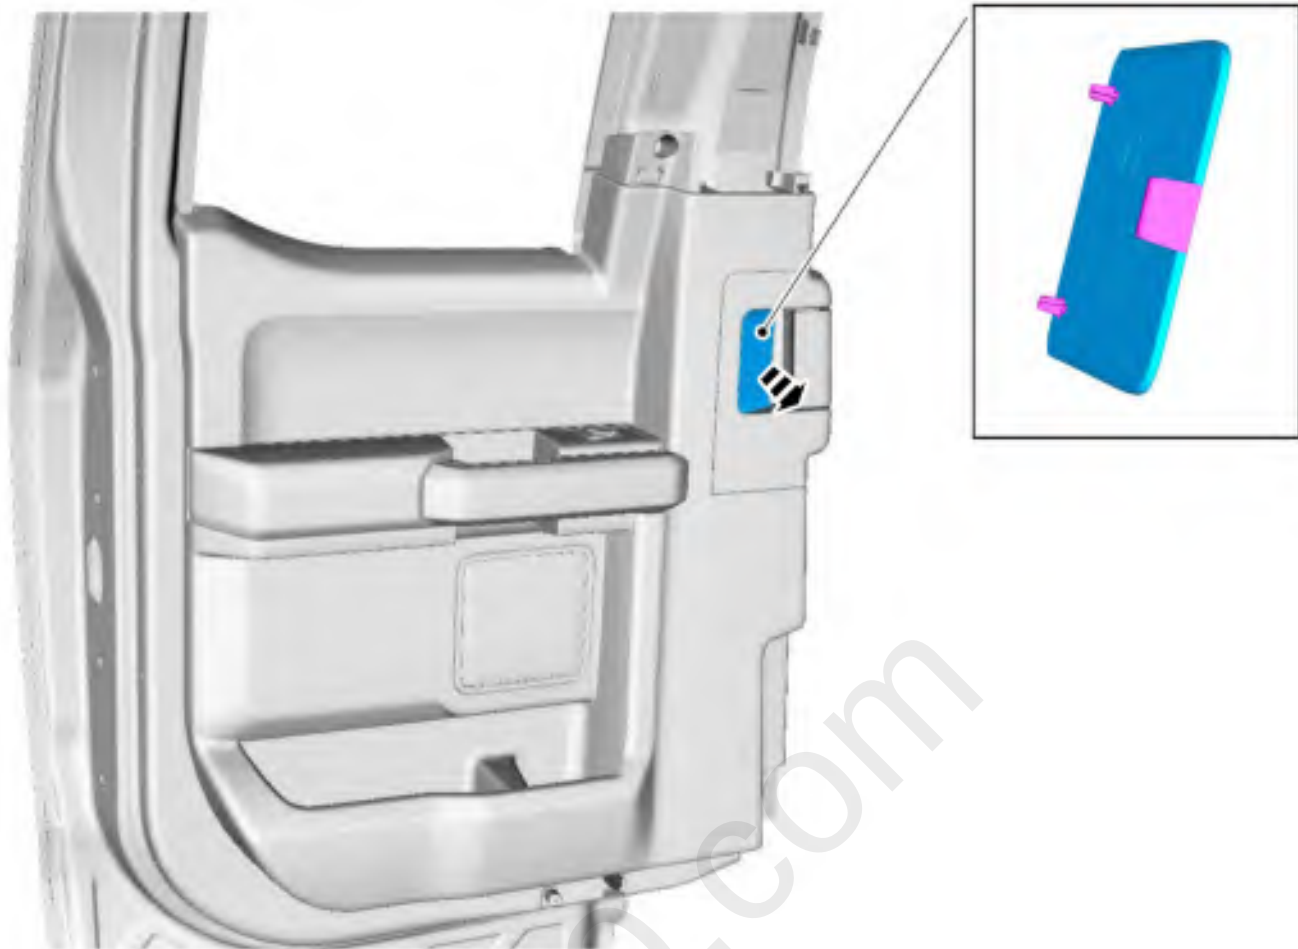


3. Remove the inside door handle retainers.



4. Release the clips and remove the door grab handle.



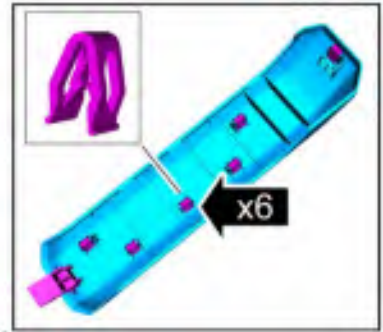

E195359

5. Remove the door trim panel bolts.






6. Remove the rear door trim panel lower retainers.



E193509

7. Remove the rear door lower trim panel.

1. Release the clips and detach the rear door lower trim panel.
2. Position aside the handle assembly. If equipped with manual windows, remove the rear door lower trim panel.
3. If equipped, disconnect the power window switch electrical connector and remove the rear door lower trim panel.

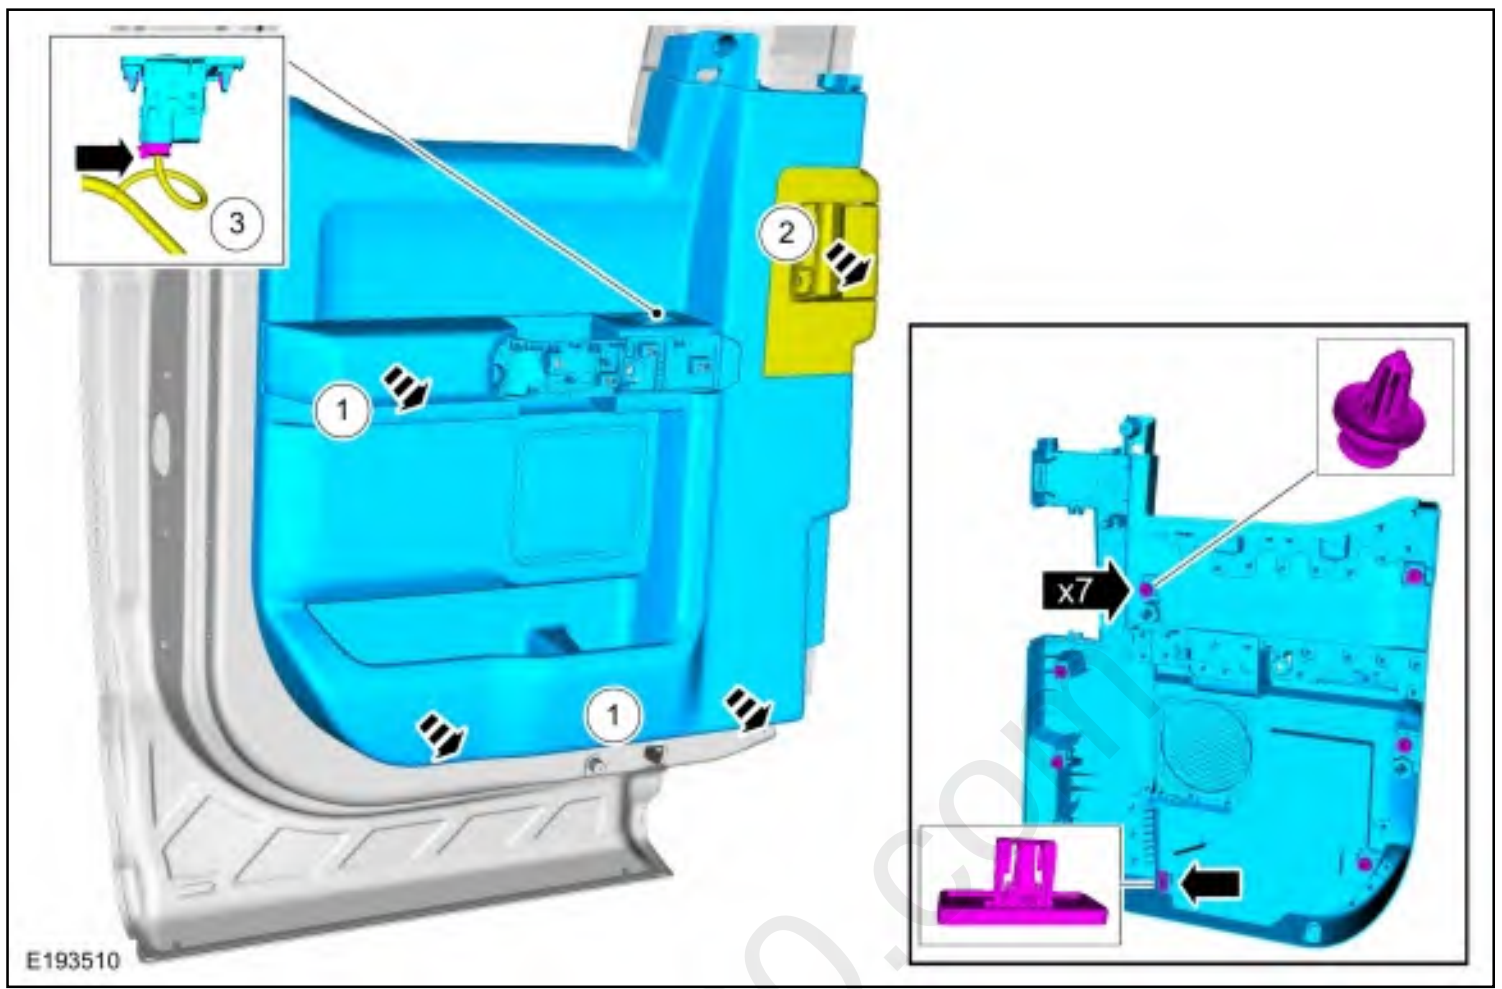

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company

Headliner - Lowering - Regular Cab

Base Part Number: Base Part Number: 5451916

1. Remove the following items:

1. On both sides, remove the A-pillar trim panels.

Refer to: [A-Pillar Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).


2. On both sides, remove the B-pillar trim panels.

Refer to: [B-Pillar Trim Panel - Regular Cab](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

2. **NOTE:** *LH side shown, RH side similar.*


On both sides, remove the sun visor.

1. Remove the retainer cover.
2. Remove the retainer.
3. Remove the sun visor.
4. If equipped, disconnect the electrical connector.

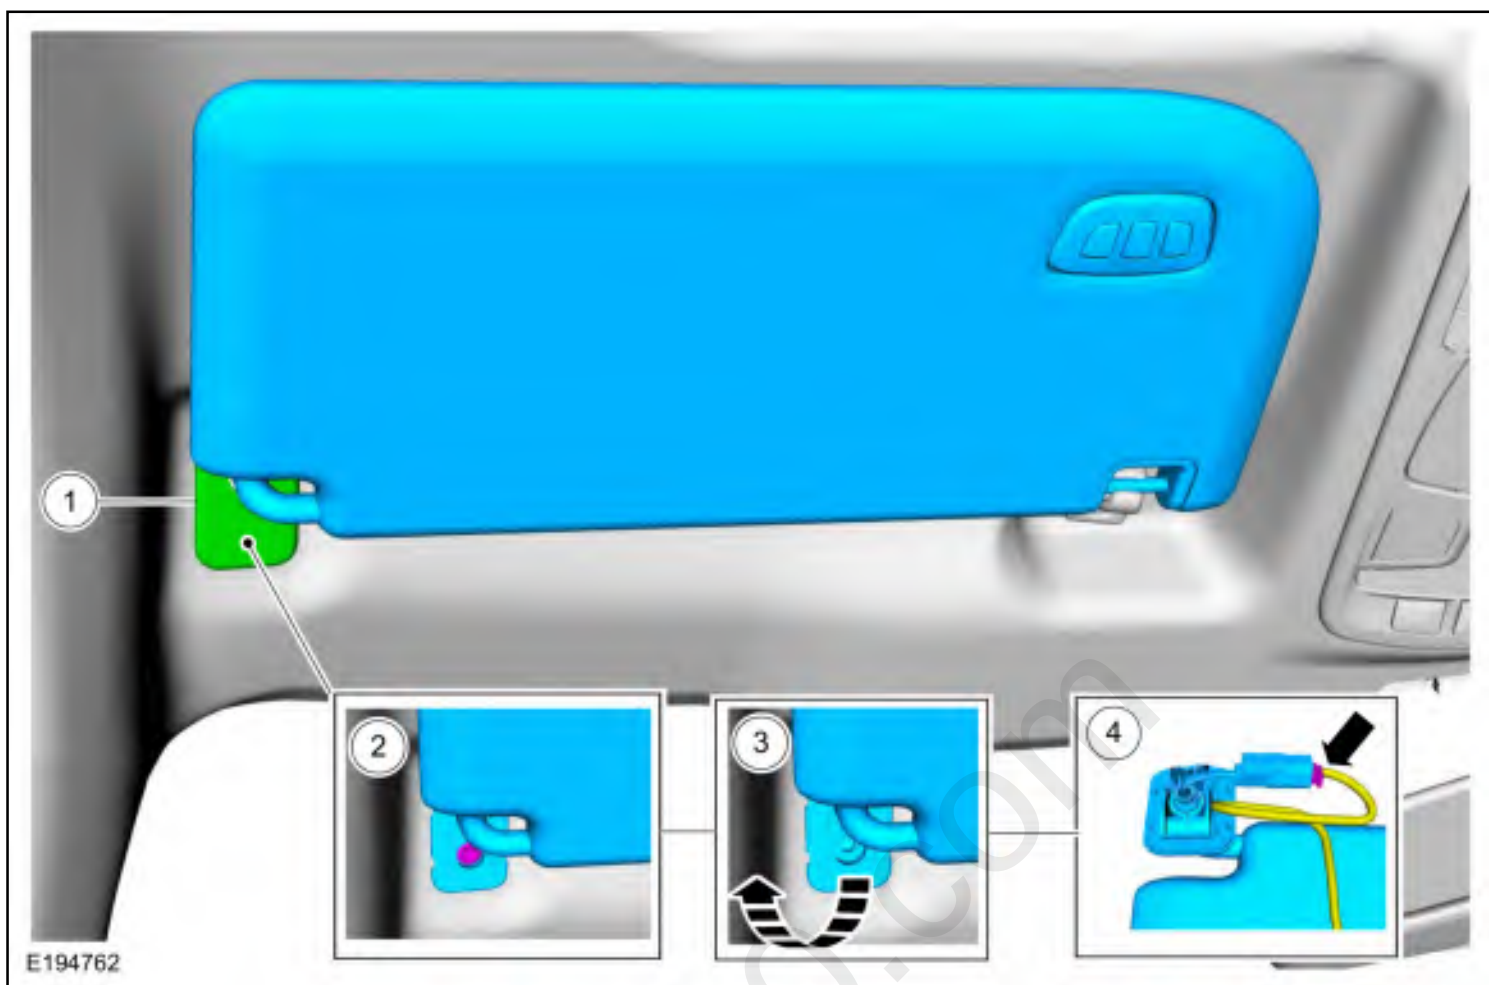

3. **NOTE:** *LH side shown, RH side similar.*


On both sides, remove the retainers and the sun visor clips.

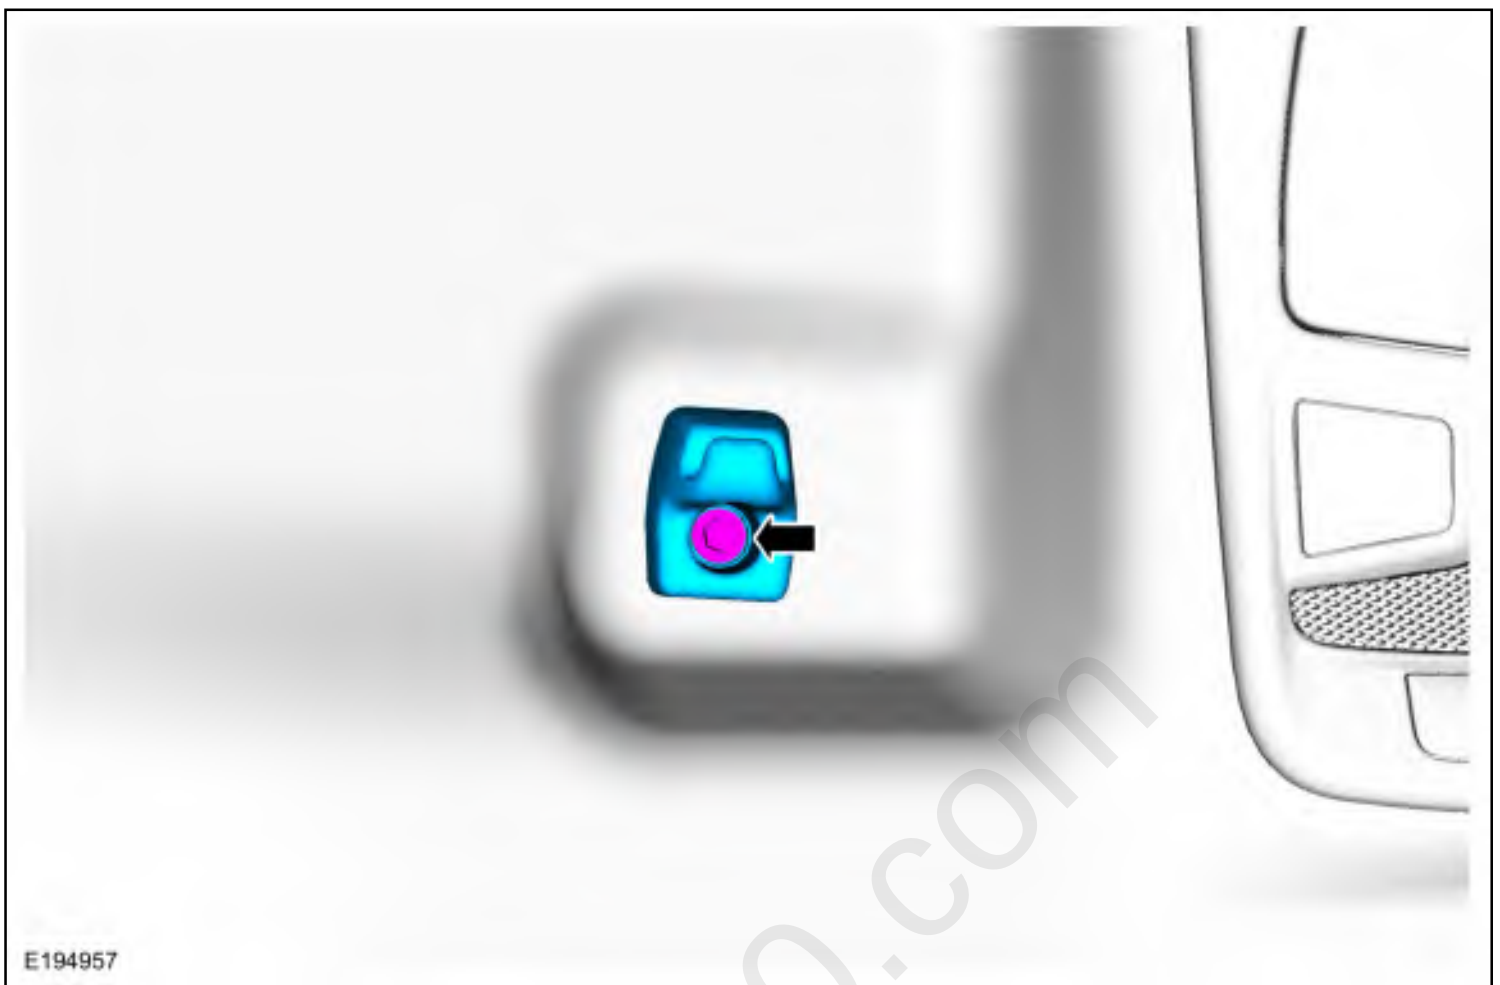


4. If equipped, disconnect the rear view mirror electrical connector.



5. On both sides, remove the garment hooks.
 1. Open the garment hook retainer cover.
 2. Remove the retainer and the garment hook.

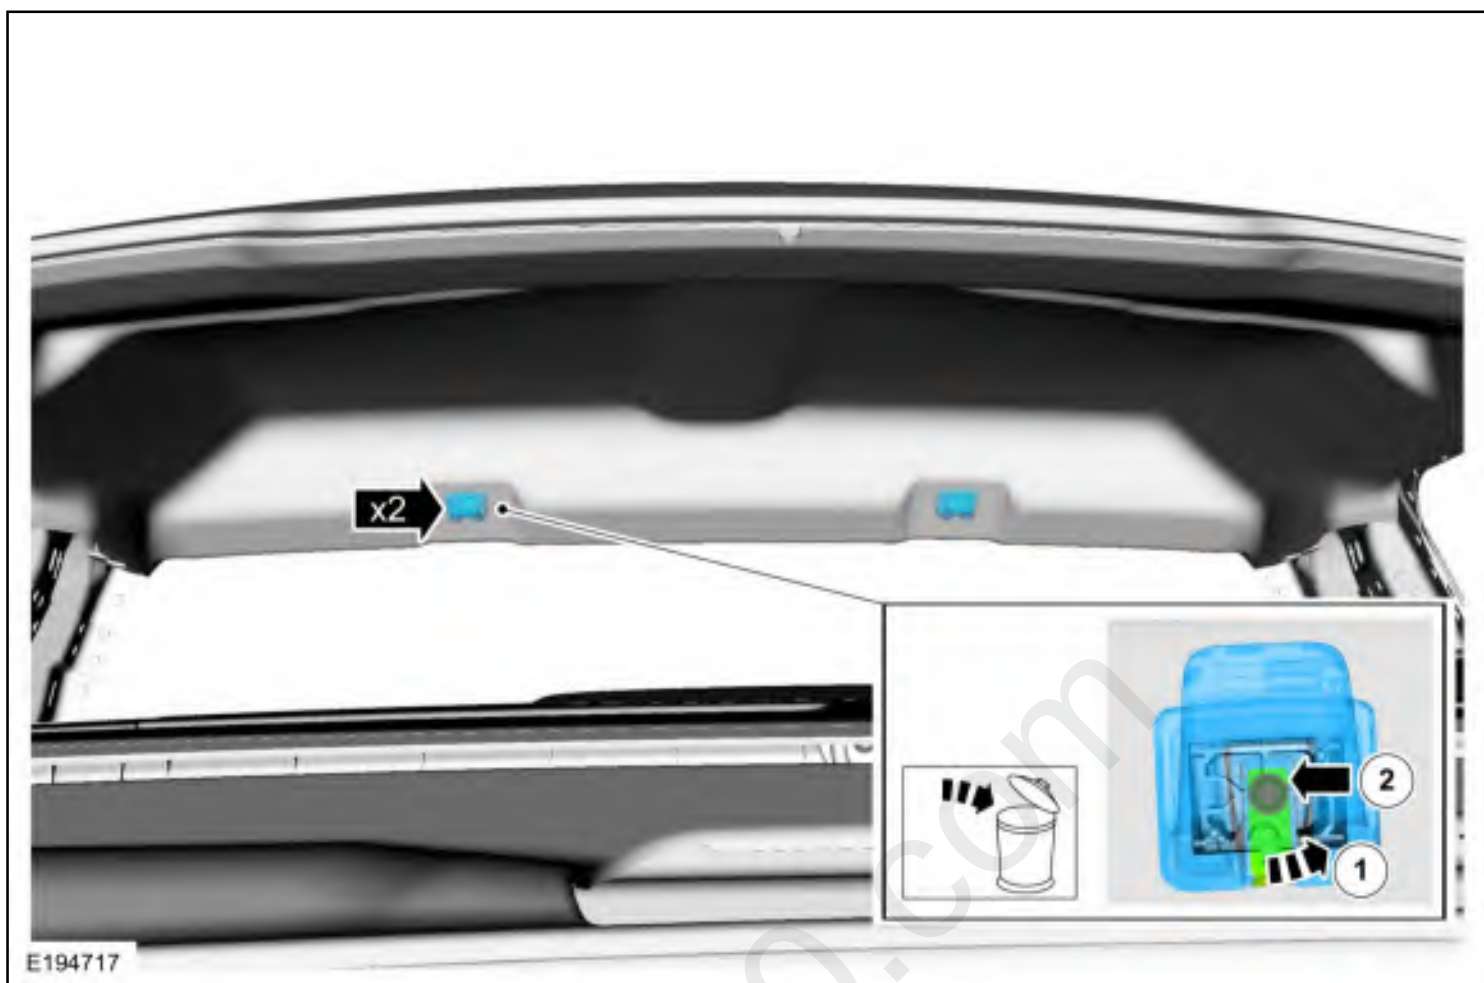

6. Disconnect the headliner wiring harness connectors and position aside the wiring harness.

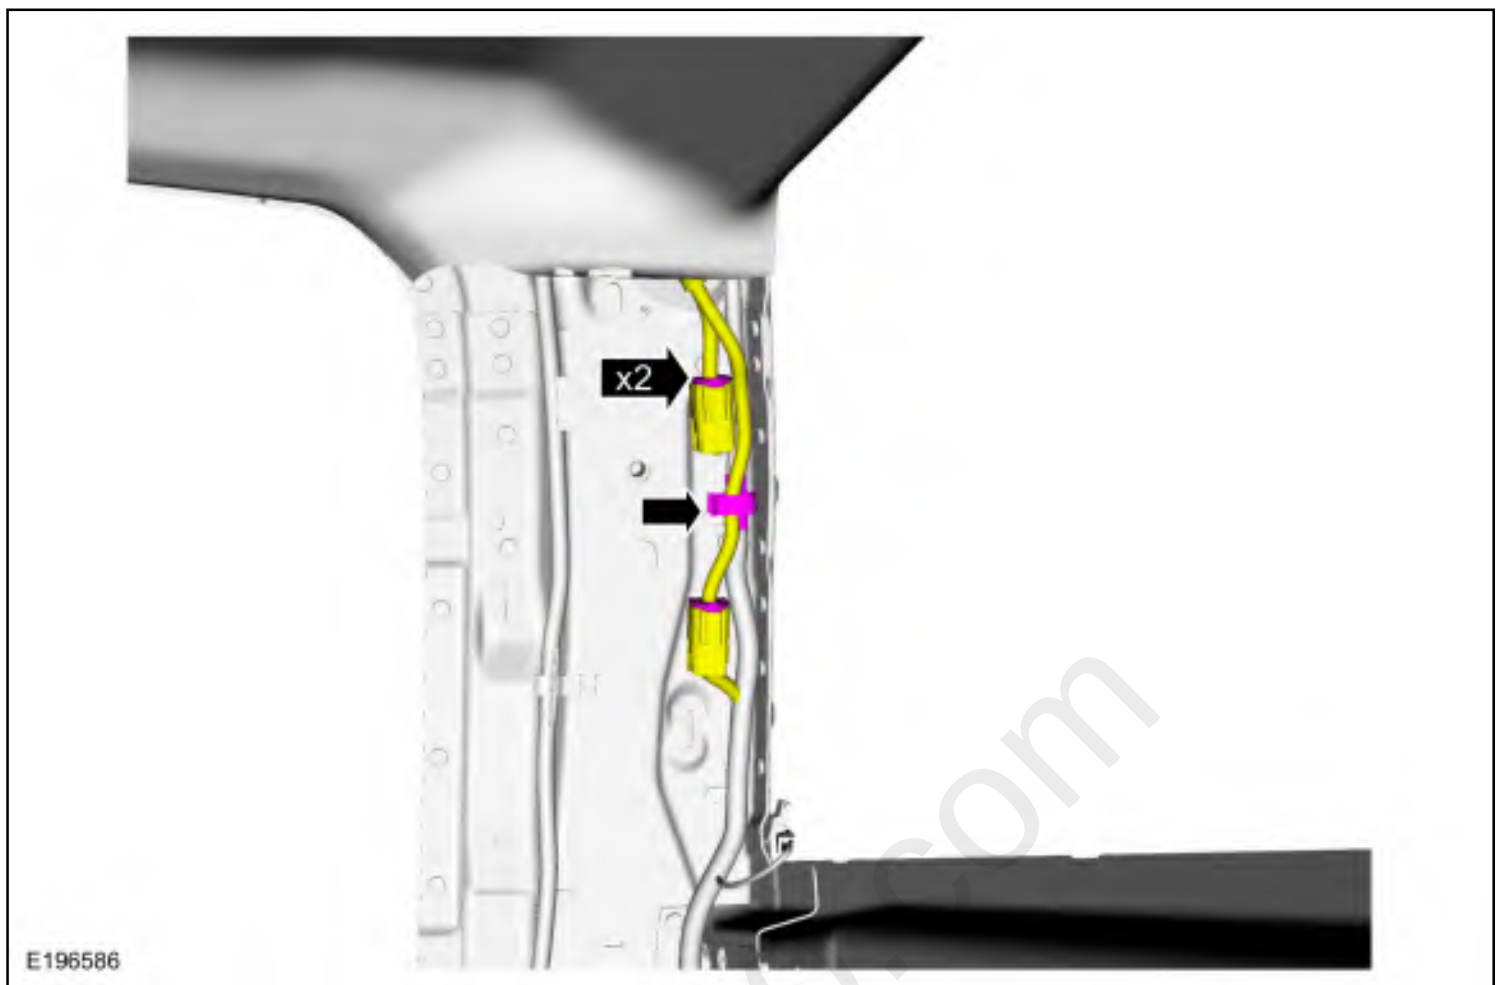

7. Release the clips and lower the headliner.




Steering Column Shrouds

Special Tool(s) / General Equipment


Flat Headed Screw Driver

Removal

1. Fully extend and lower the steering column.

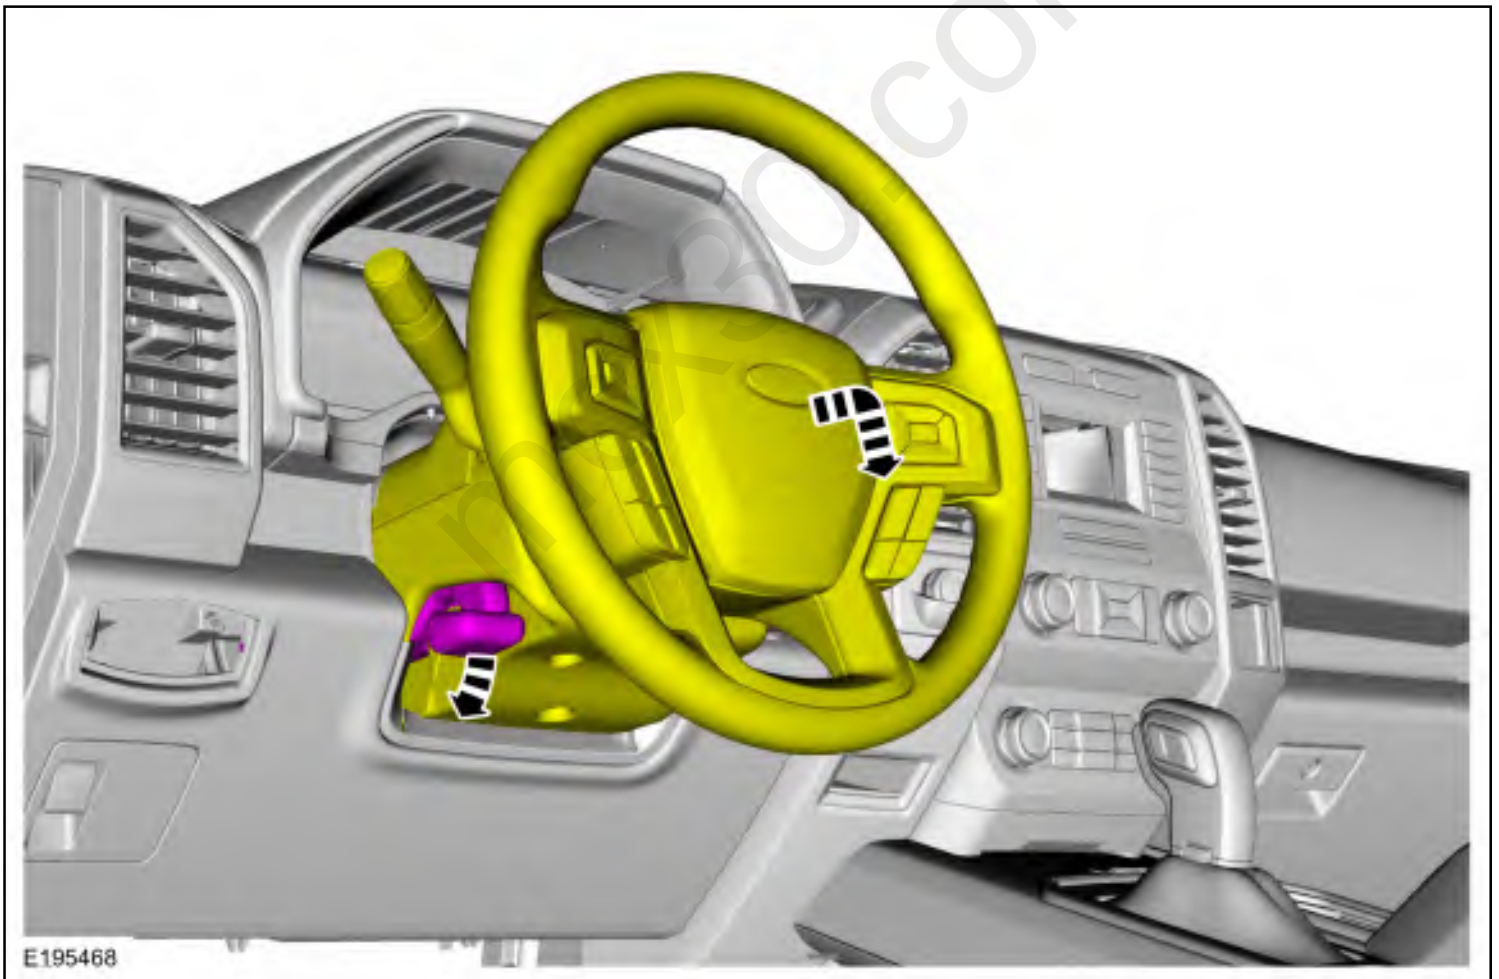


2. Release the upper gap hider from the IPC and position aside.

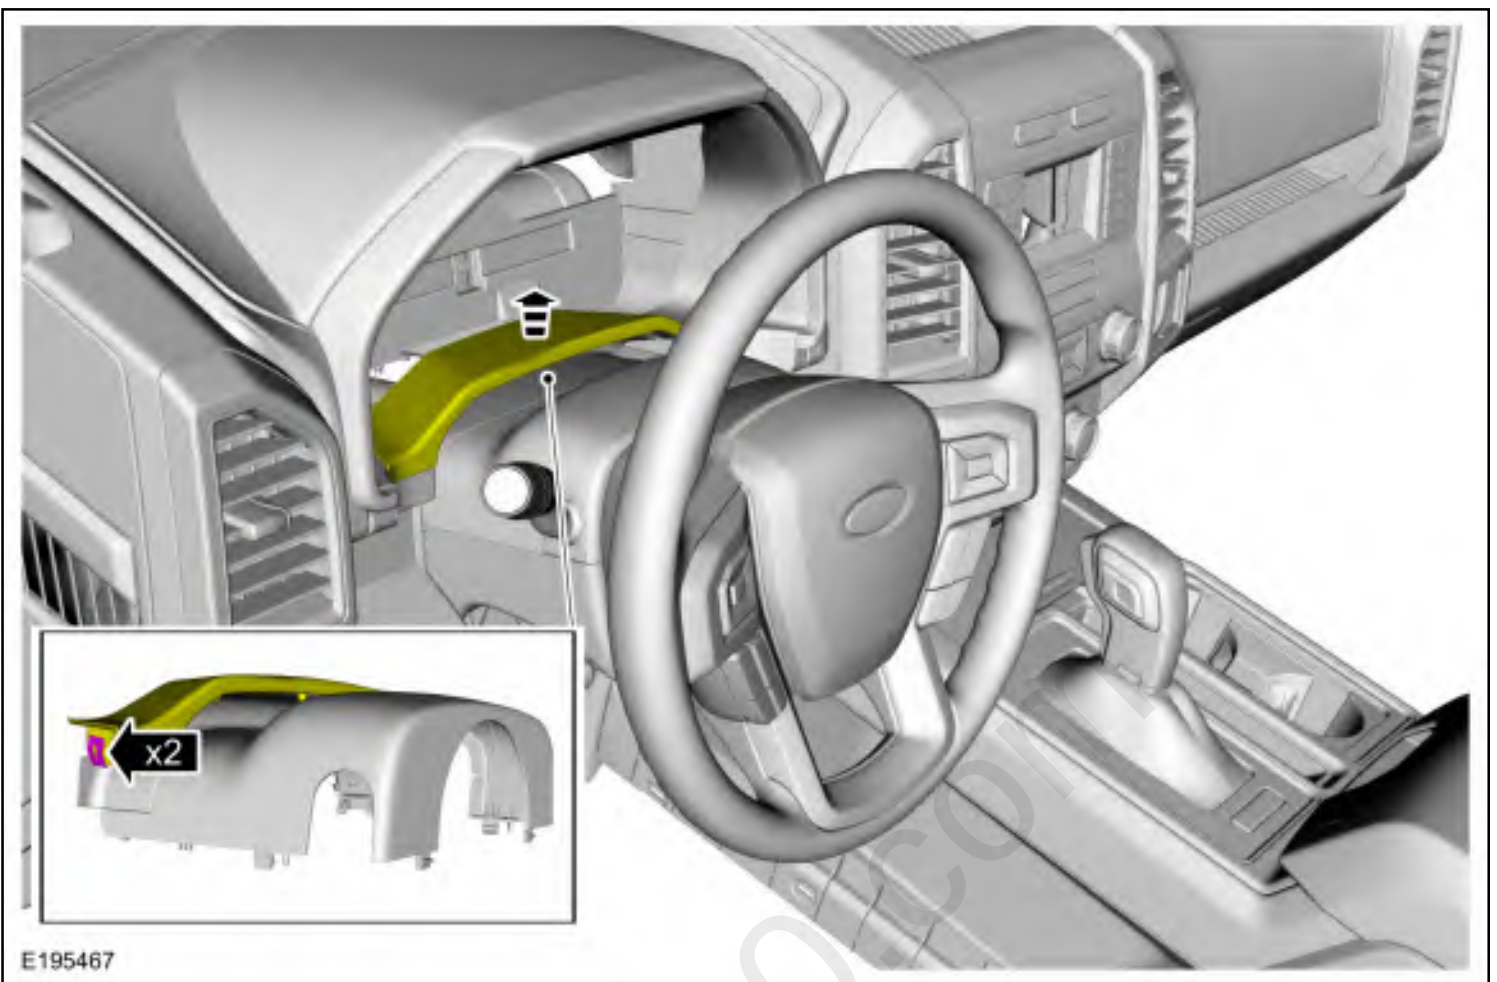


3. Release the retainers.


1. Rotate the steering wheel 90 degrees to the left.
Use the General Equipment: Flat Headed Screw Driver
2. Release the LH retainer.
3. Rotate the steering wheel 180 degrees to the right.
Use the General Equipment: Flat Headed Screw Driver
4. Release the RH retainer.
Use the General Equipment: Flat Headed Screw Driver

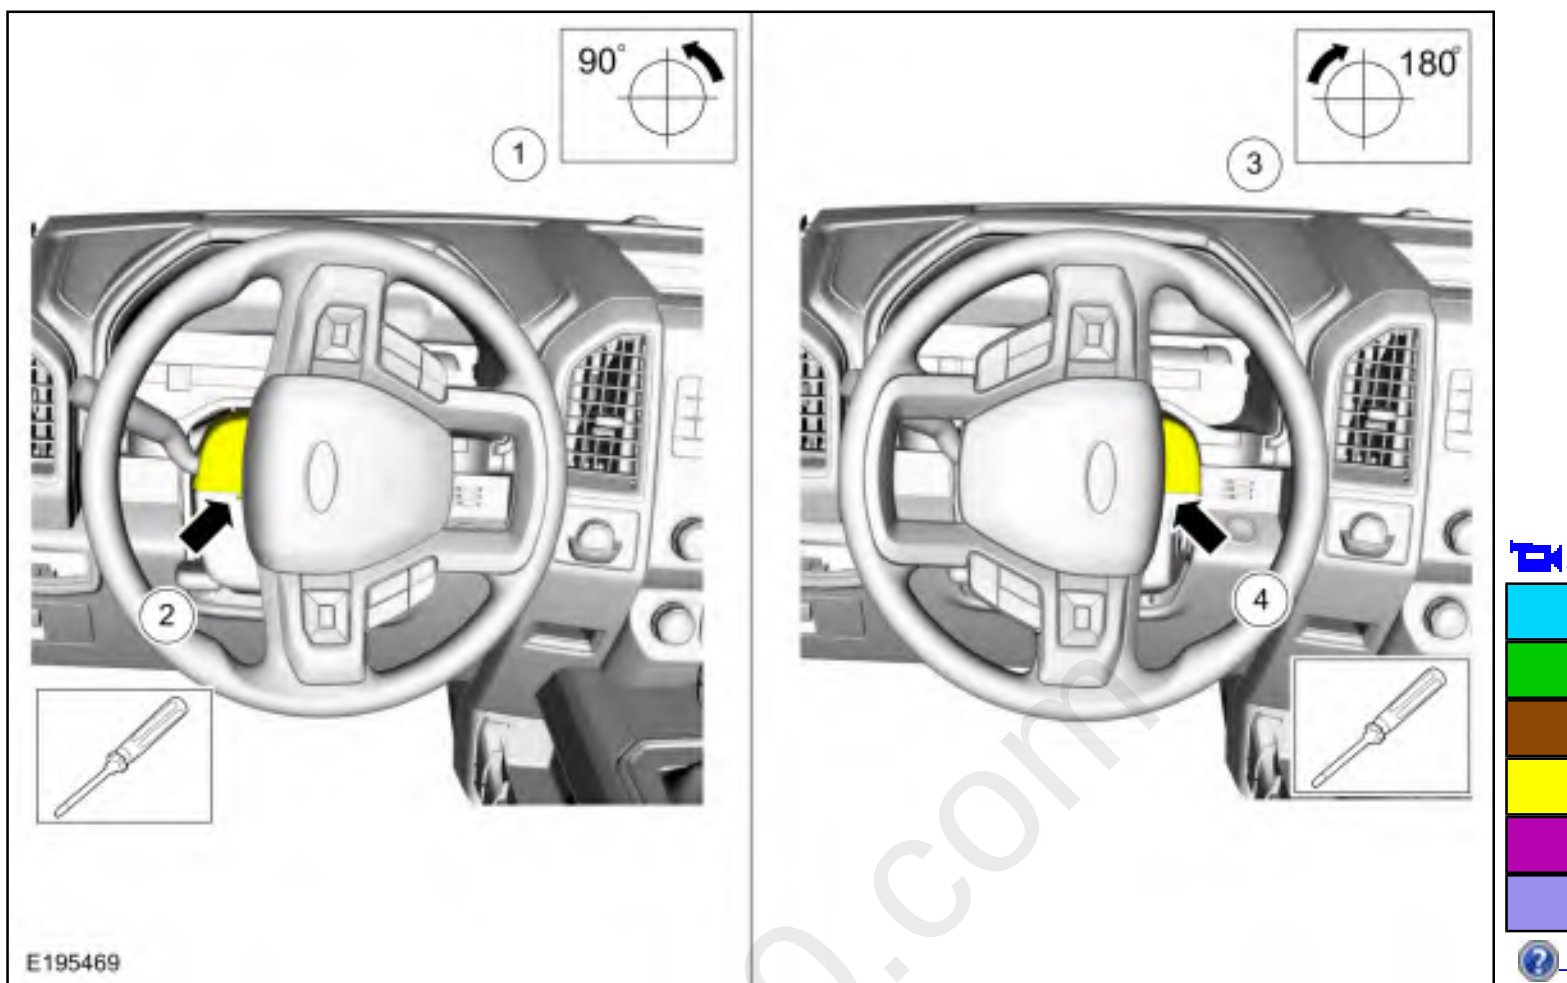

4. Release the outer clips on each side and remove the steering column upper shroud.

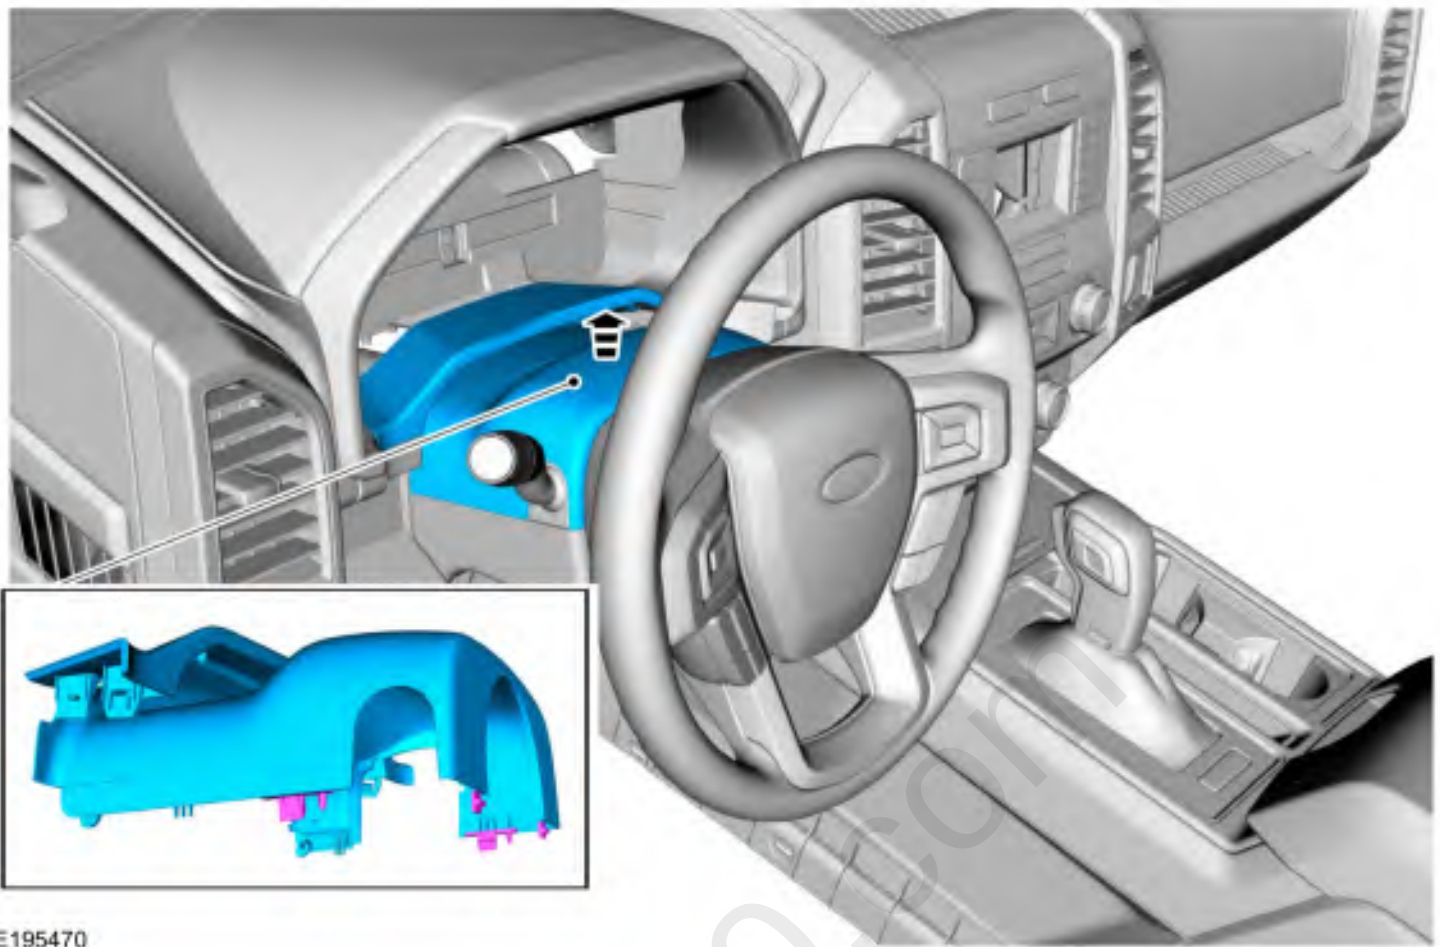

5. Remove the steering column lower shroud.
 1. Remove the screws.
 2. Remove the steering column lower shroud.

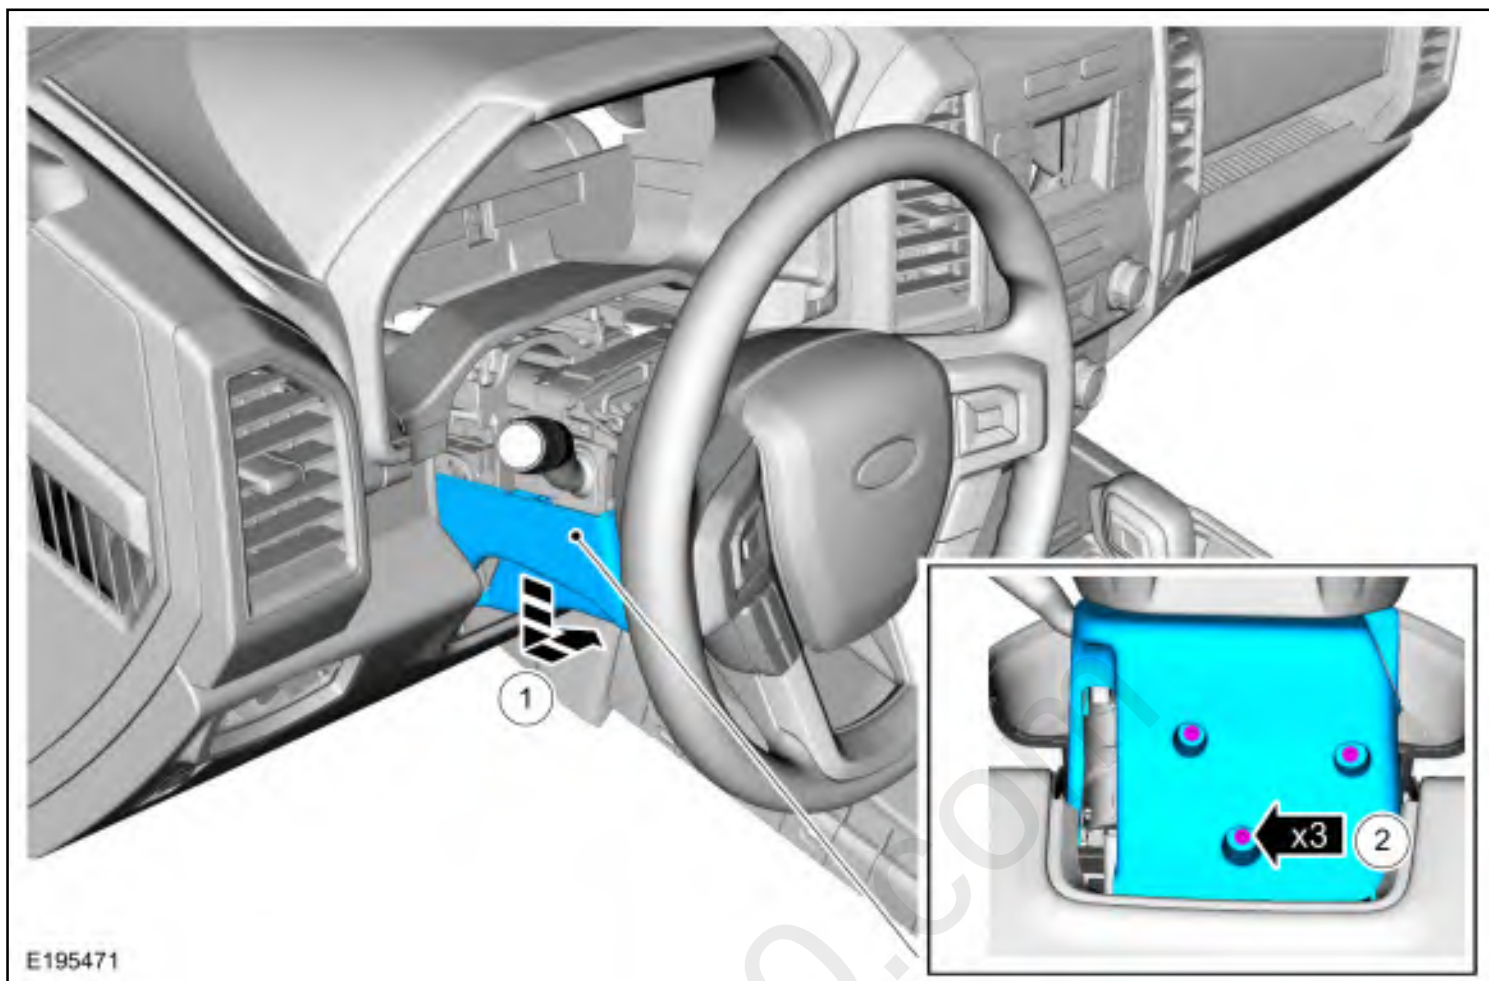

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company

Headliner - SuperCab

Base Part Number: Base Part Number: 5451916

Materials


Name	Specification
3M™ Super-Fast Repair Adhesive 04747	-

Removal

1. Remove the following items:
 1. On both sides, remove the A-pillar trim panels.
Refer to: [A-Pillar Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
 2. On both sides, remove the B-pillar trim panels.
Refer to: [B-Pillar Trim Panel - SuperCab](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

2. **NOTE:** *LH side shown, RH side similar.*


On both sides, release the clips and remove the upper striker covers.

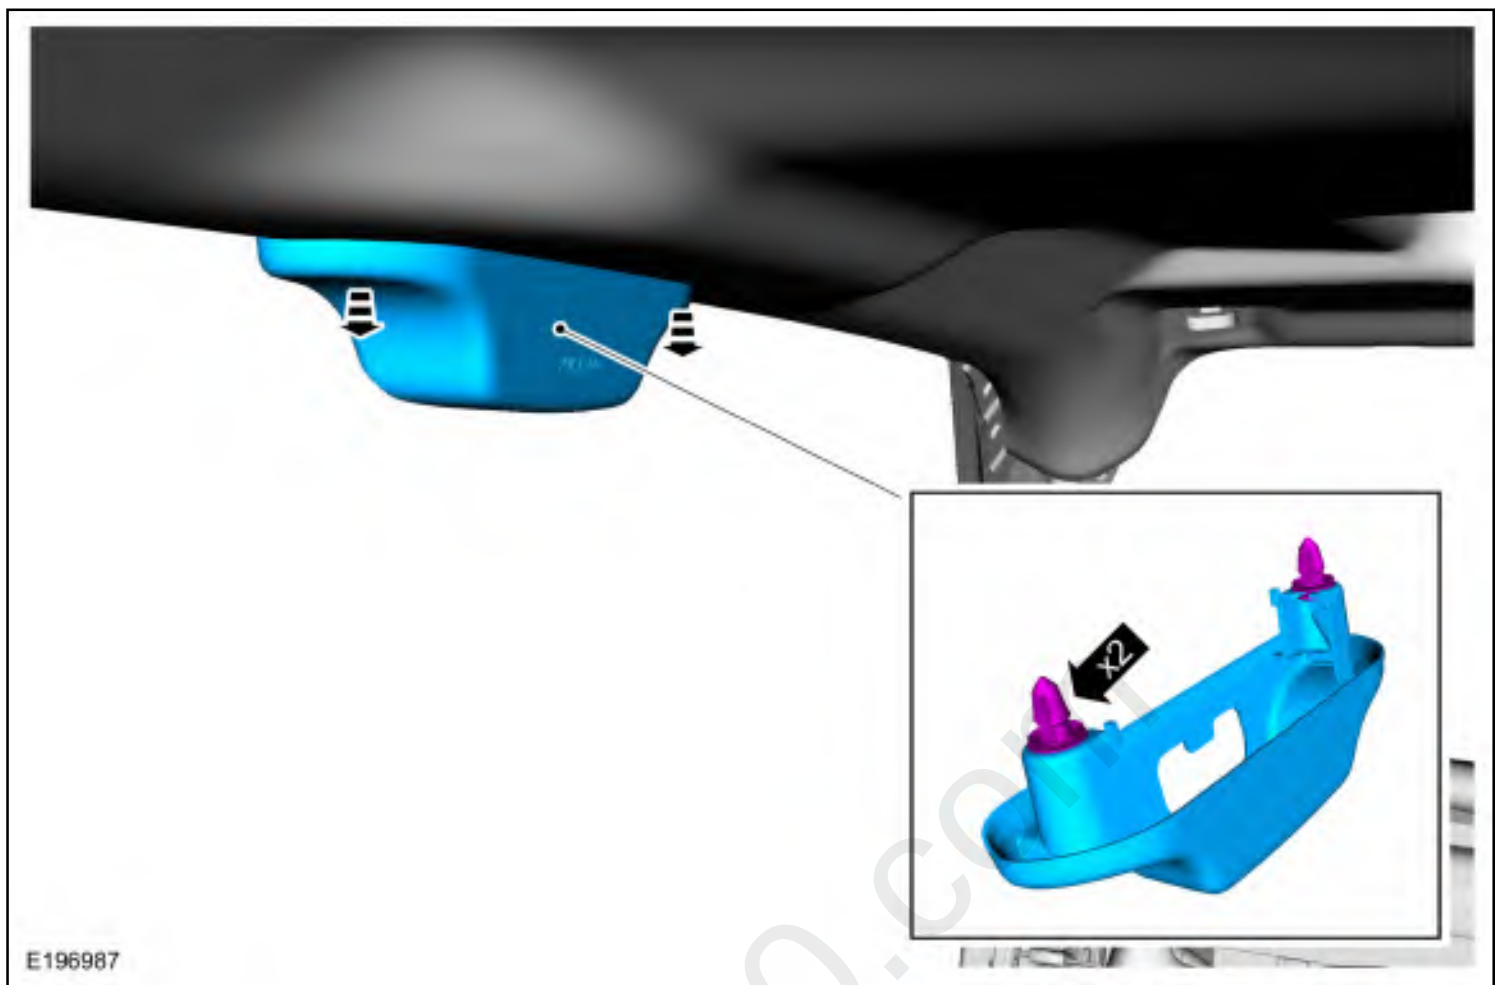

3. **NOTE:** *LH side shown, RH side similar.*


On both sides, remove the sun visor.

1. Remove the retainer cover.
2. Remove the retainer.
3. Remove the sun visor.
4. If equipped, disconnect the electrical connector.

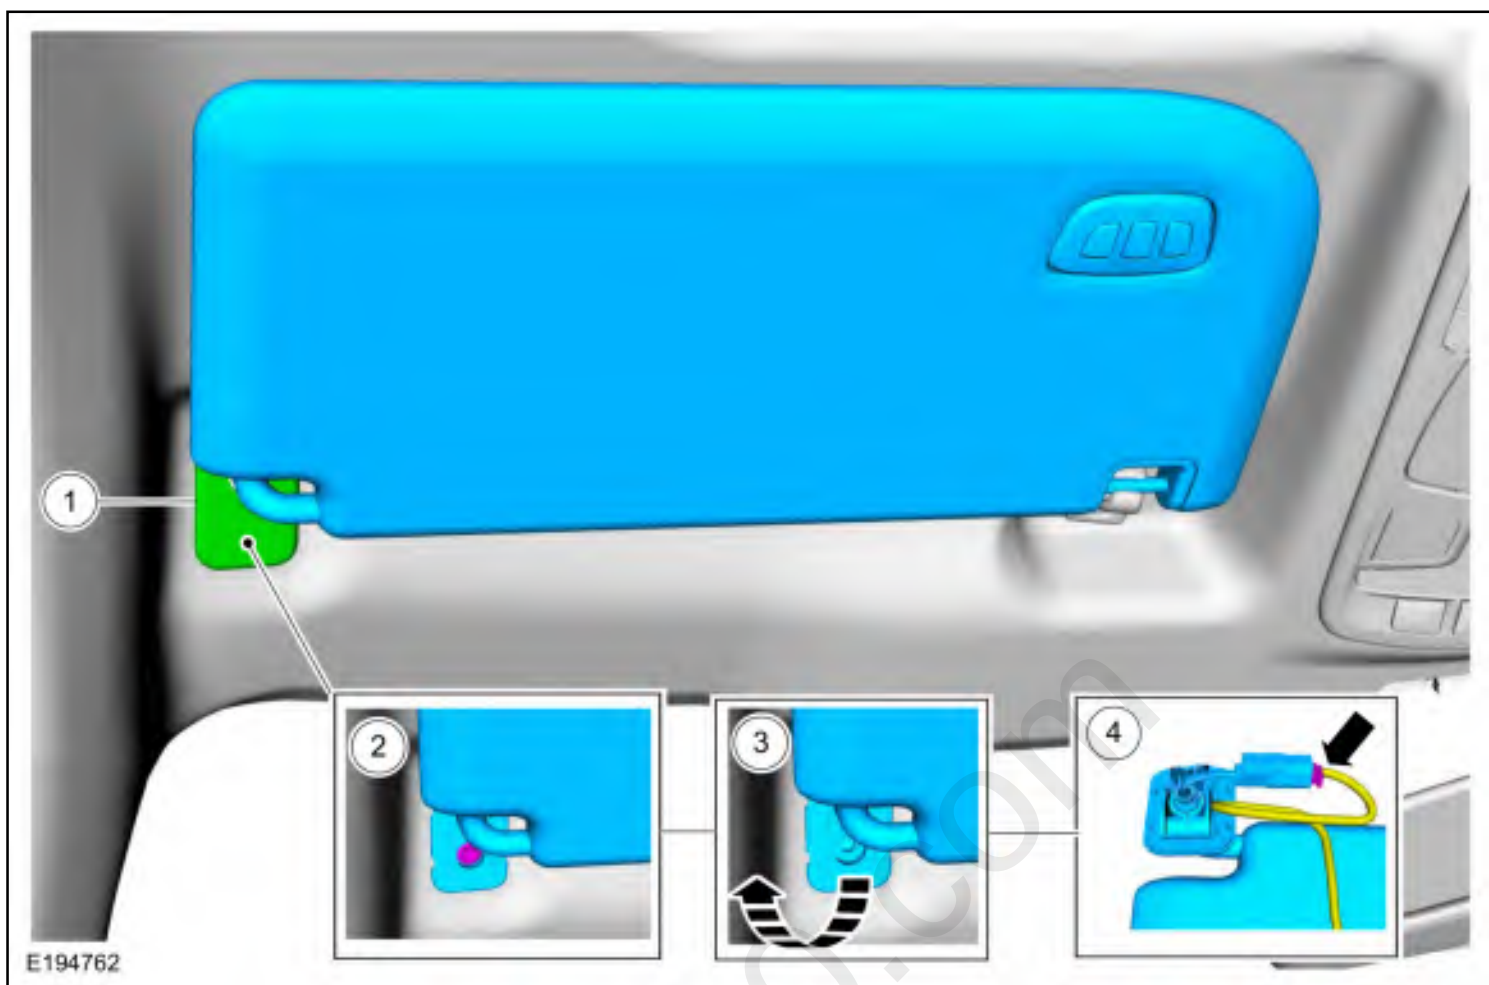


4. **NOTE:** *LH side shown, RH side similar.*


On both sides, remove the retainers and the sun visor clips.

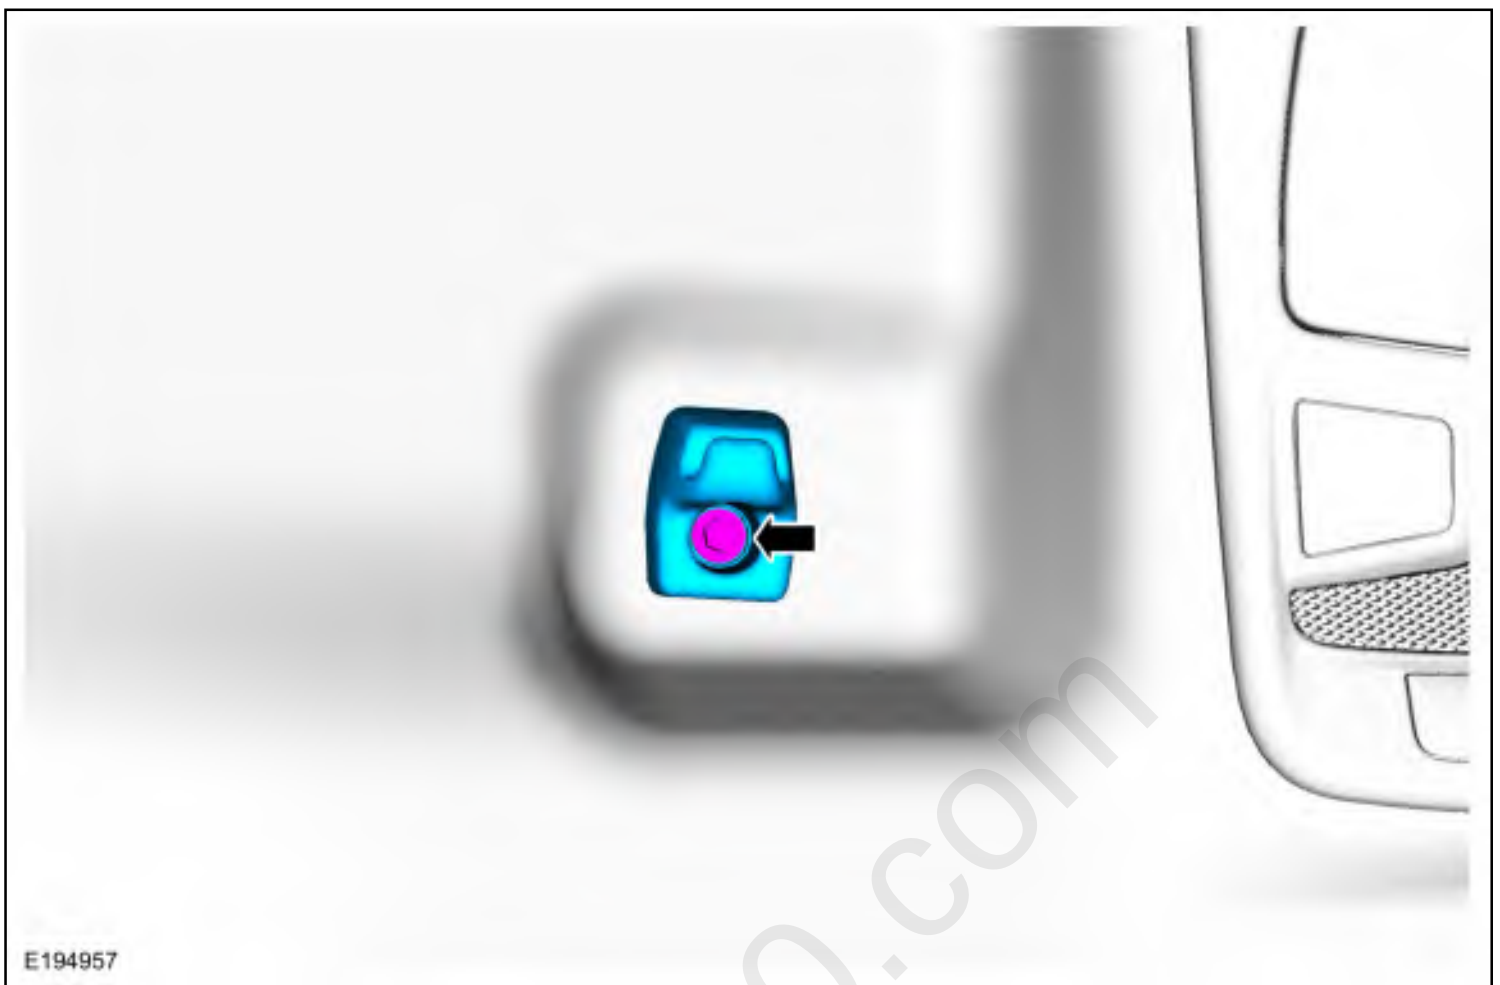


5. If equipped, release the clips and remove the rain sensor outer covers.

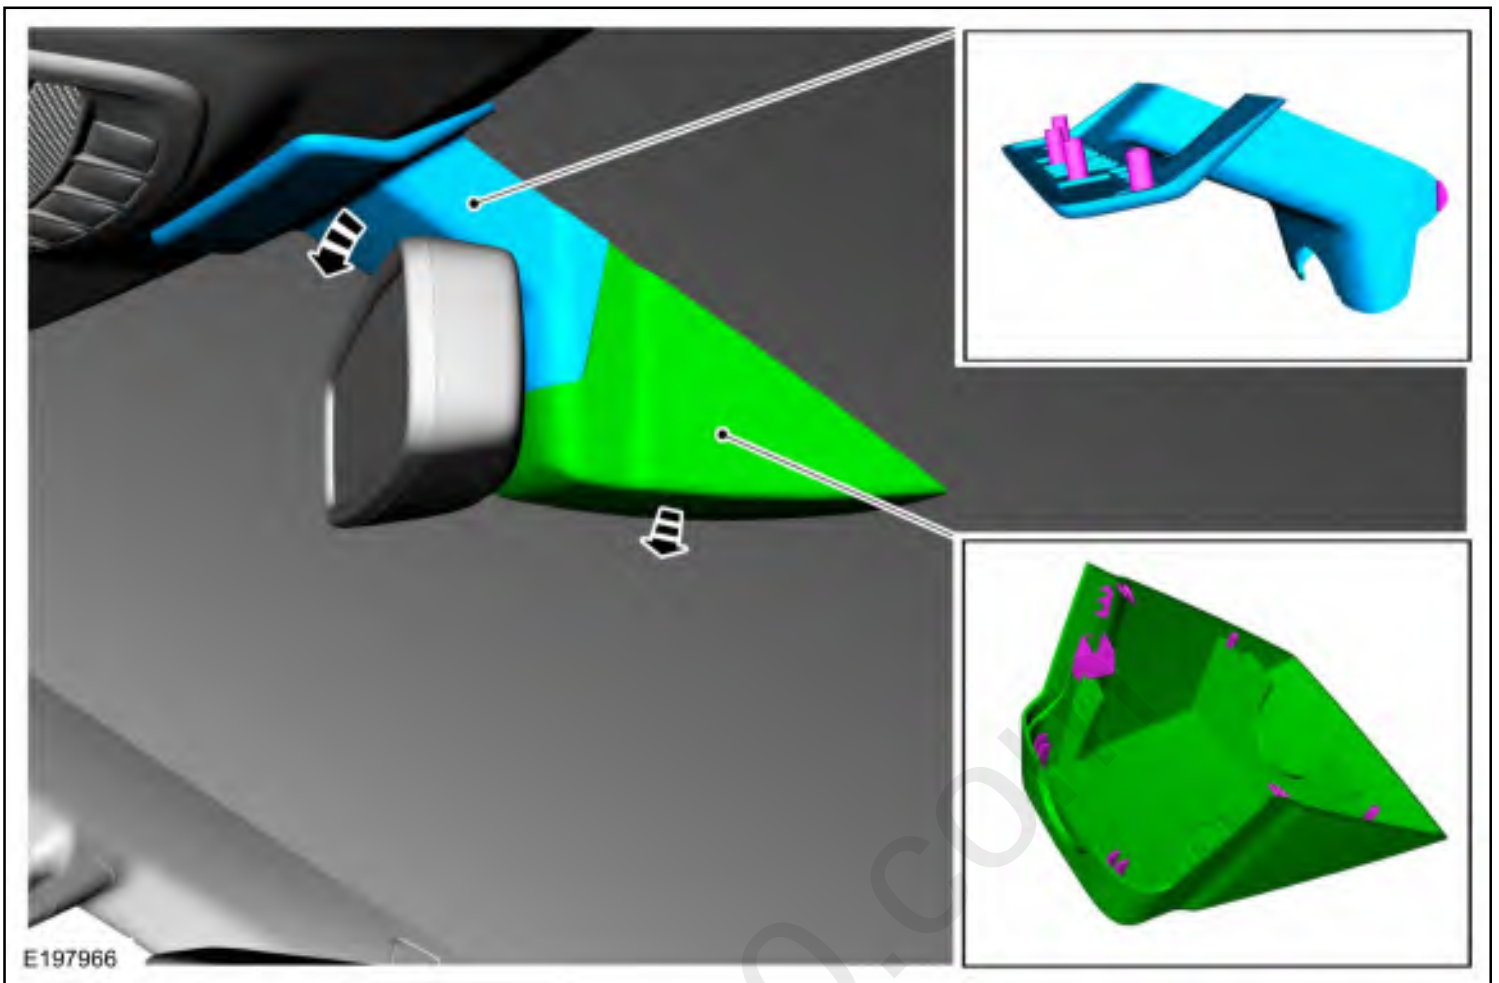


6. If equipped, disconnect the rear view mirror electrical connector.

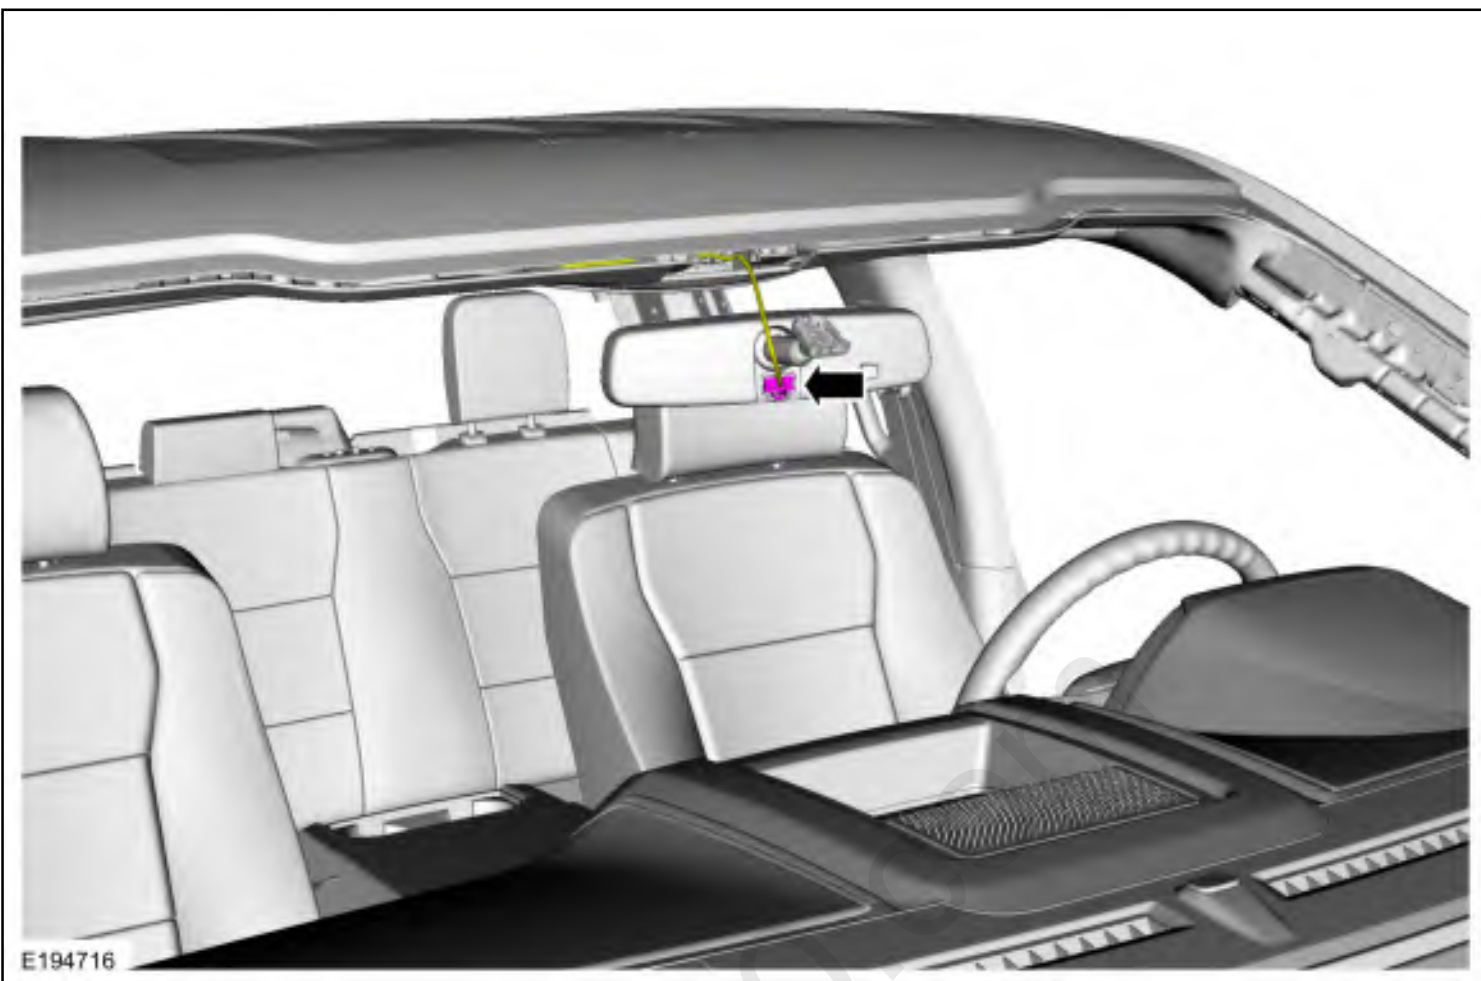


7. If equipped, disconnect the rain sensor electrical connector.

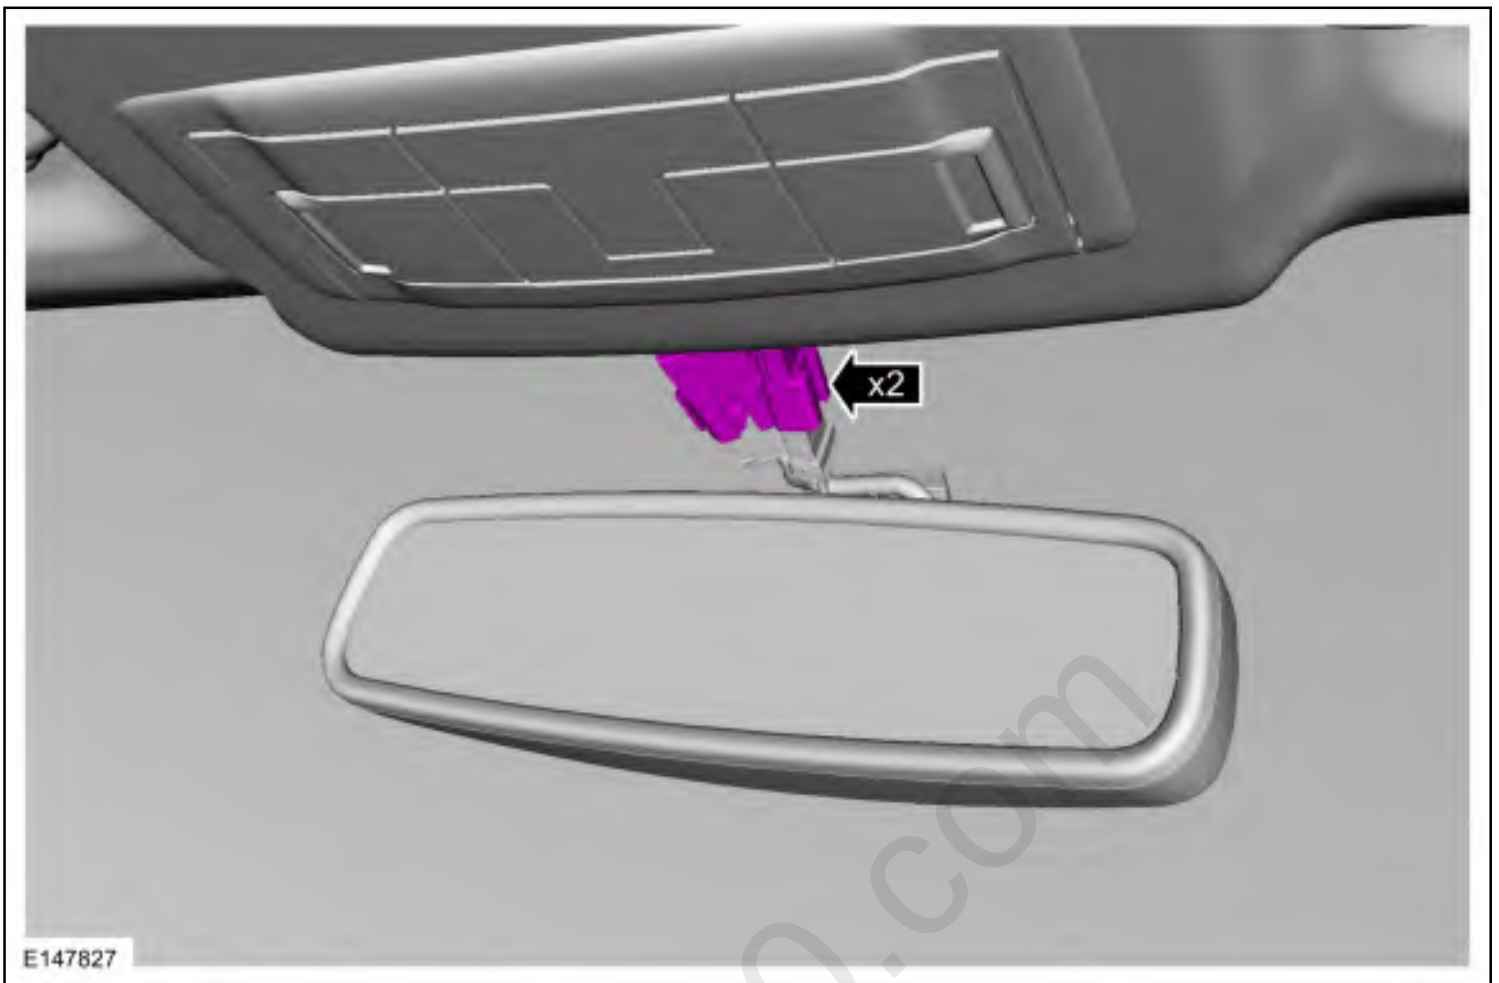


8. On both sides, remove and discard the garment hooks.
 1. Open the garment hook retainer cover.
 2. Remove the retainer and the garment hook.

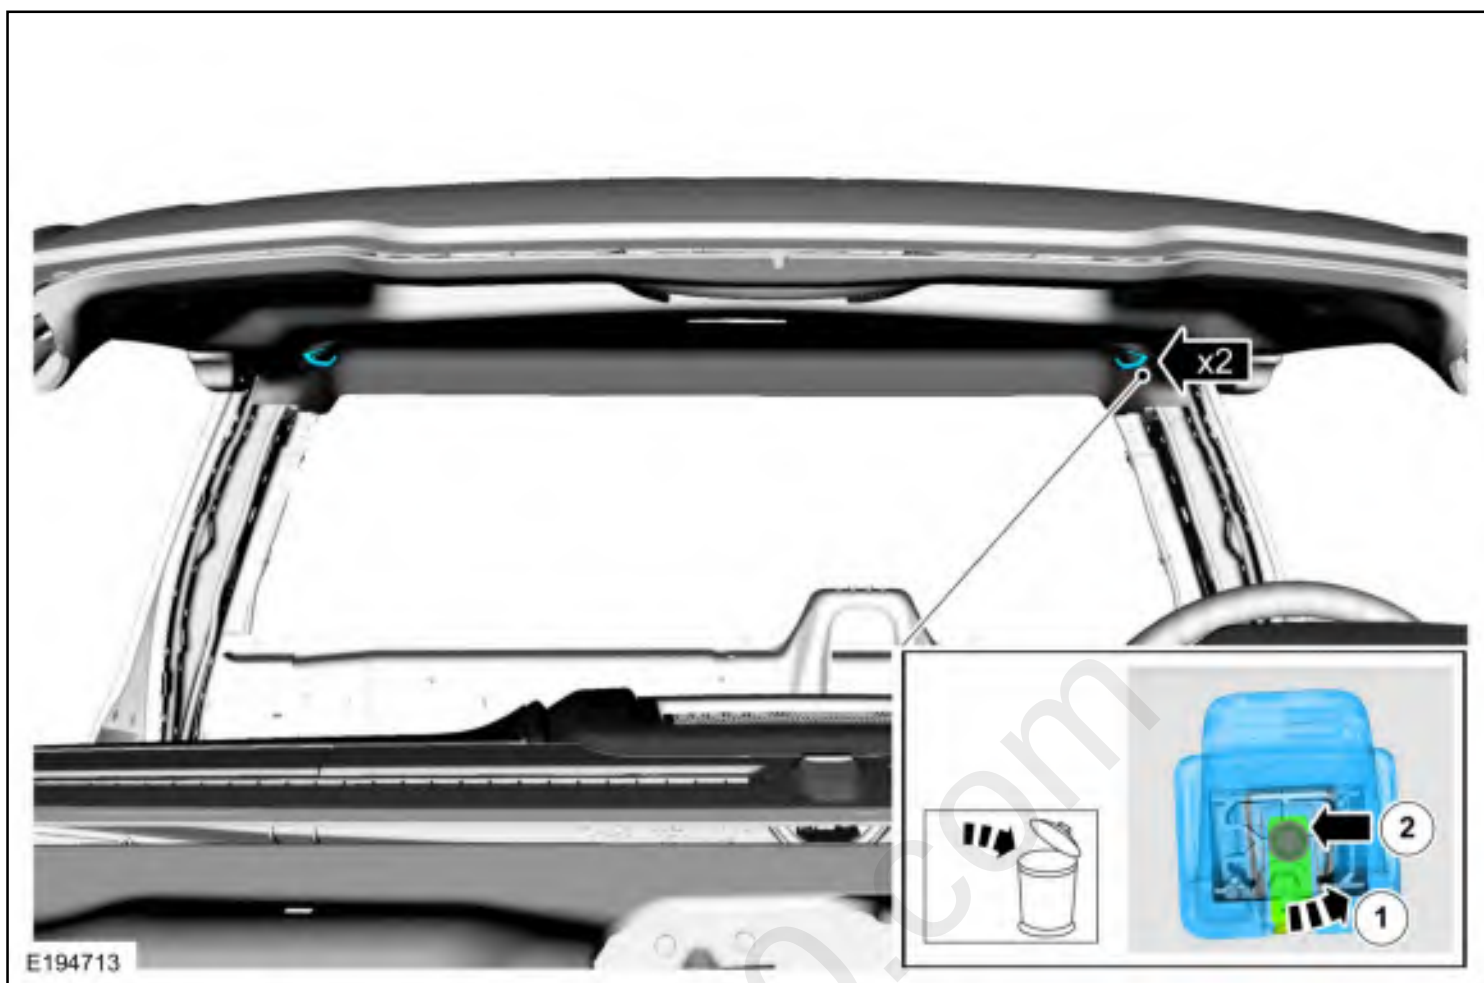


9. Disconnect the headliner wiring harness connectors and position aside the wiring harness.

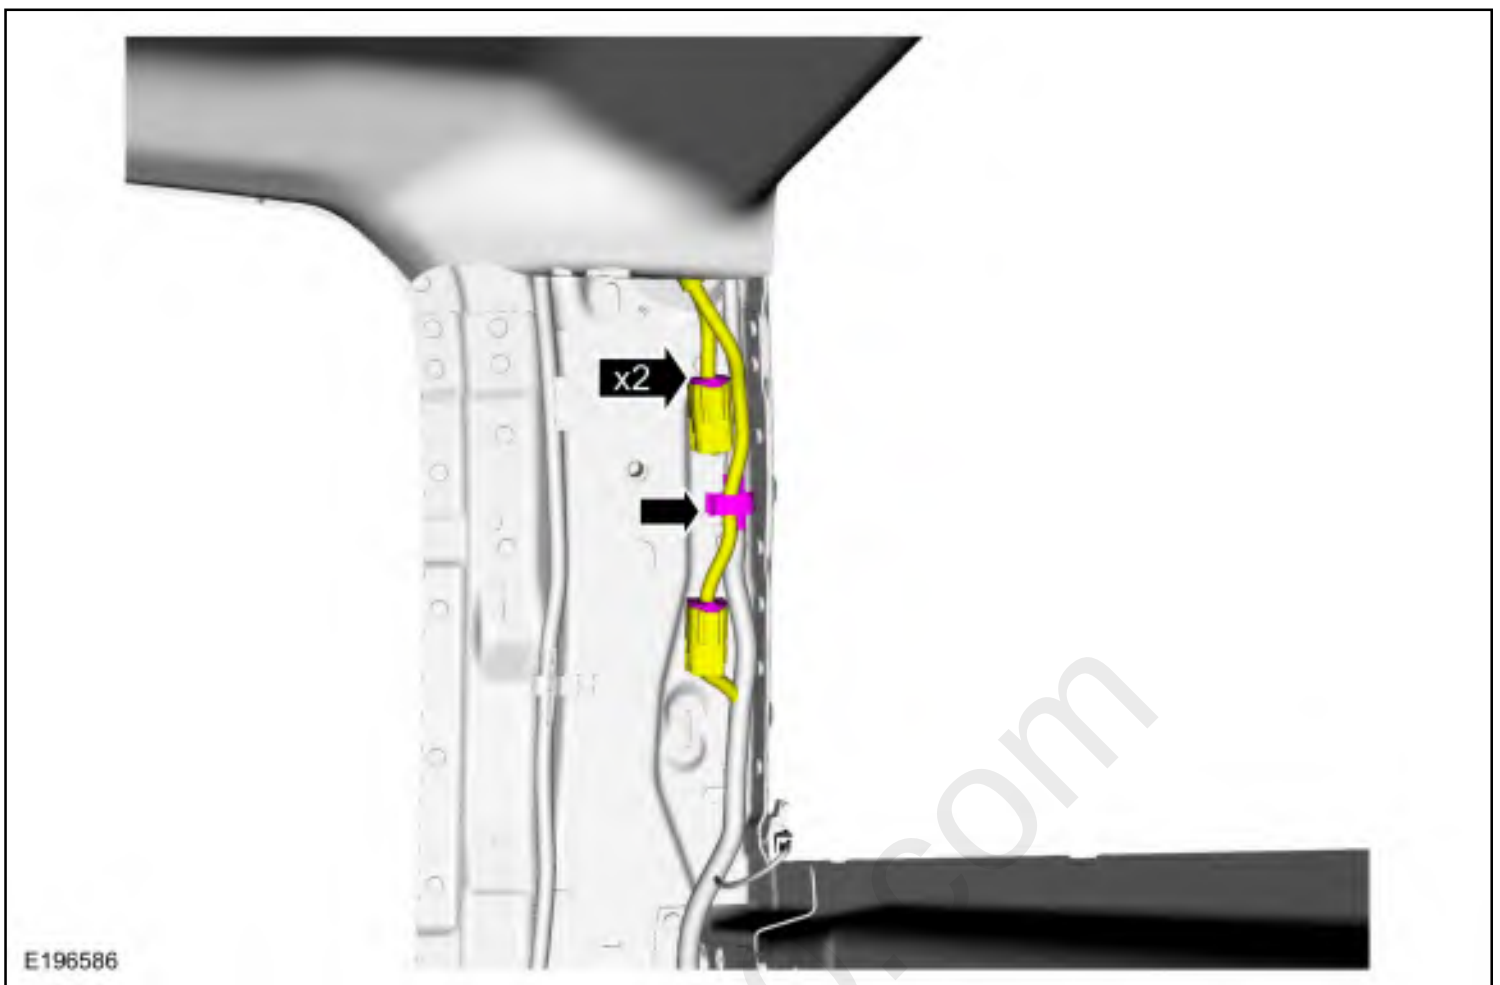

10. Release the clips and lower the headliner.

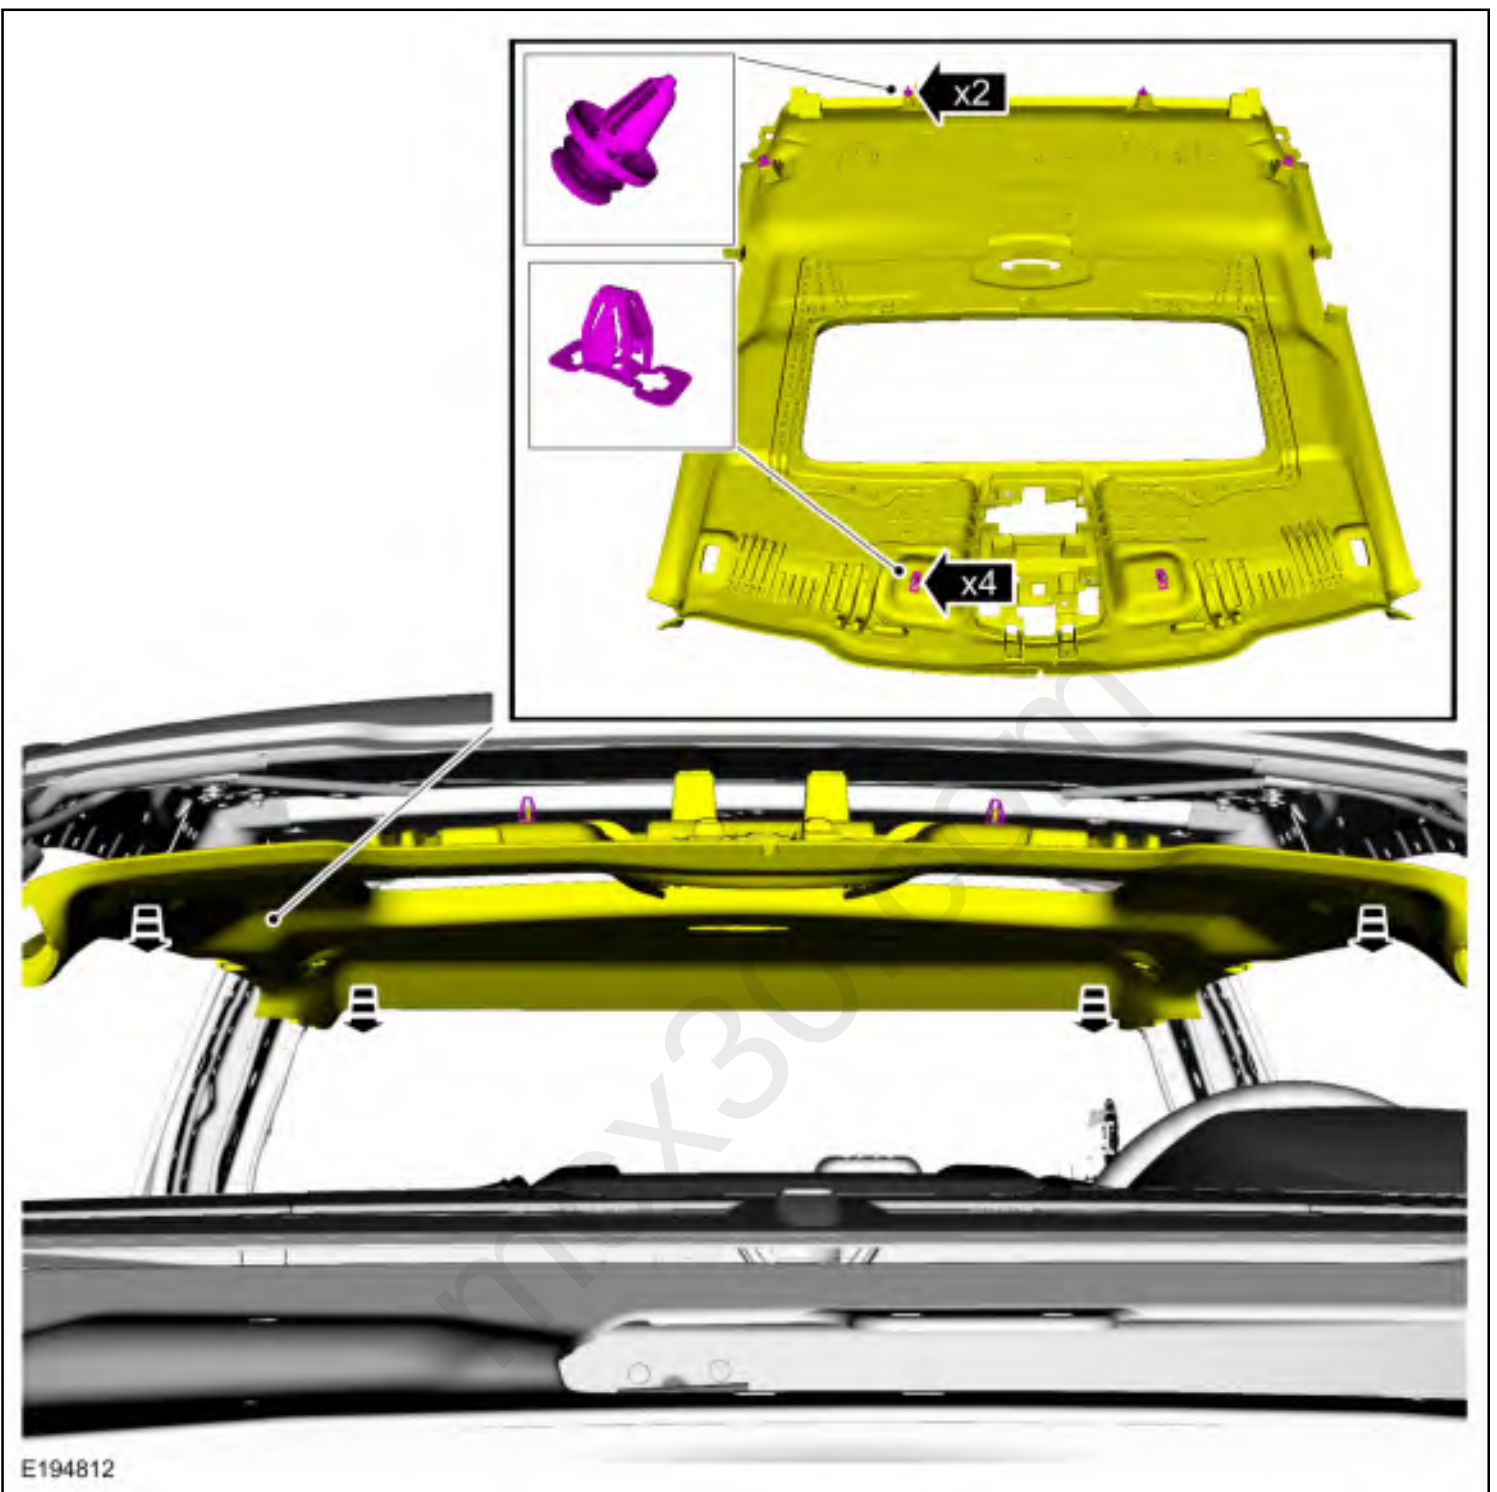

11. Remove the headliner.

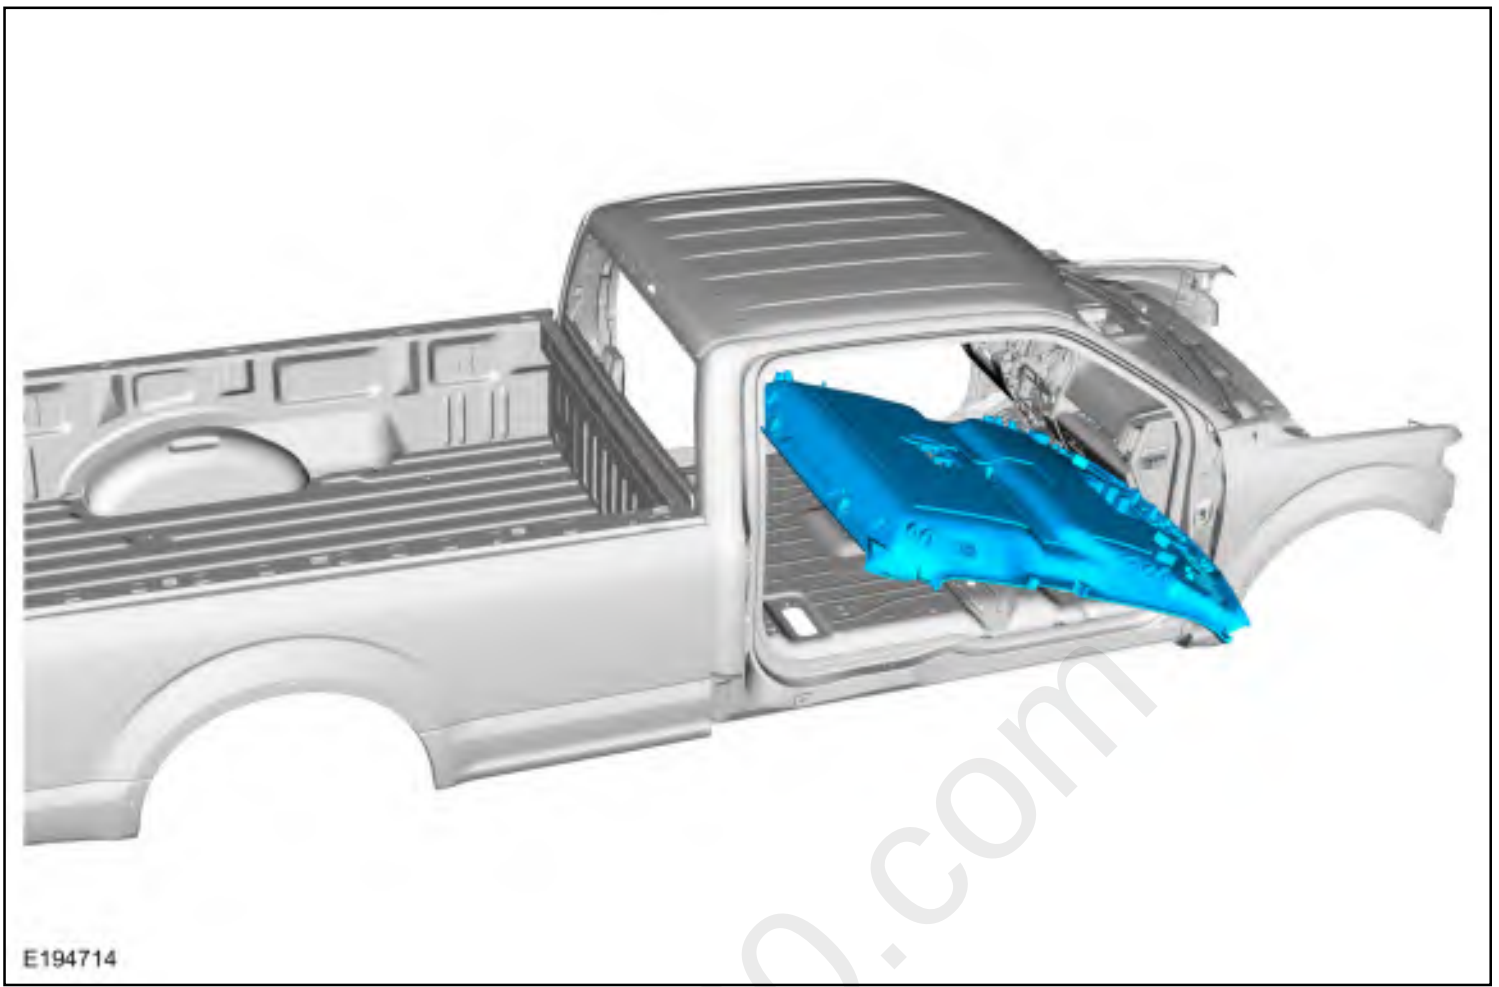

Installation

1. **NOTE:** *These steps are only necessary when installing a new component.*

NOTE: *When transferring the headliner harness to a new headliner note the location of each electrical connector during removal and maintain those locations when transferring the harness. If equipped with noise cancellation the microphone connectors are the same but are not interchangeable and must maintain their original locations for the system to operate correctly.*

NOTE: *Obtain the specified adhesive commercially. Depending on the headliner and optional wire harness(es), the purchase of multiple tubes is suggested.*

1. Using tape, mark the wire at the exit points for proper length from headliner-to-body/ roof connectors.
2. Carefully remove the wire harness from the original headliner.
3. Using a marking tool, mark the new headliner with the routing and exit points of the wire harness from the original headliner.
4. **NOTICE:** **Make sure not to damage the wire harness when cutting the excess adhesive from the wire harness.**

Cut and remove any excess adhesive from the wire harness.

5. Position the wire harness onto the new headliner, making sure the harness has enough length to be connected to the body/ roof connectors at the tape location(s) applied earlier. Apply tape to temporarily hold the wire harness in position on the headliner.
6. Apply the adhesive in the same location as the factory installed adhesive along the full length of the wire harness-to-headliner to avoid any NVH concern(s).

Material: 3M™ Super-Fast Repair Adhesive / 04747

2. **NOTE:** *Transfer parts as necessary.*

To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company

mcx30.com


Front Door Trim Panel

Base Part Number: Base Part Number: 23942


Removal

NOTE: LH side shown, RH side similar.


1. Release the clips and remove the sail panel trim cover.

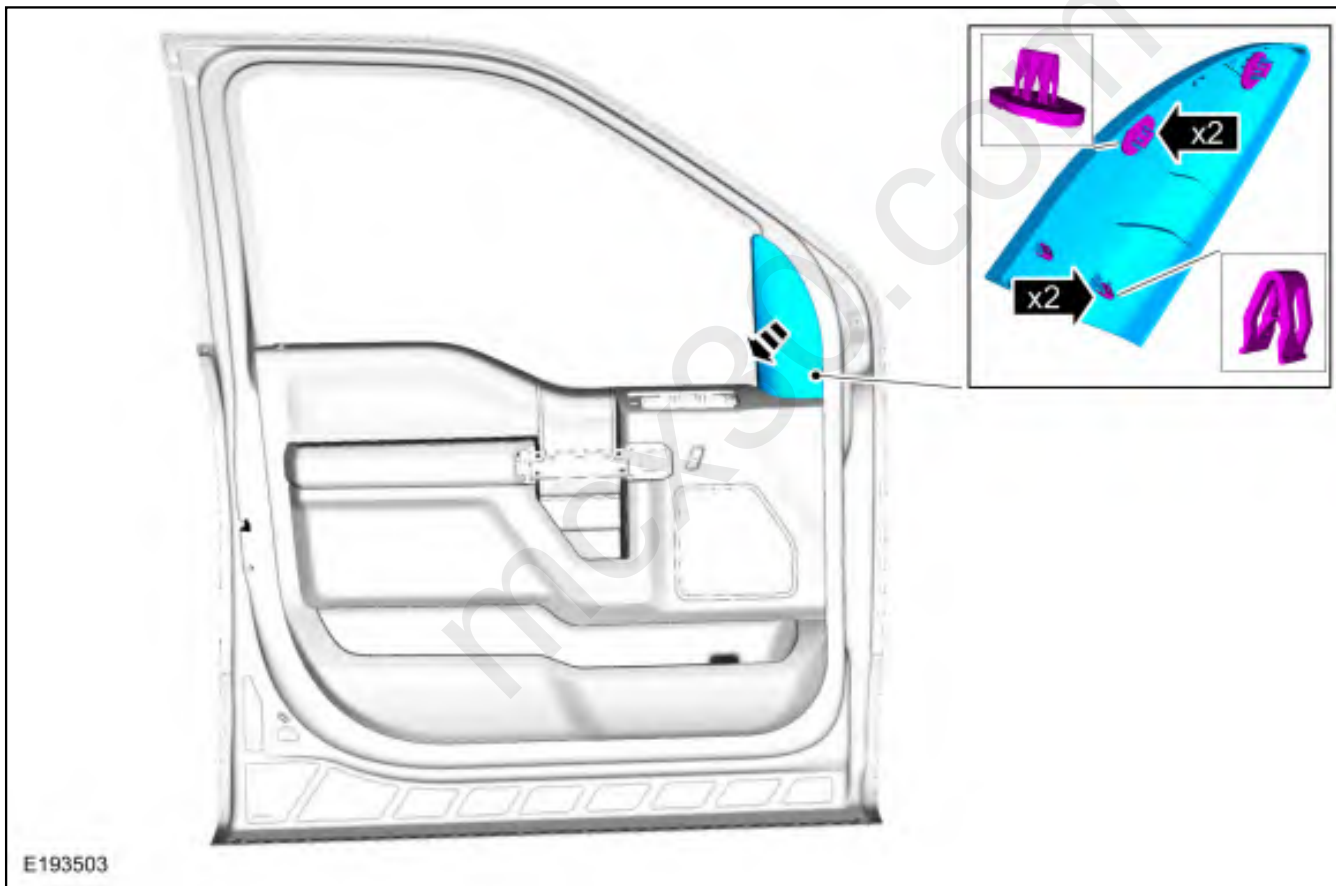

2. Release the clips and remove the door handle trim cover.

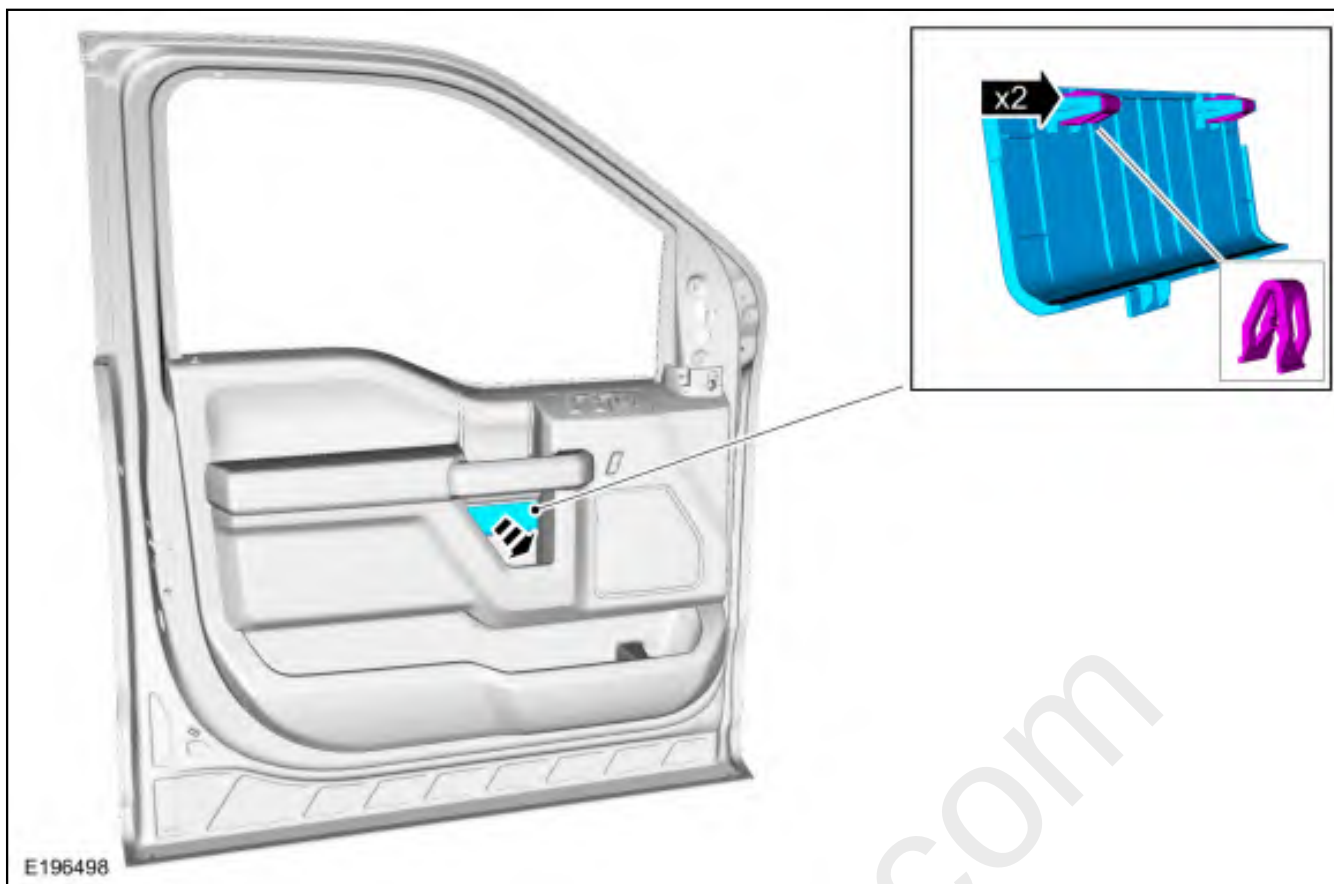

3. Remove the retainers.

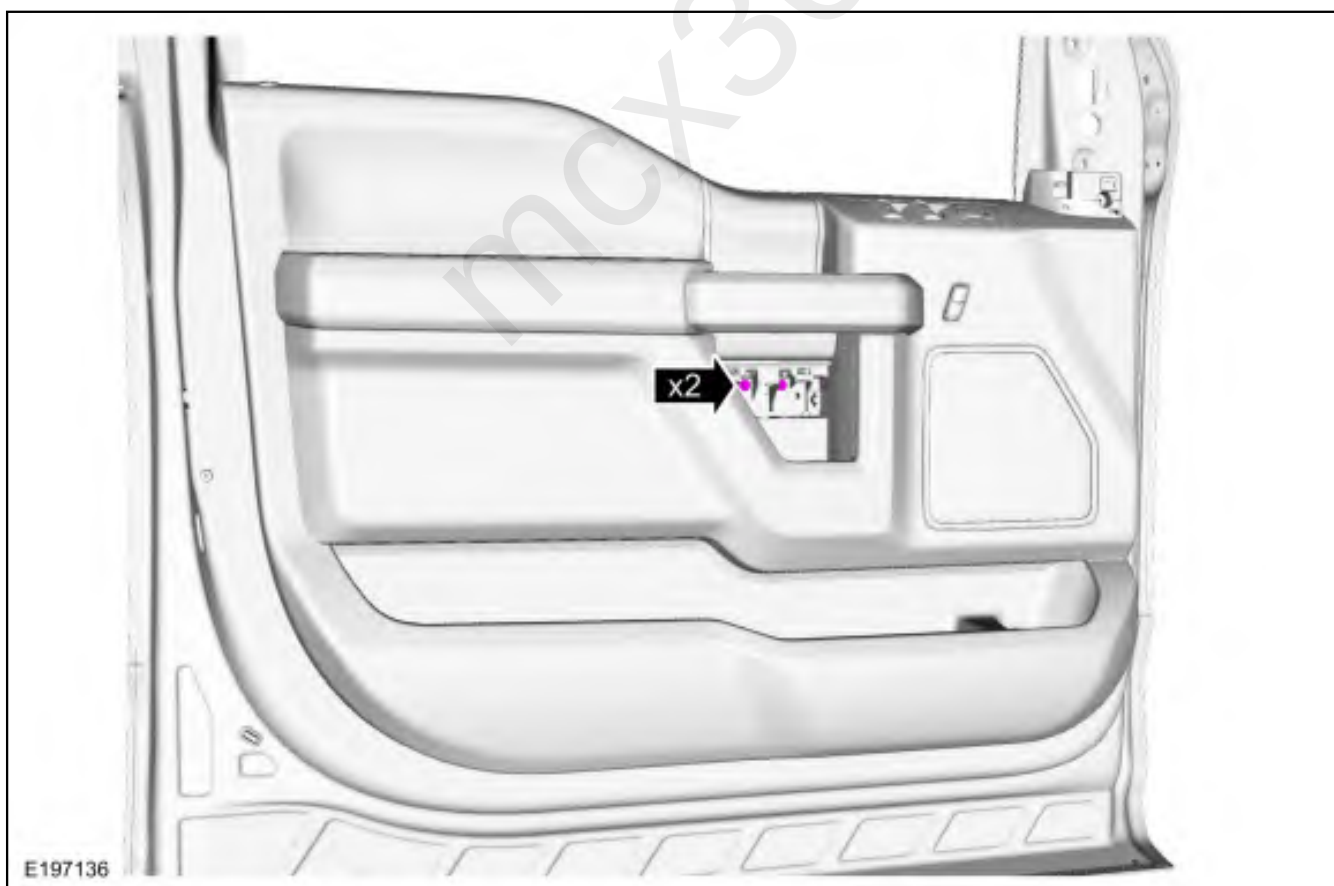


4. Remove the grab handle cover.


1. **NOTICE: Use care when releasing the clips or damage to the rear tab may occur.**

Release the clips.


2. Slide the cover forward to disengage the rear tab.

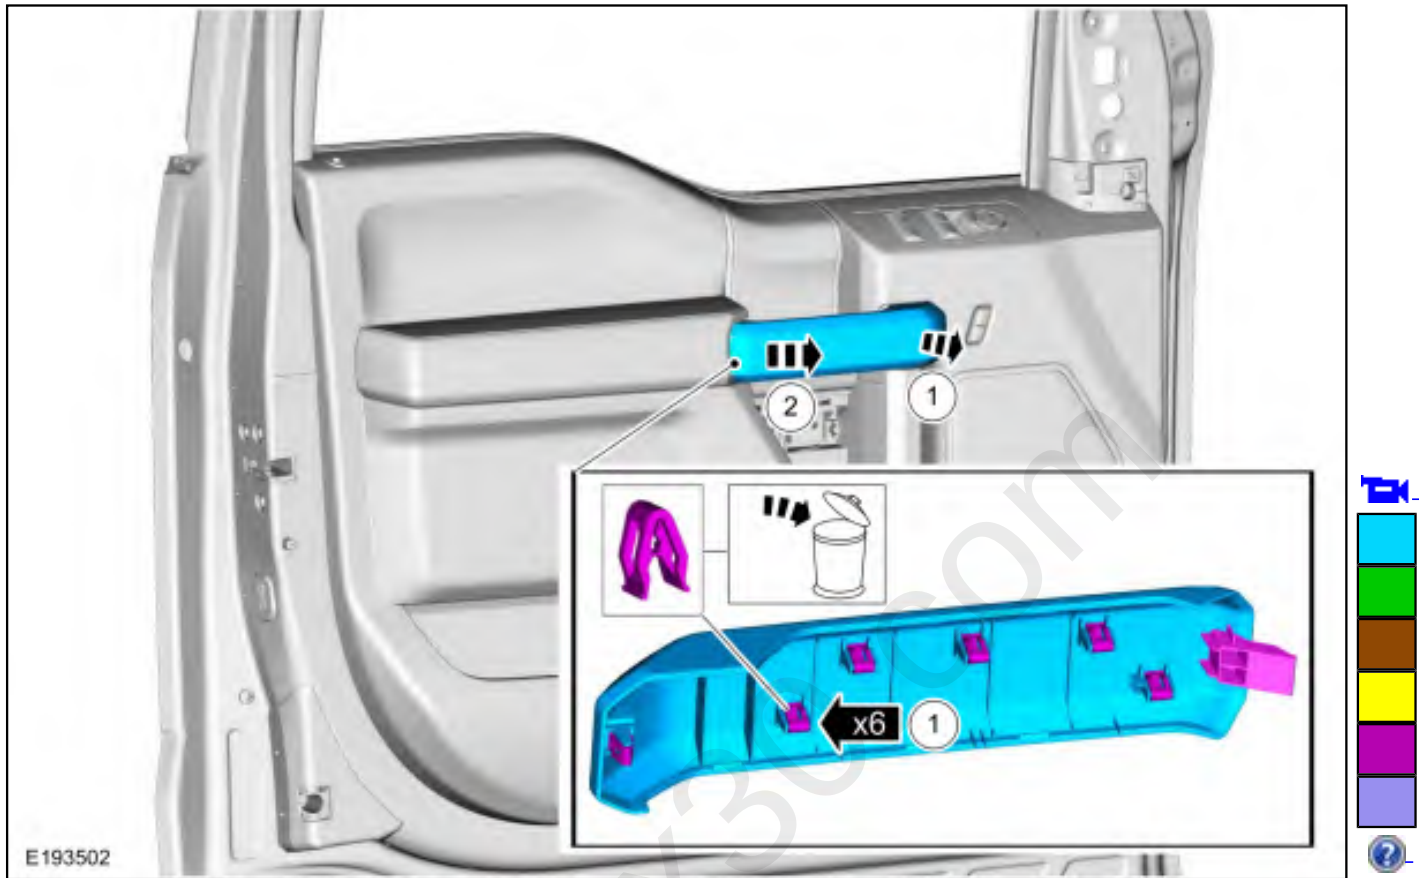

5. Remove the door trim panel bolts.

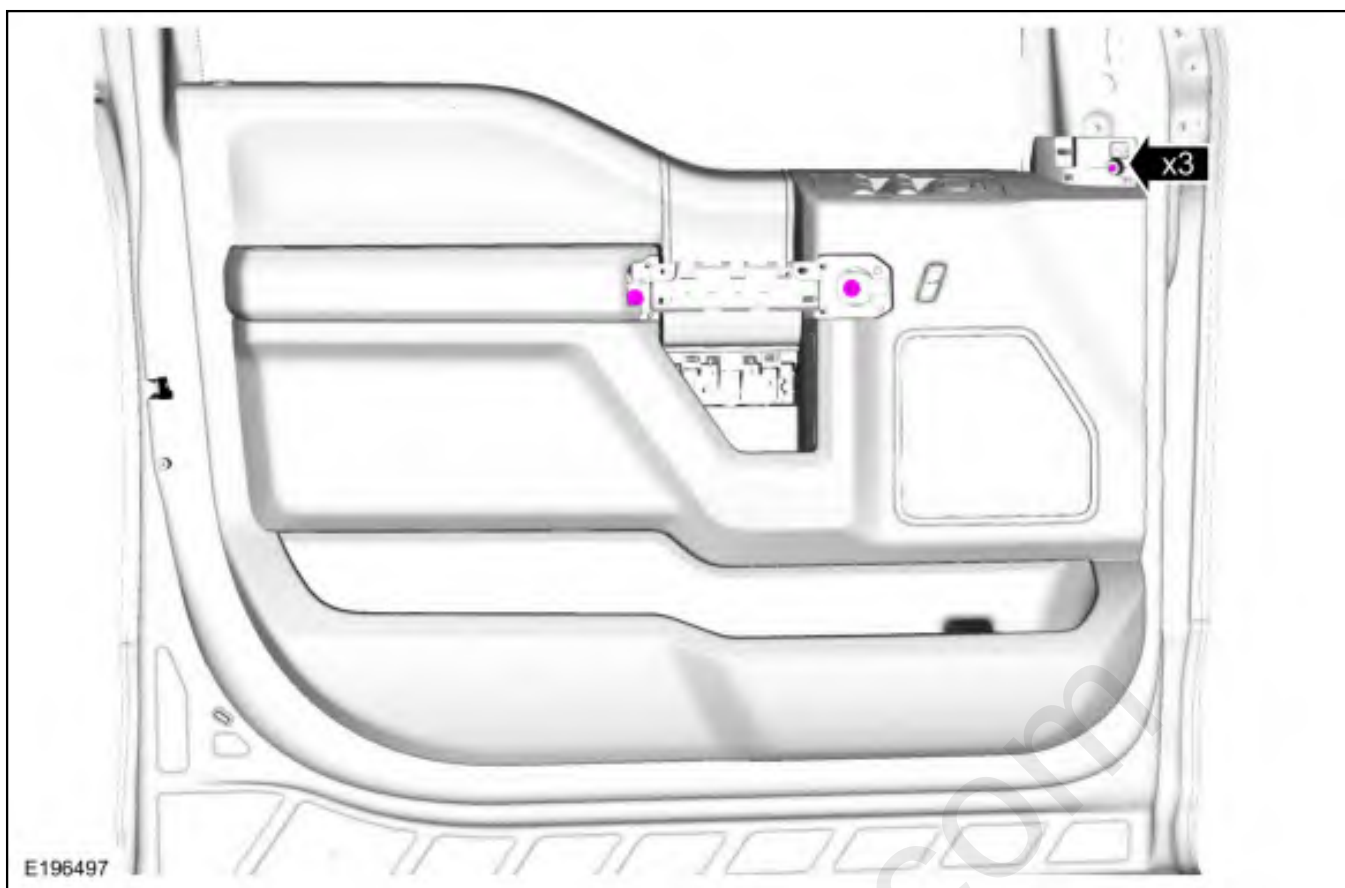


6. Remove the front door trim panel lower retainers.

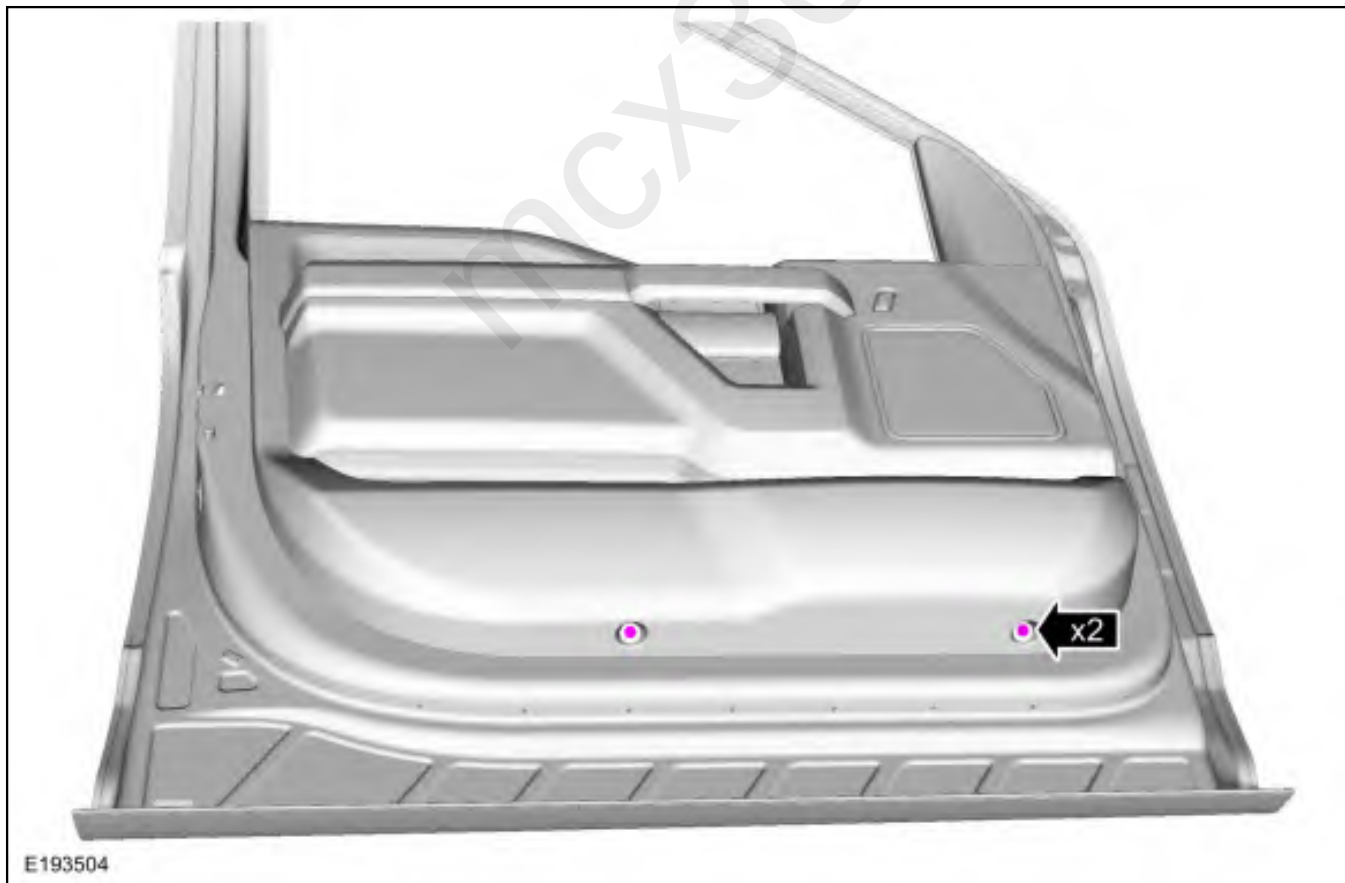

NOTE: Removal of the filler trim panel is not required to remove the front door trim panel.


7. Release the clips and disengage the weatherstrip from around the front door filler trim panel.

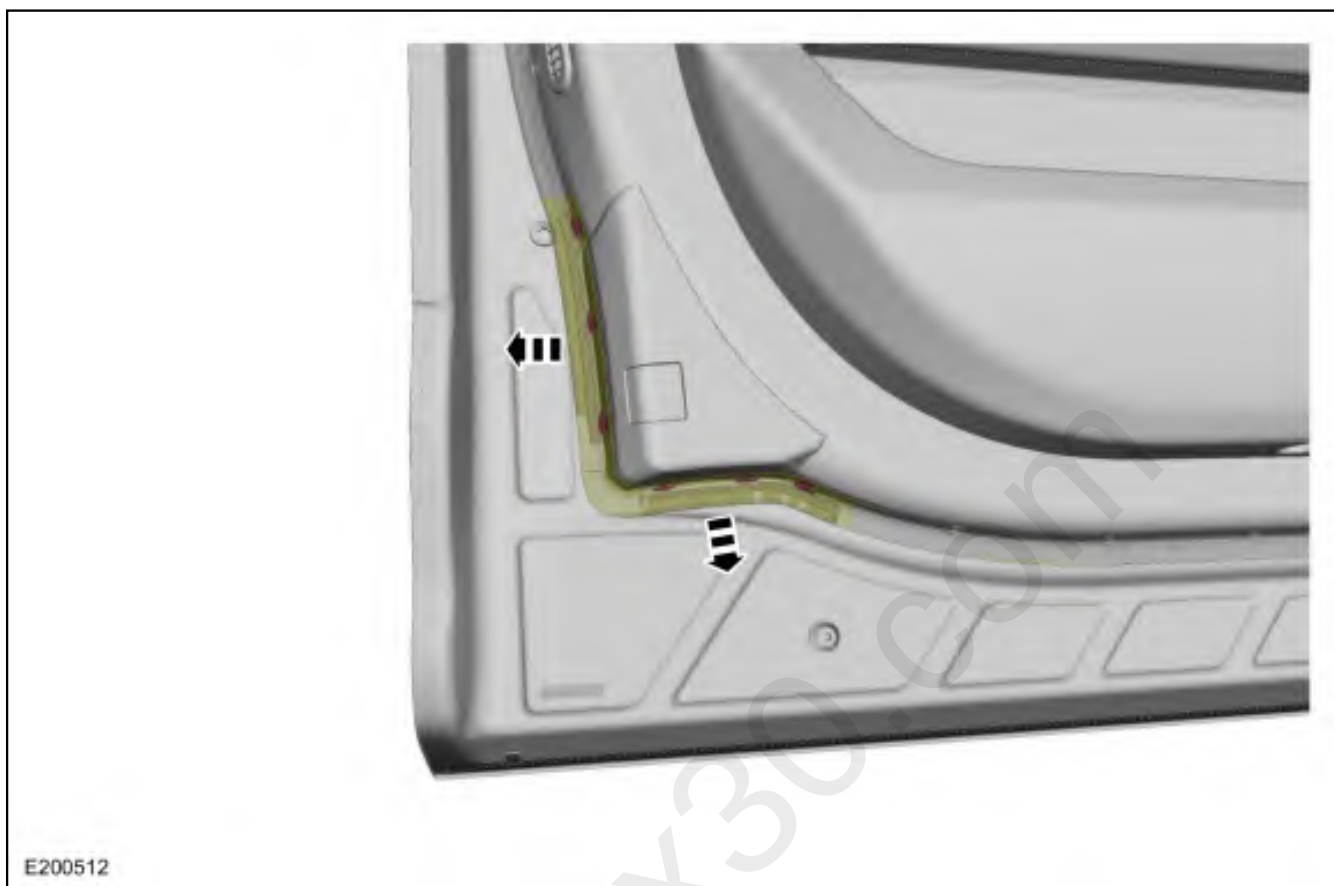


8. Remove the front door filler trim panel reflector.




E200508

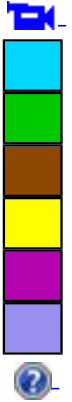

9. Remove the front door filler trim panel.
 1. Remove the front door filler trim panel retainer.
 2. Release the front door filler trim panel lower clip.
 3. Disengage the hook and remove the front door filler trim panel.

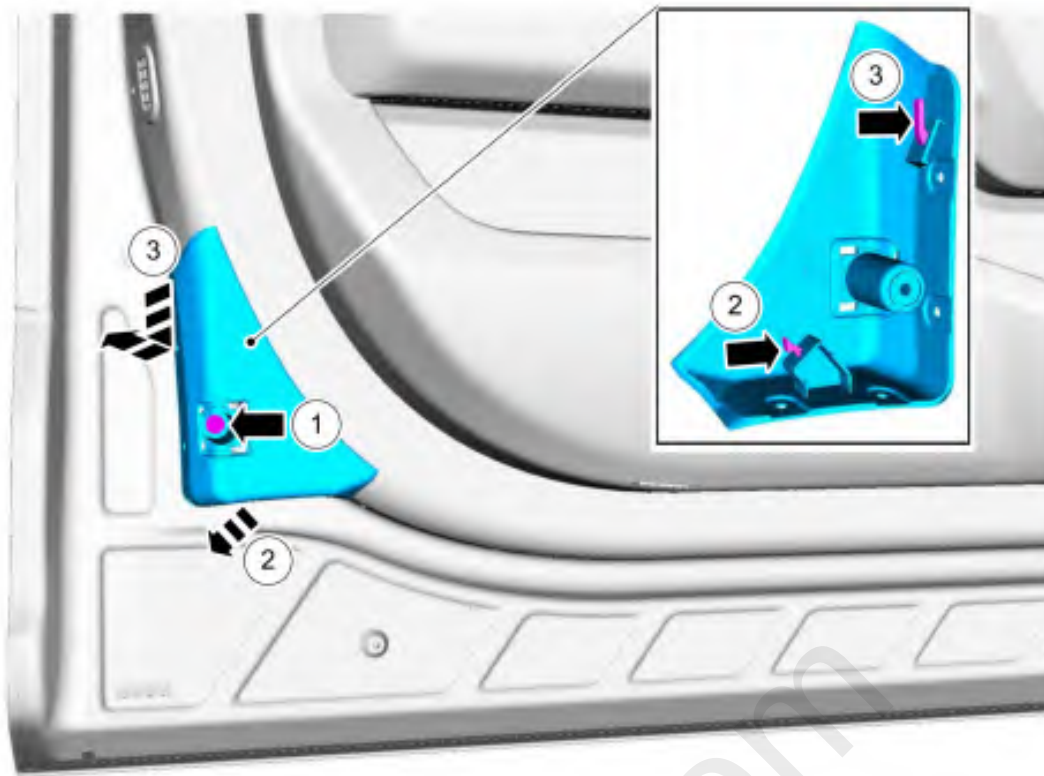


E200648

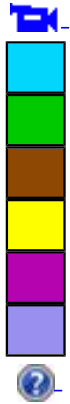


Vehicles with manual windows

10. Remove the window regulator handle.
 1. Position aside the cover.
 2. Remove the retainer and the window regulator handle.
Torque: 33 lb.in (3.7 Nm)

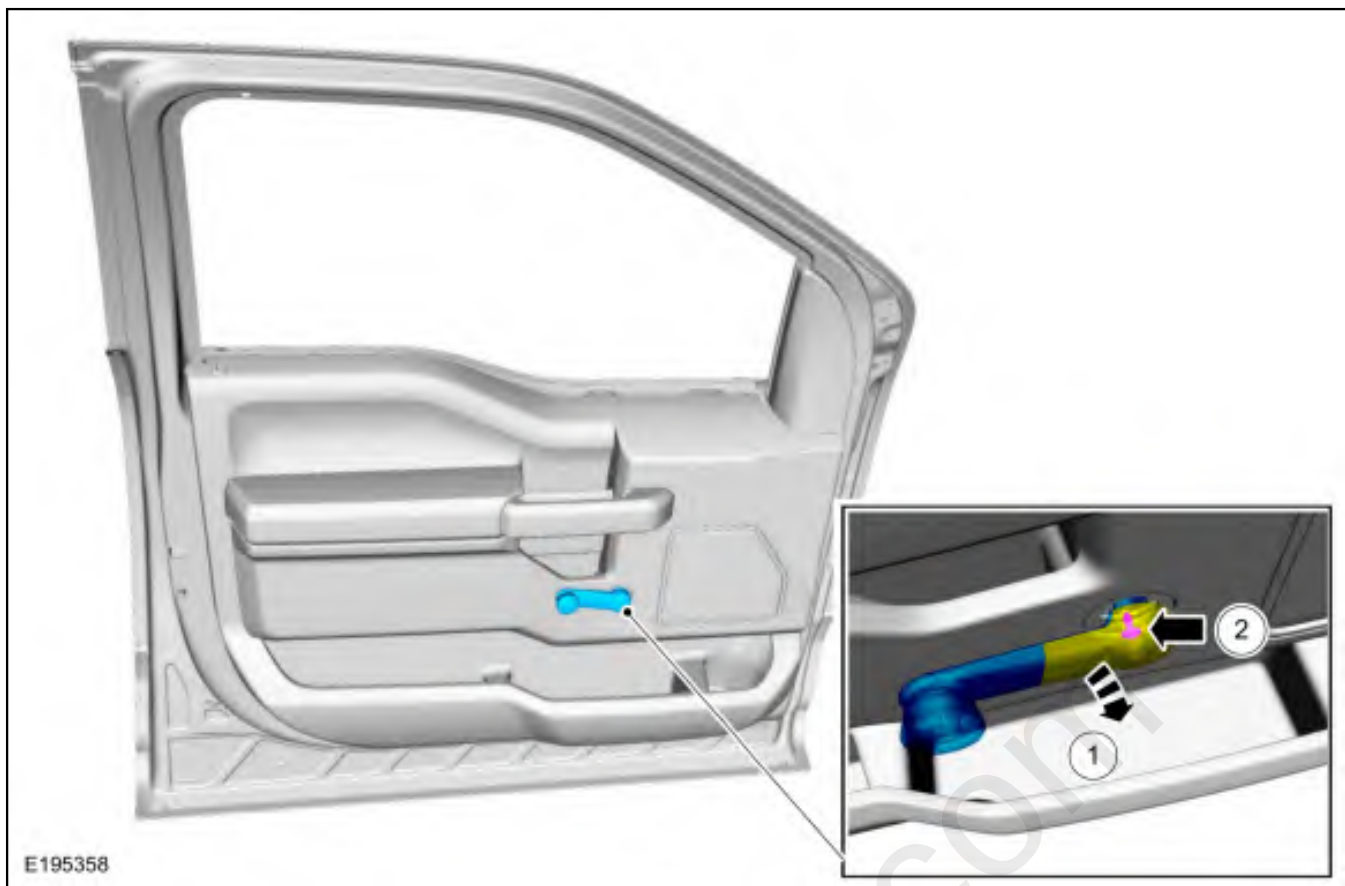


All vehicles

- 11. Release the front door trim panel clips.

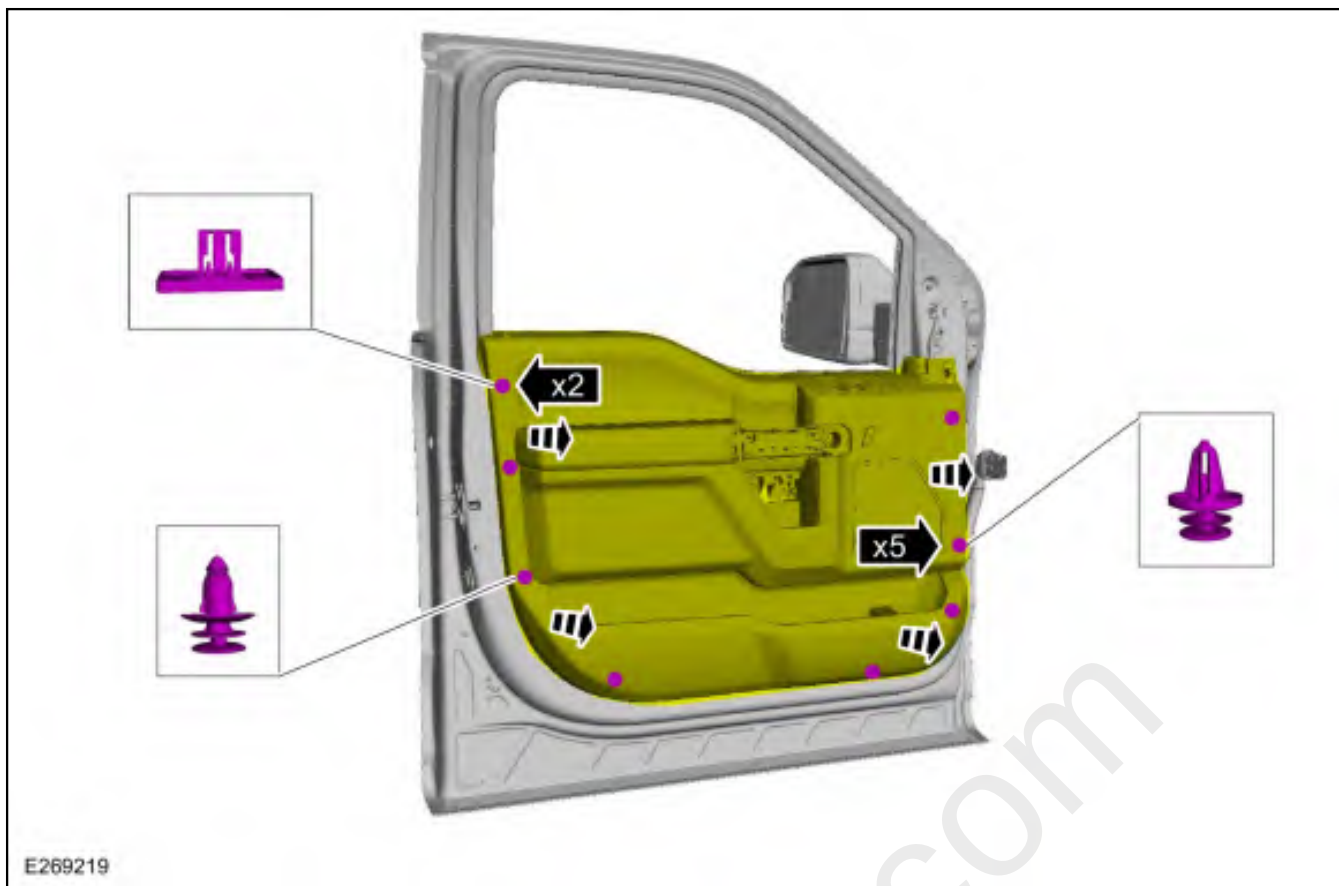

12. Remove the front door trim panel.

1. Lift upward and outward on the front door trim panel.
2. Release the tab and disconnect the interior front door handle cable.
3. If equipped, disconnect the front door window control switch electrical connector.
4. Disconnect the front door lock control switch.

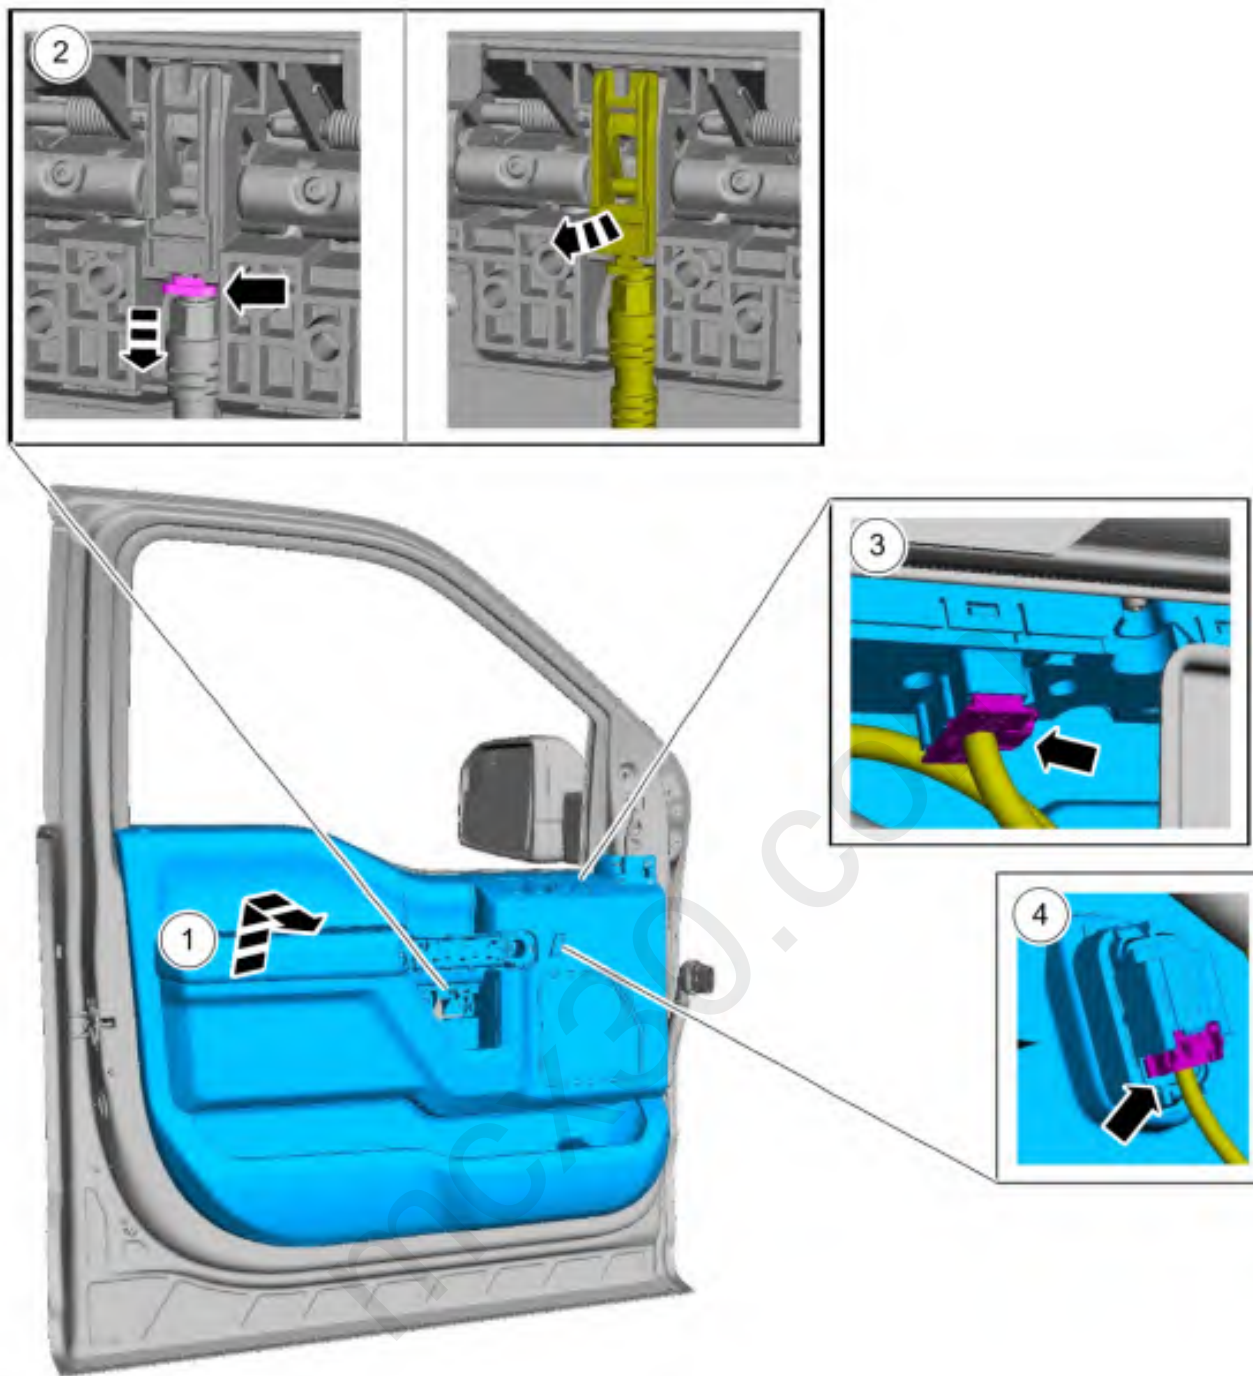

E269216

Installation


1. To install, reverse the removal procedure.

Rear Door Trim Panel - SuperCrew

Base Part Number: Base Part Number: 27406

Removal

1. Release the clips and remove the door handle trim cover.

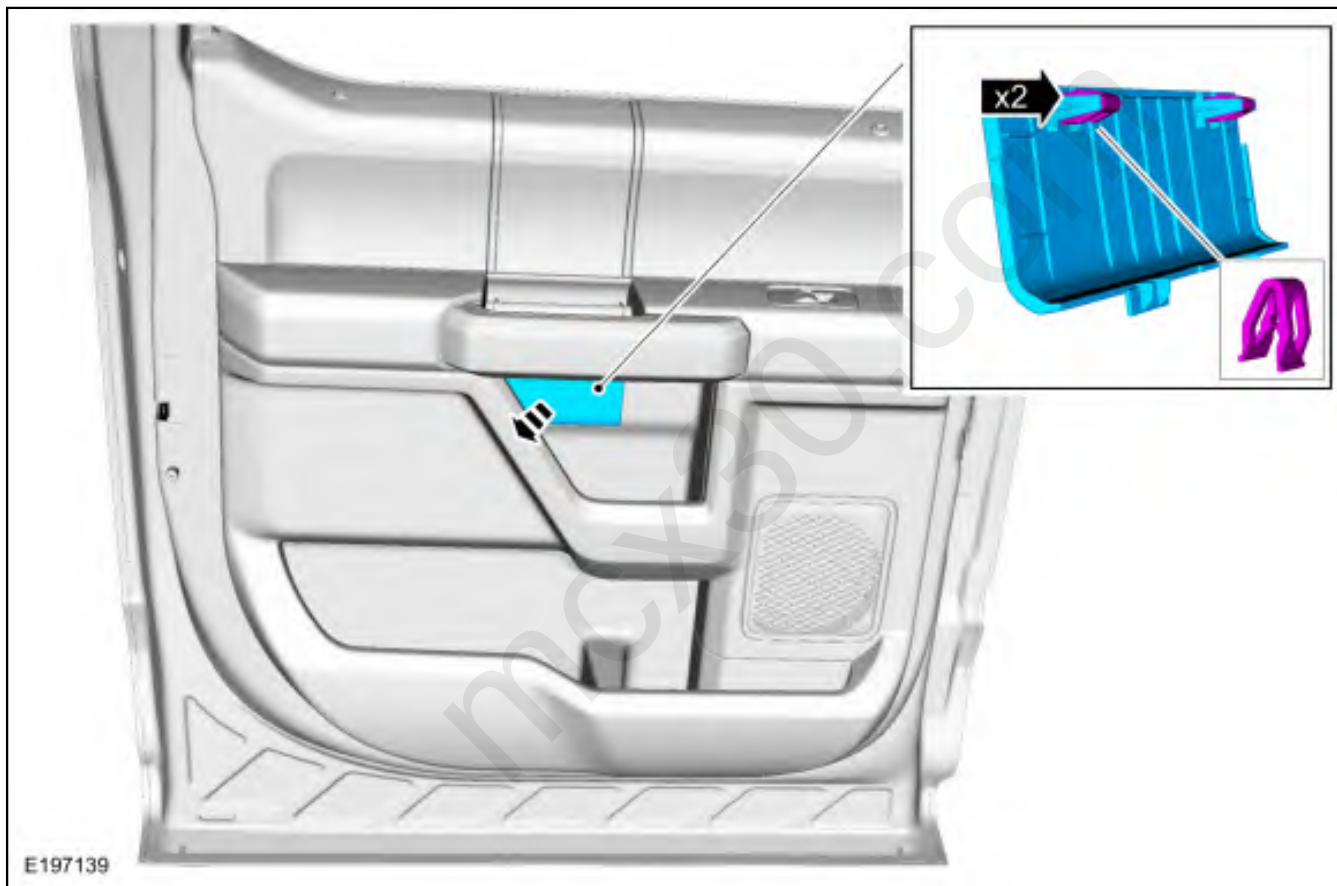


2. Remove the retainers.



E197140



3. Release the clips and remove the door grab handle.

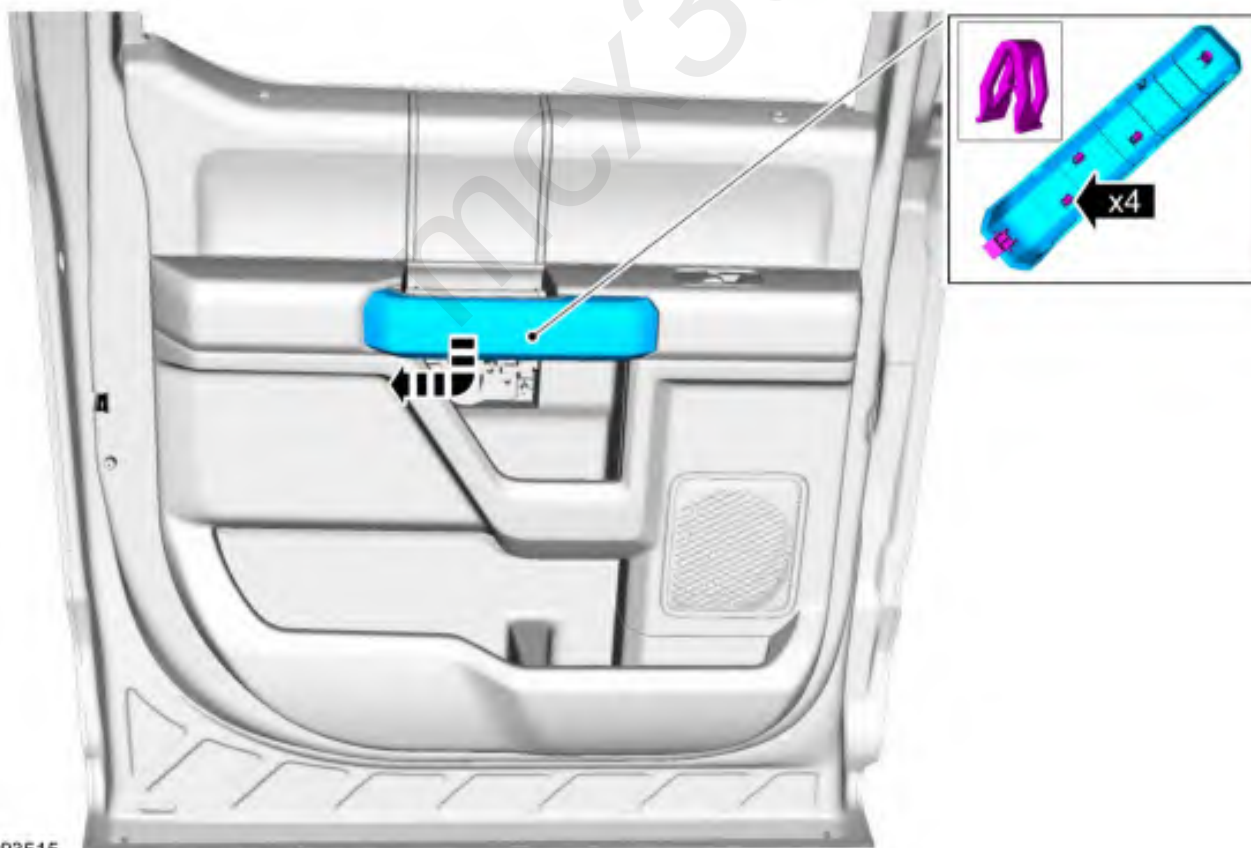


E193515




4. Remove the door trim panel bolts.



E196949

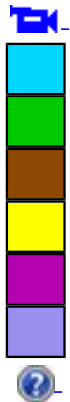

5. Remove the rear door trim panel lower retainers.

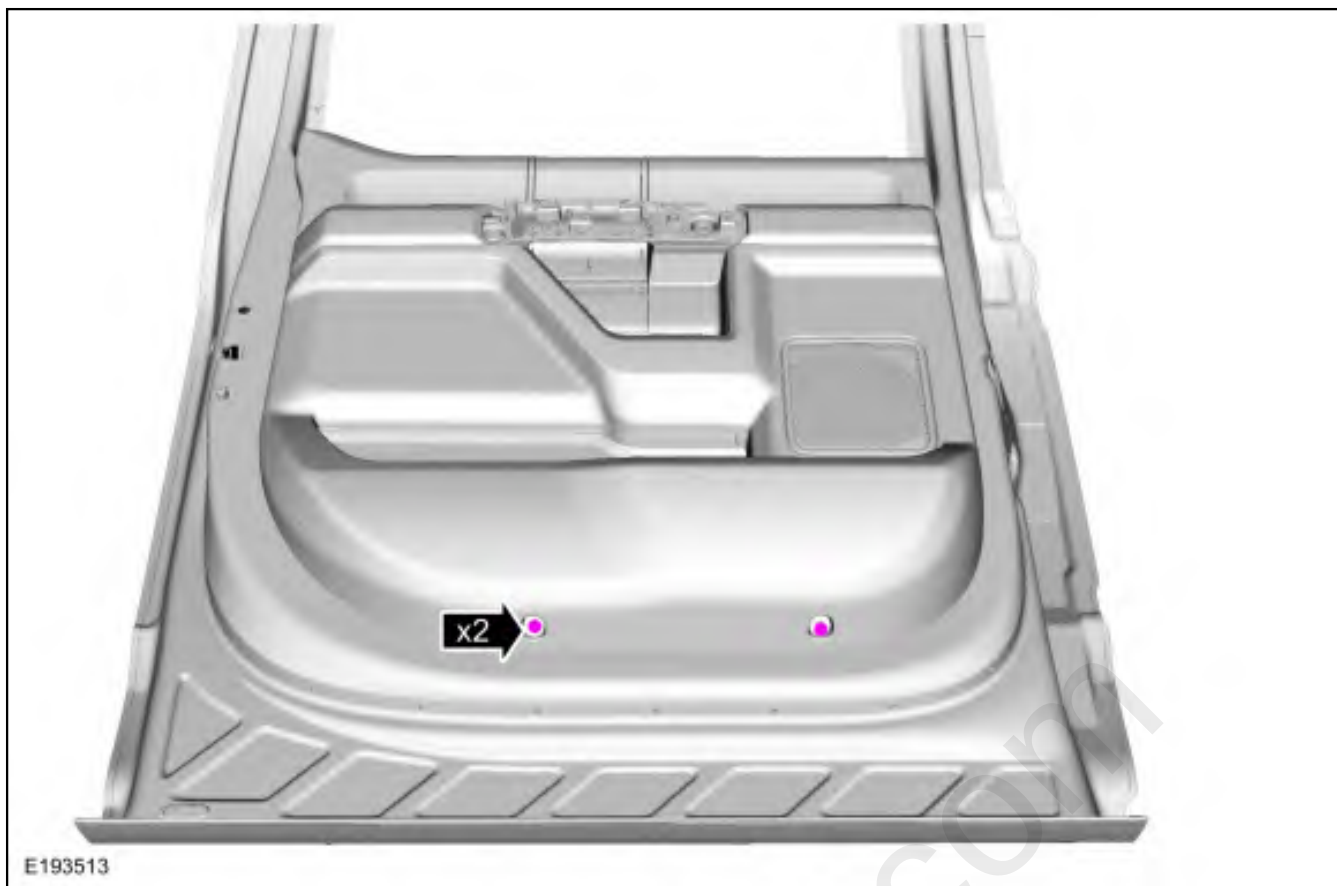


Vehicles With Manual Rear Windows

NOTE: LH side shown, RH side similar.


6. Remove the window regulator handle.
 1. Position aside the cover.
 2. Remove the retainer and the window regulator handle.

Torque: 33 lb.in (3.7 Nm)

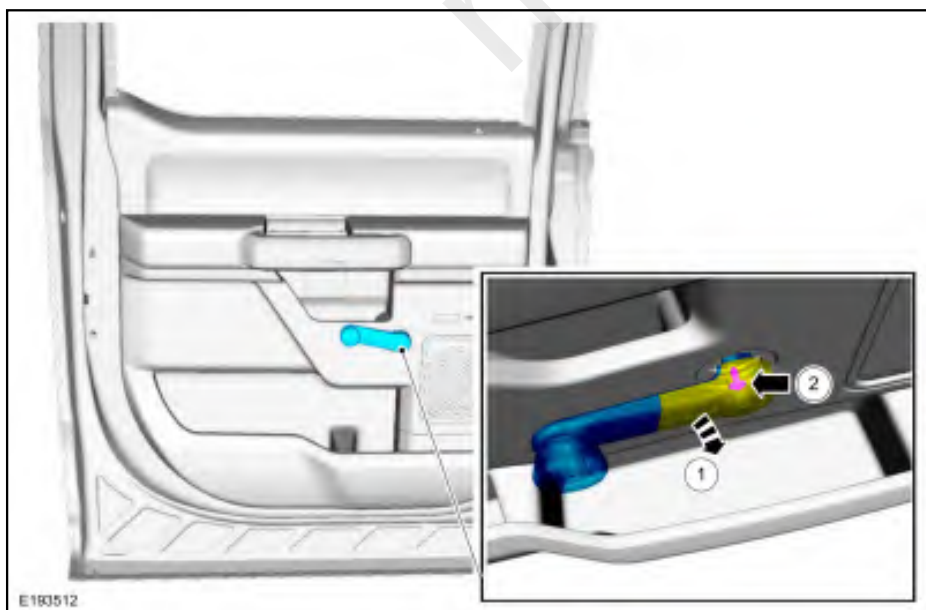


All vehicles

7. Release the rear door trim panel clips.

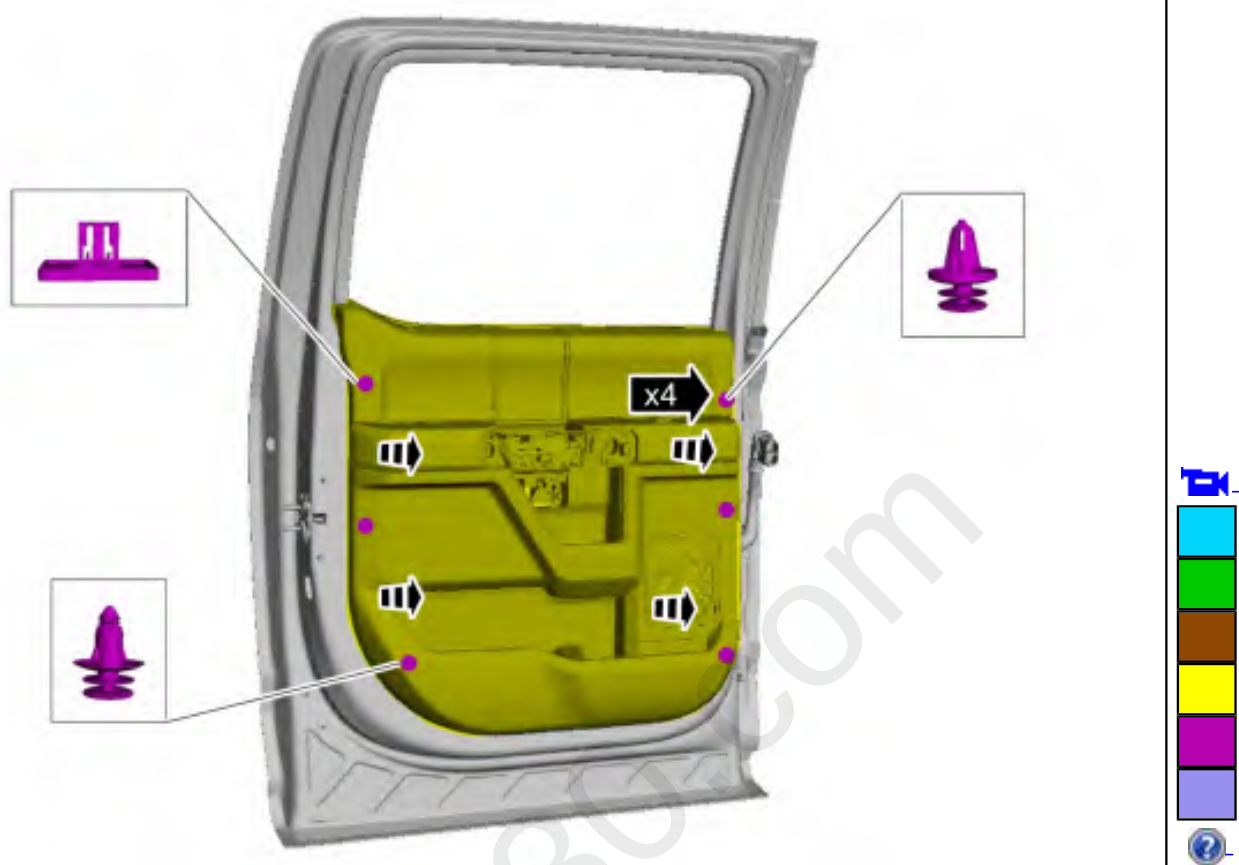

8. Remove the rear door trim panel.

1. Lift upward and outward on the rear door trim panel.
2. Release the tab and disconnect the interior rear door handle cable.
3. If equipped, disconnect the rear door window control switch.

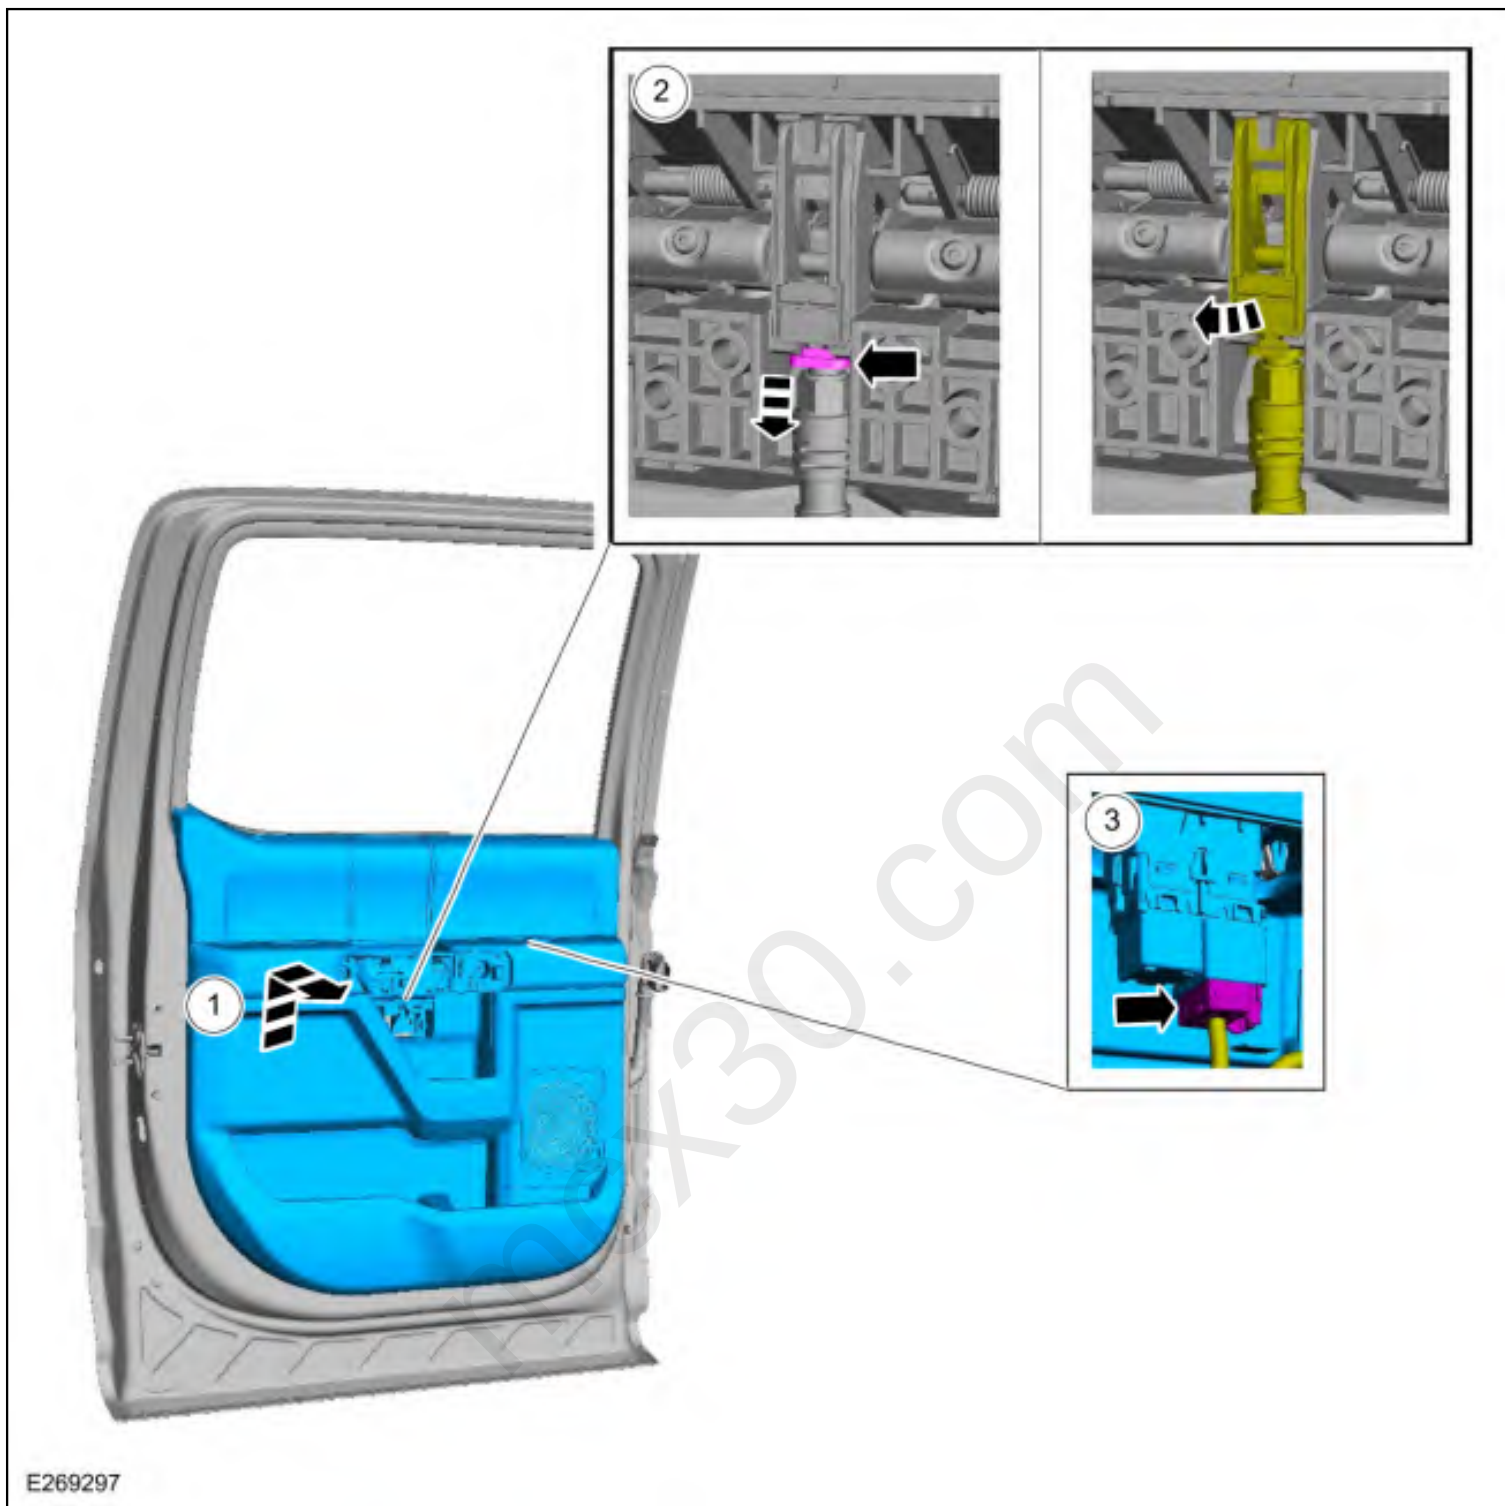

Installation

- 1. To install, reverse the removal procedure.