

Front Fender Moulding


Base Part Number: Base Part Number: 16038

Removal

NOTE: Removal steps in this procedure may contain installation details.

NOTE: LH side shown, RH side similar.


1. Remove the push pins and the screws.
Torque: 9 lb.in (1.0 Nm)

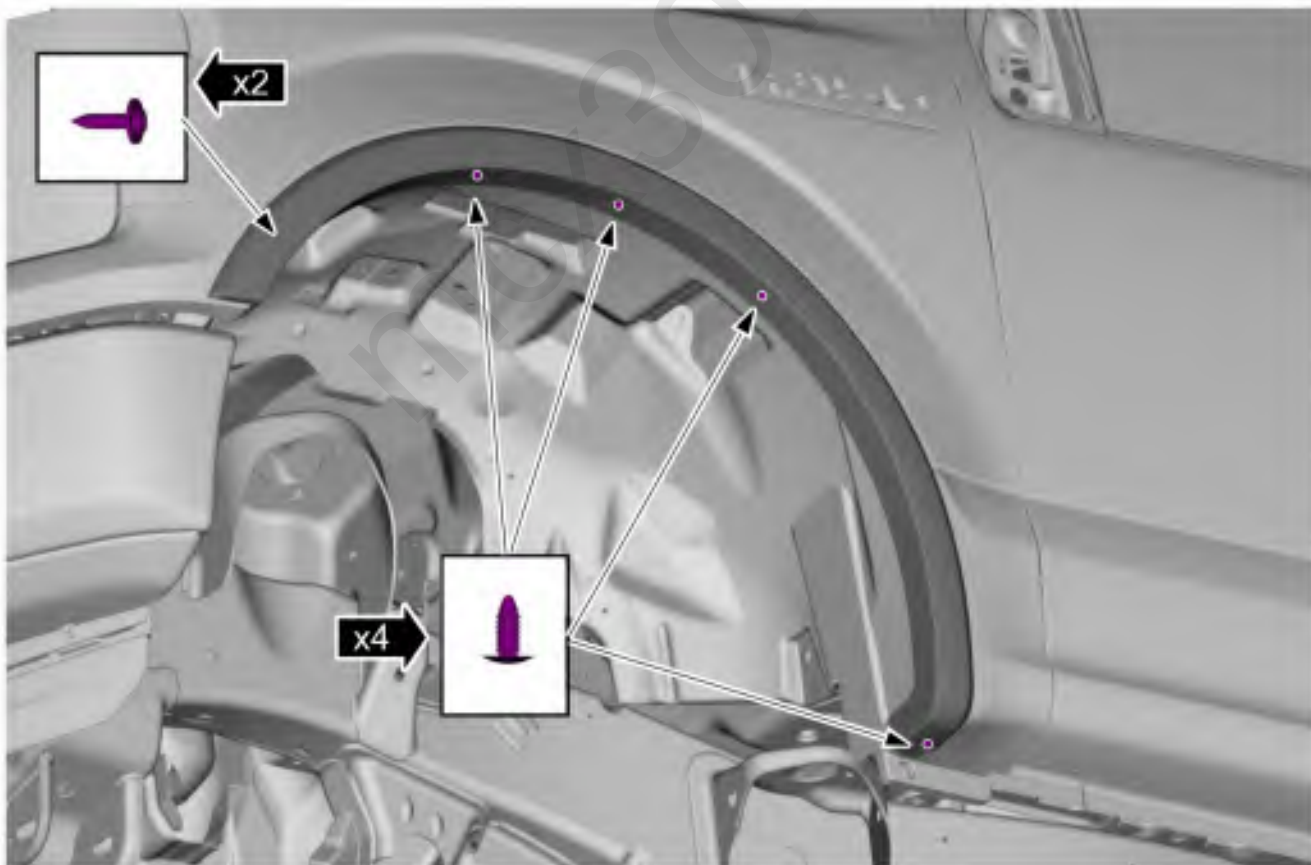

E193143



2. Using a non-marring trim tool, disengage the push pin retainers from the fender and remove the moulding.

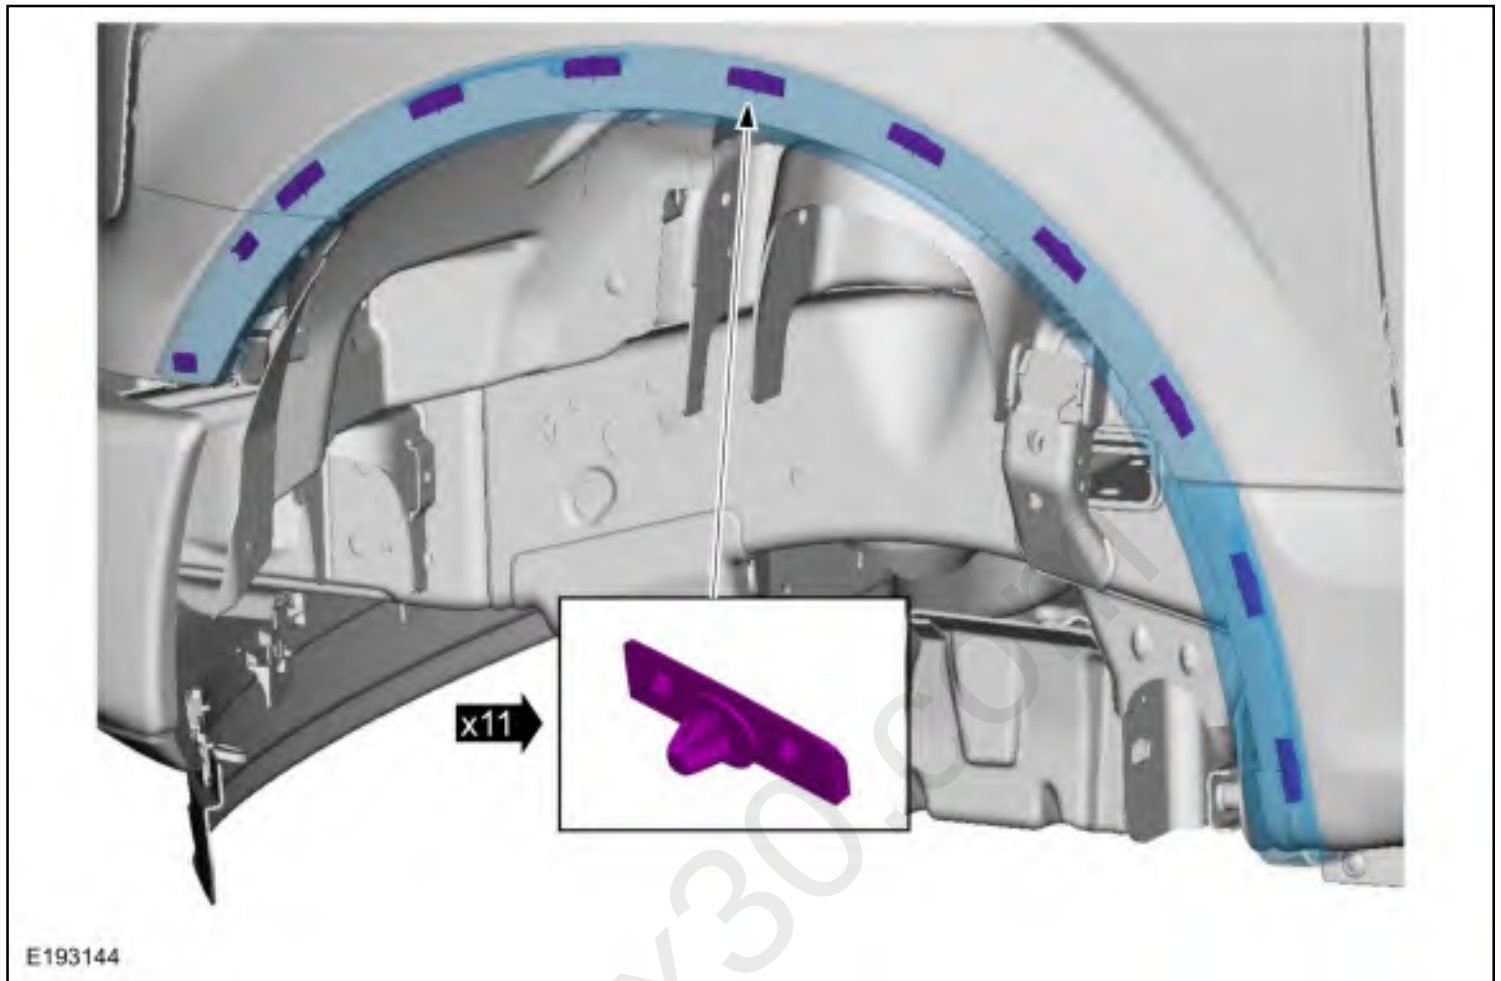

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company