


Rear Door Upper Moulding

Removal

NOTE: Removal steps in this procedure may contain installation details.

All vehicles

1. Lower the rear door window glass.

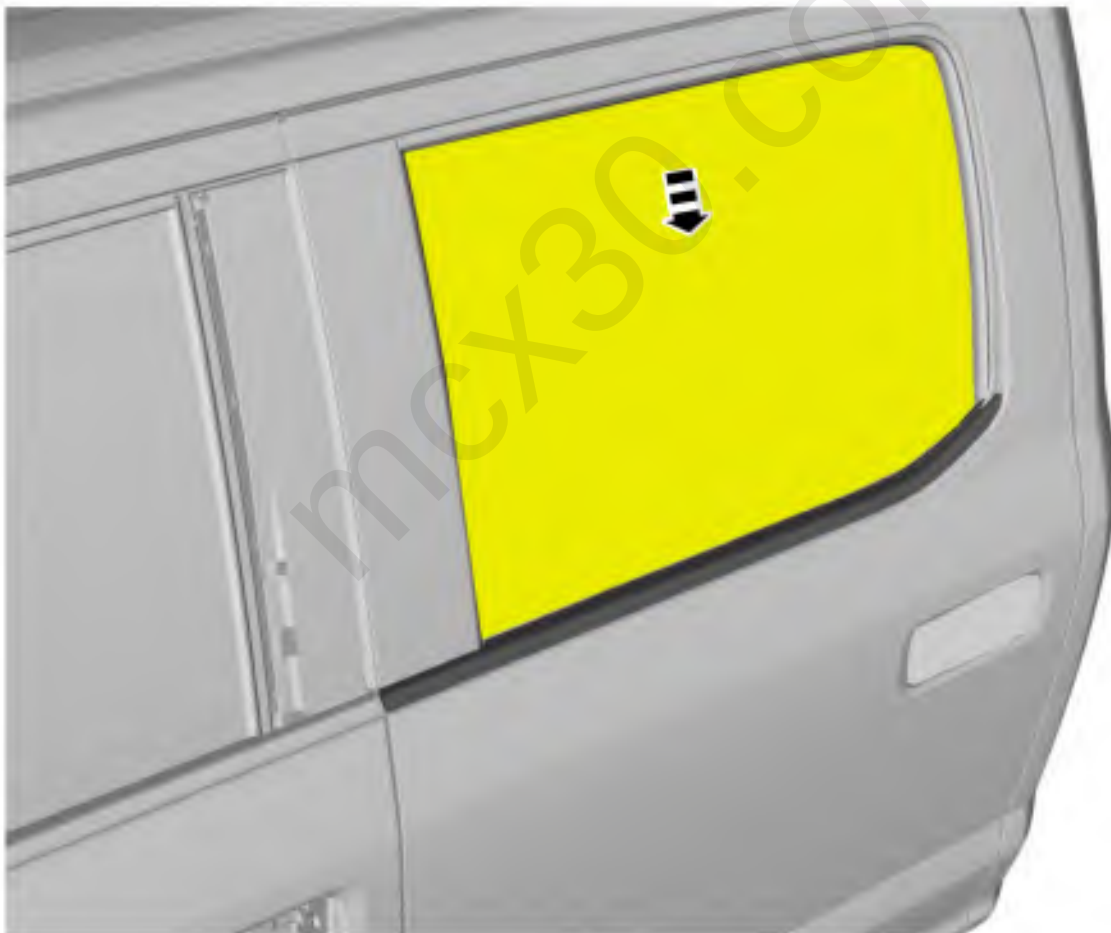


E223786



SuperCab

2. Using a non-marring trim tool, carefully pry along edge of the outer belt moulding to release retainers


and remove the outer belt moulding.

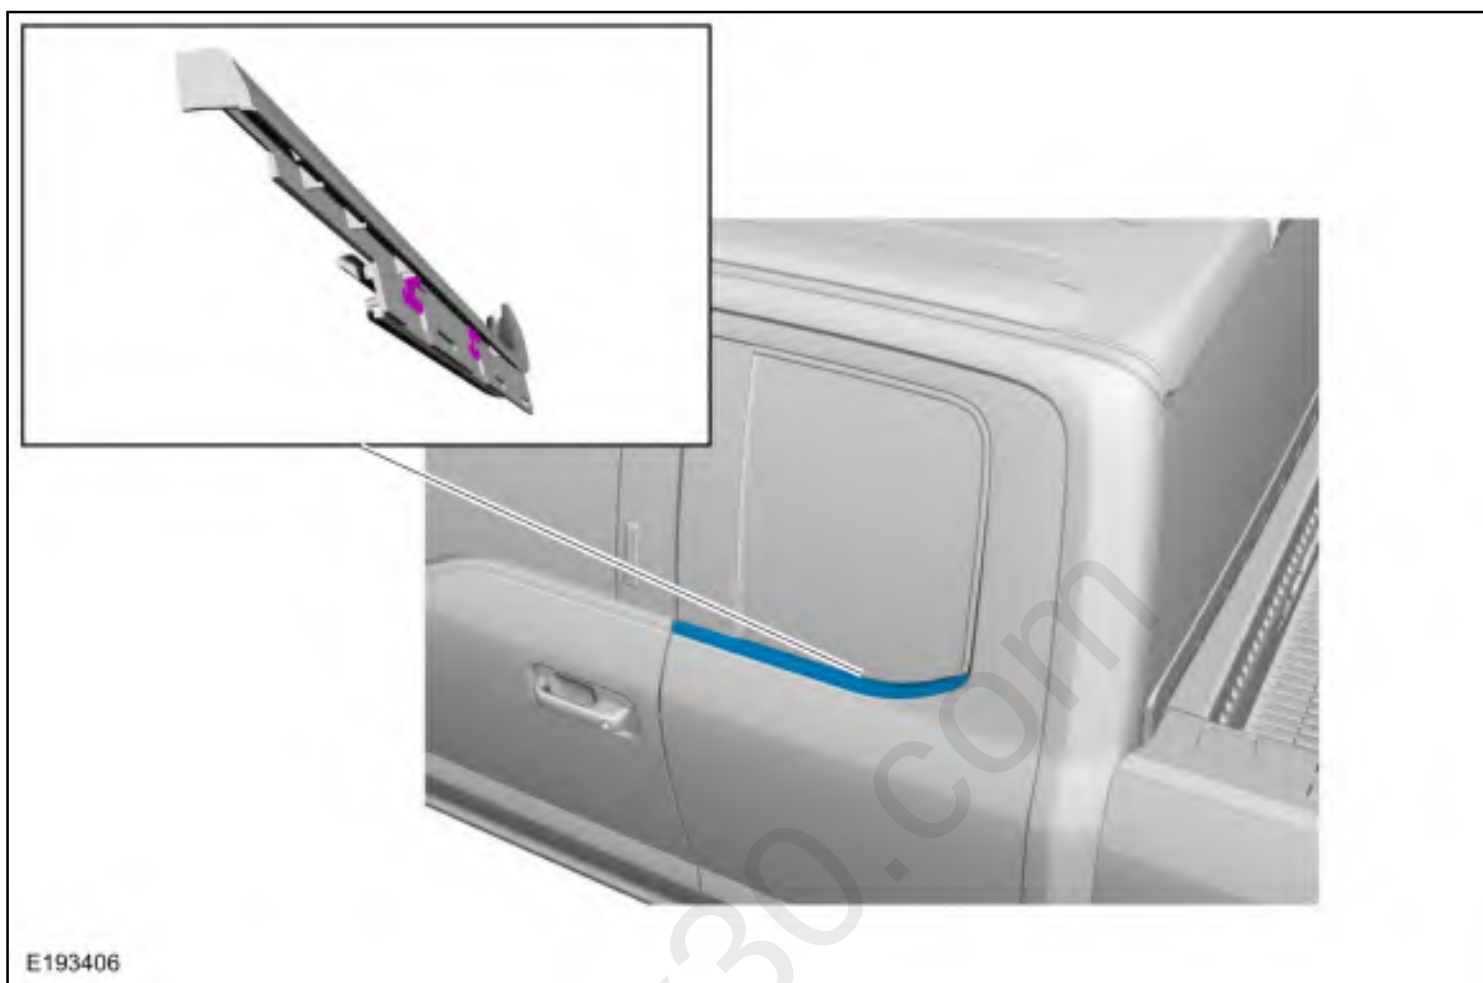

3. Position aside the glass run weatherstrip



4. Remove the 4 screws.
Torque: 13 lb.in (1.5 Nm)

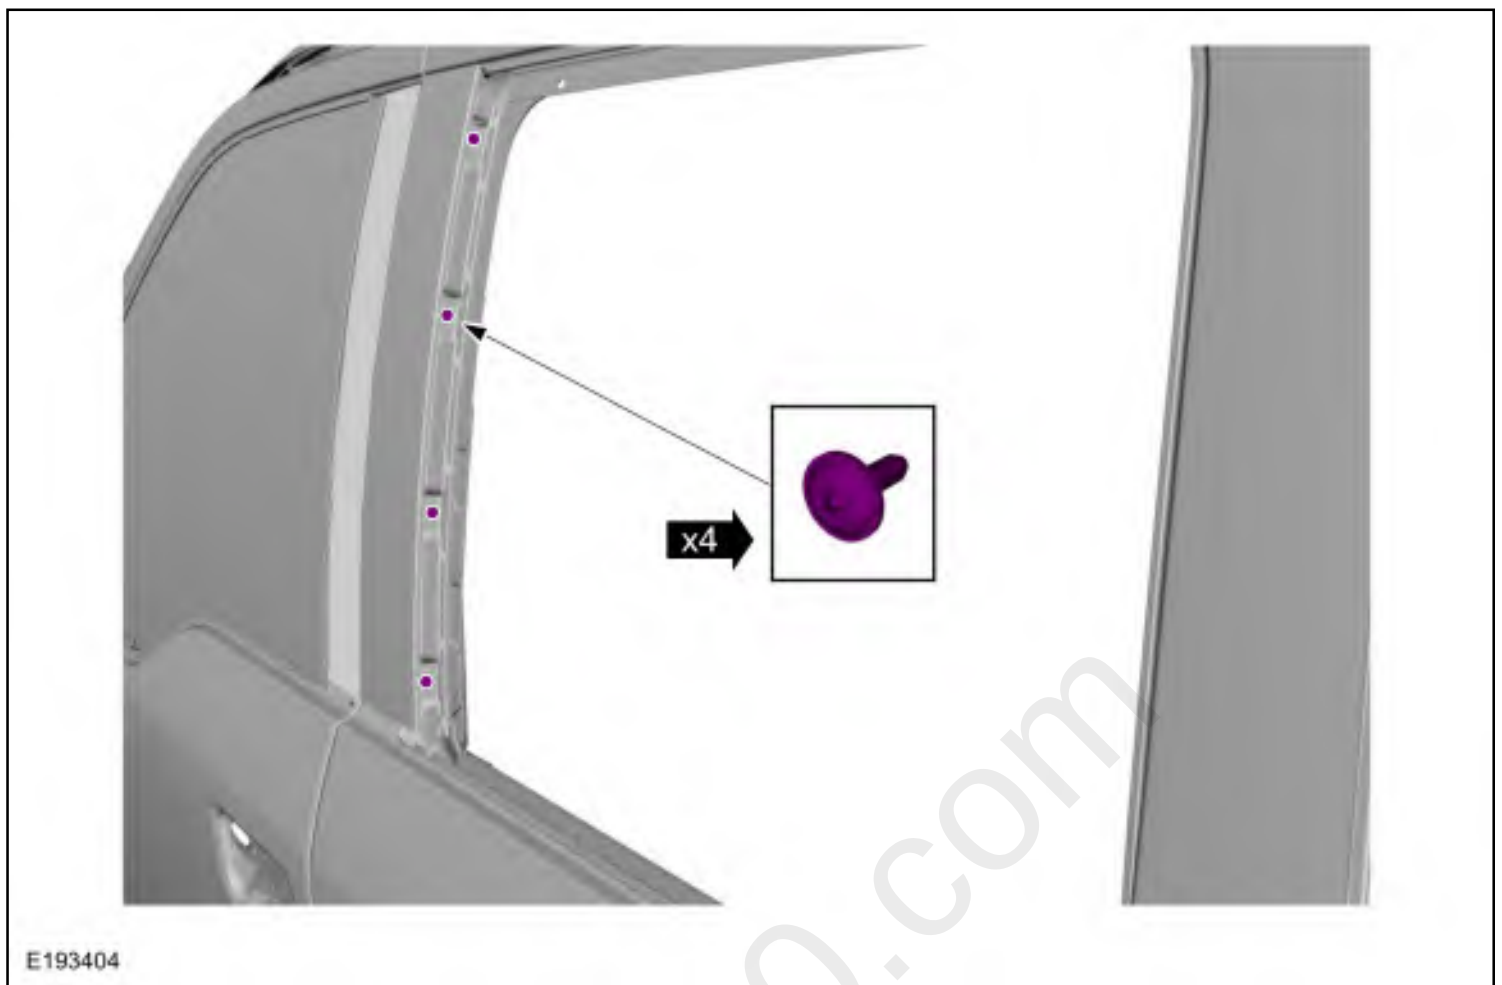

5. **NOTE:** *The plastic clips have a snap-in feature to keep them retained on the moulding and can be removed from the door then reattached to the moulding.*

Using a non-marring trim tool, detach the 4 push pin retainers and remove the moulding.




E193407



SuperCrew


6. Remove the screw at front edge of the door.
Torque: 8 lb.in (.9 Nm)

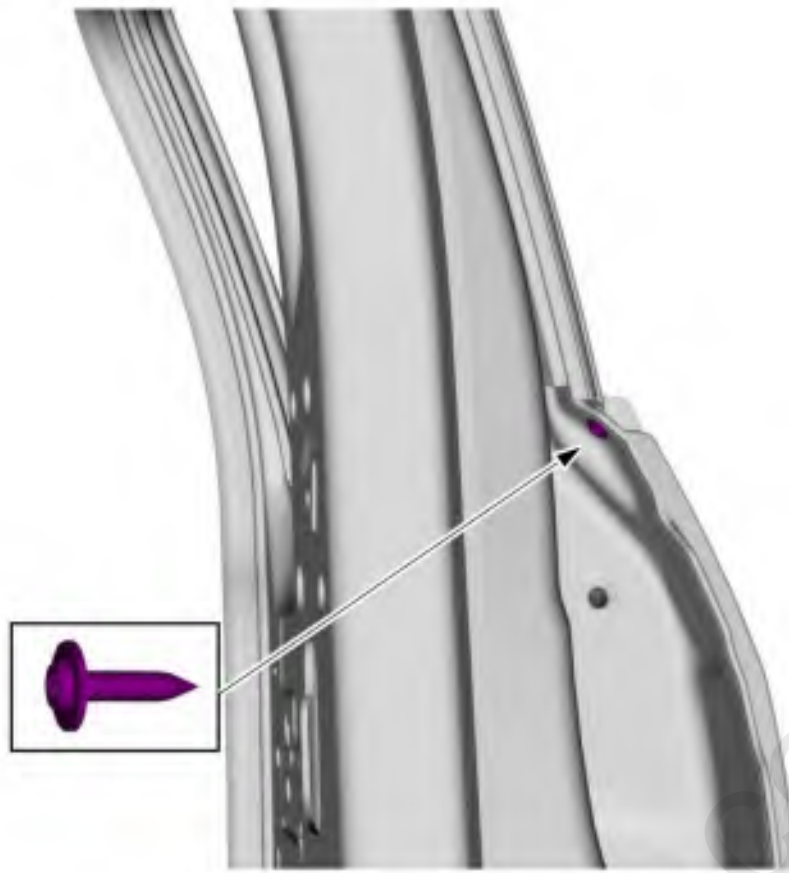

E193402




7. Using a non-marring trim tool, carefully pry along the edge of the outer belt moulding to release.

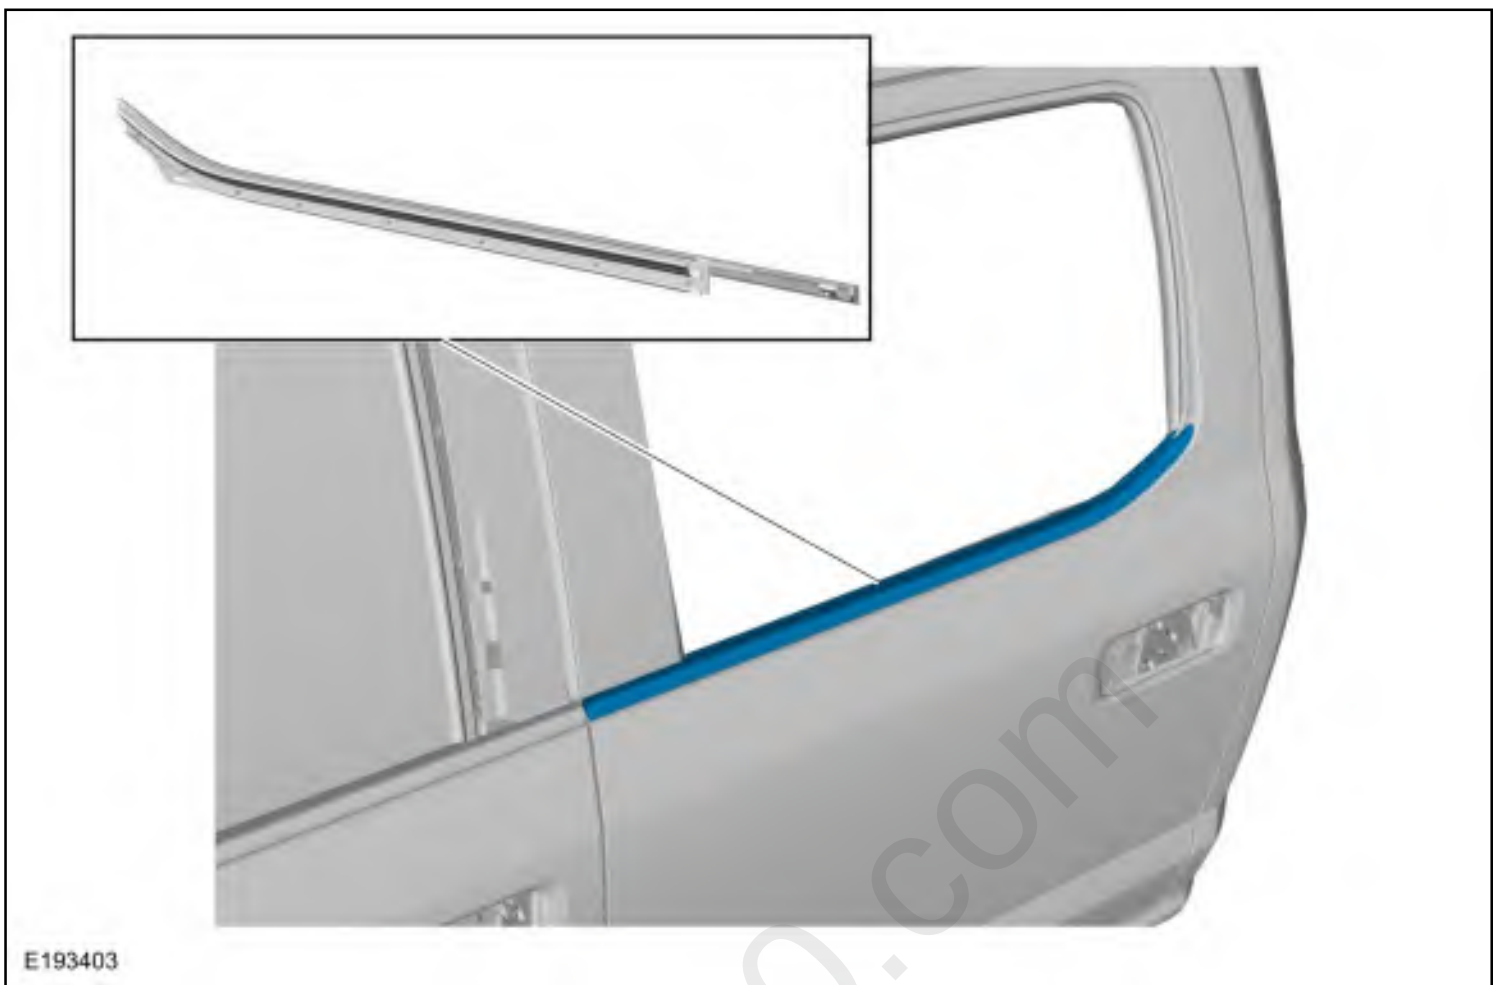


8. Position aside the glass run weatherstrip



9. Remove the 4 screws.
Torque: 13 lb.in (1.5 Nm)

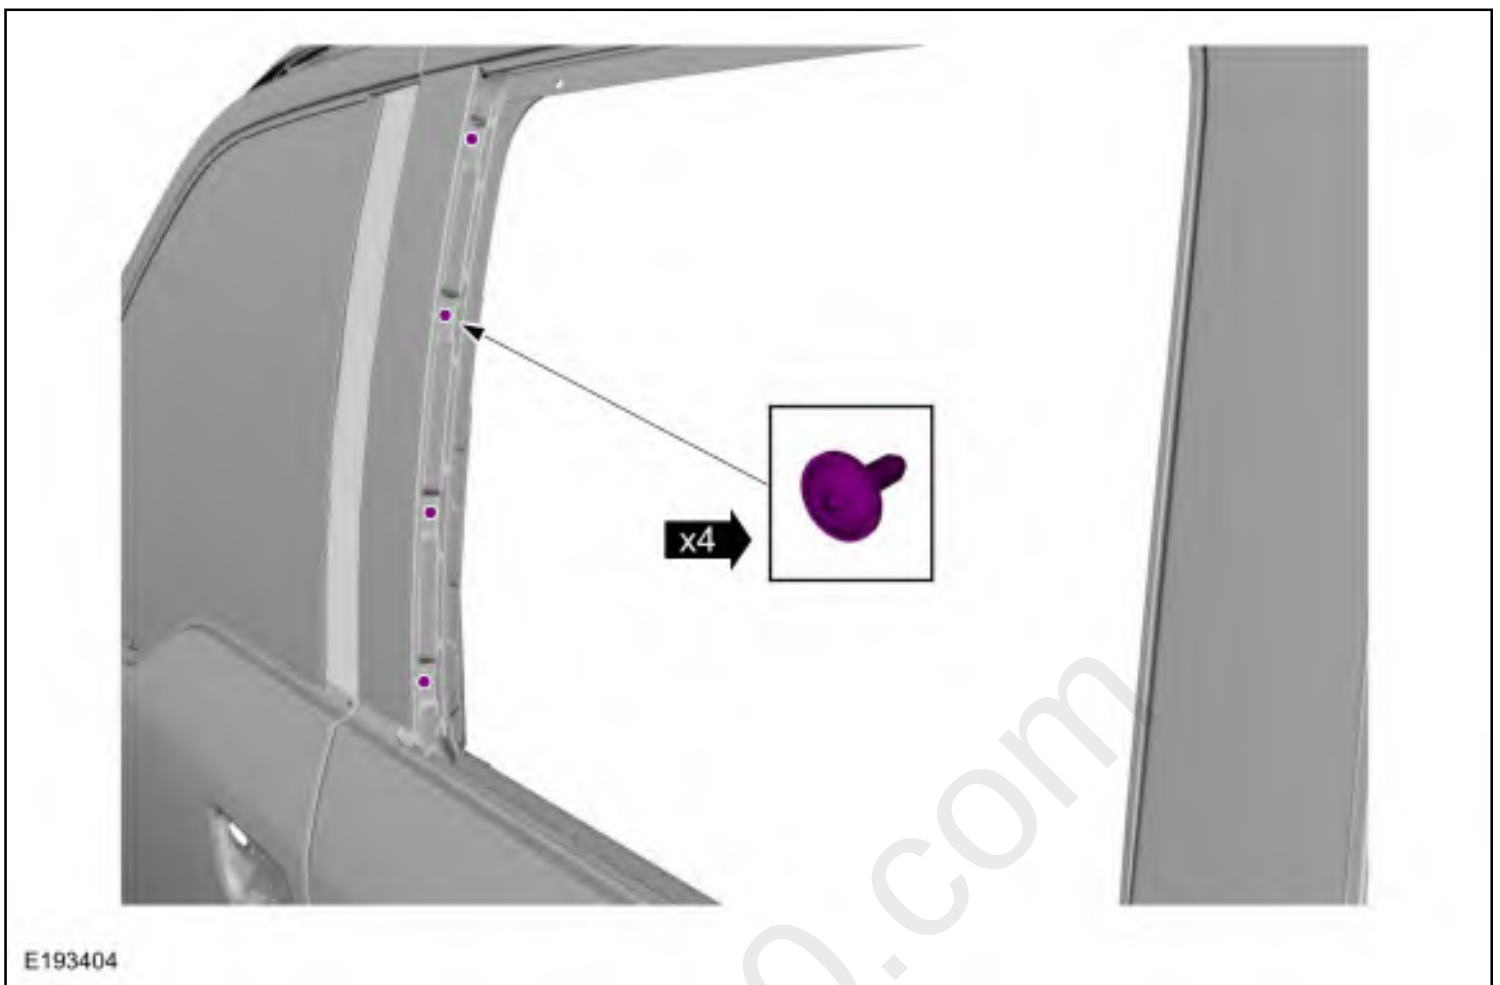

10. Remove the moulding

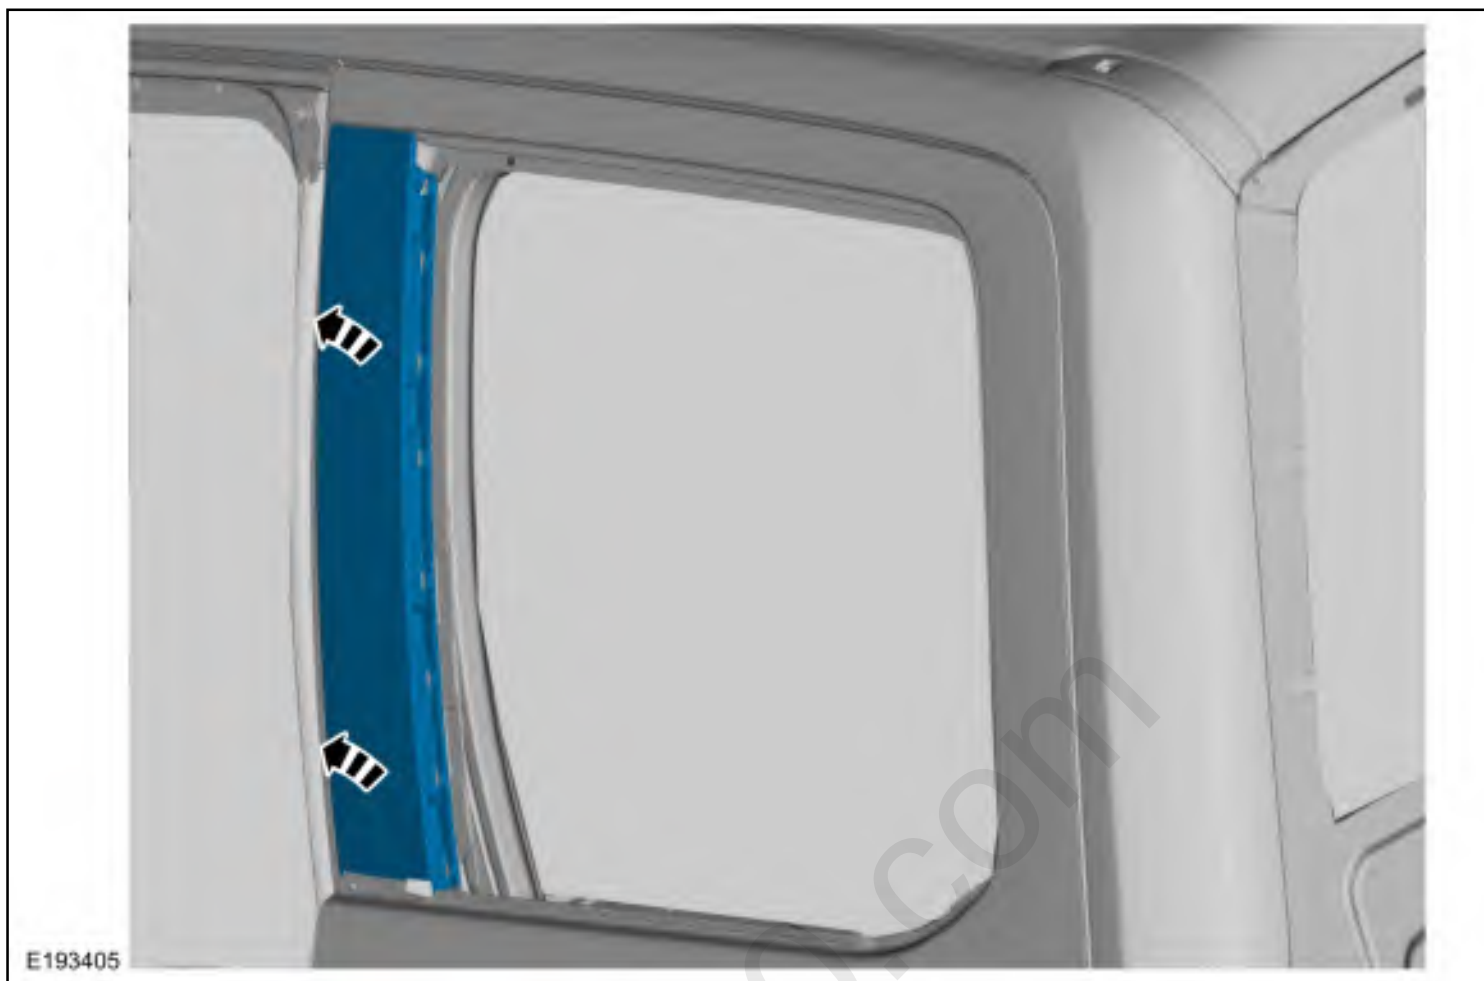

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company
