

Bodyside Moulding

Removal


NOTE: Removal steps in this procedure may contain installation details.

NOTE: The following steps detail the various bodyside mouldings located on the cab and pickup bed. It is not all inclusive as trim levels may vary from vehicle to vehicle.

NOTE: LH side views shown, RH side similar.


Cab Upper Moulding

1. Using a non-marring trim tool, detach the 7 push pin retainers and remove the moulding.

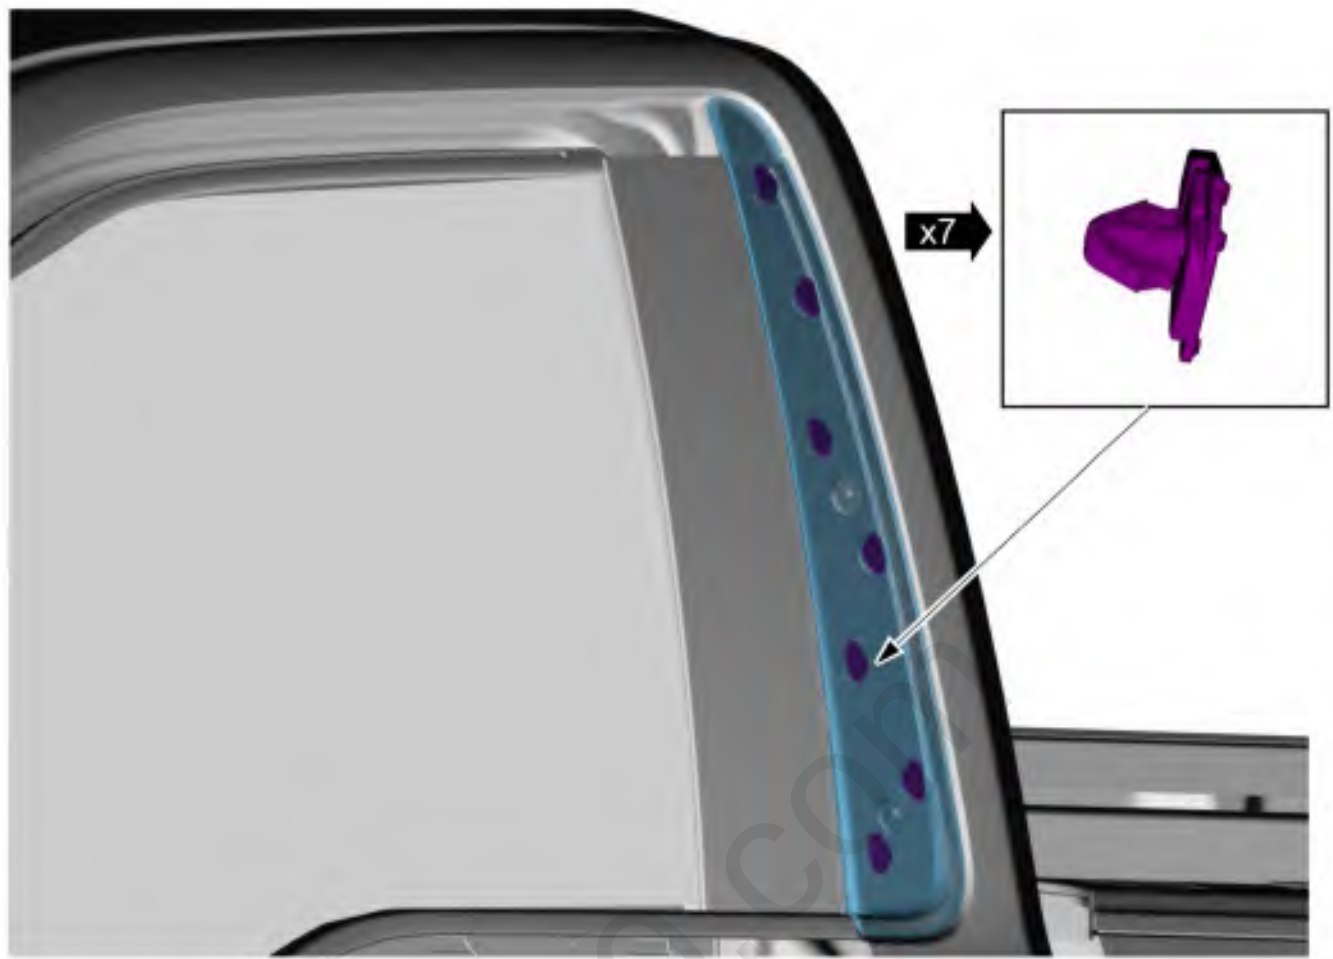


Cab Lower Moulding

2. Remove the push pin from the lower cab corner moulding.

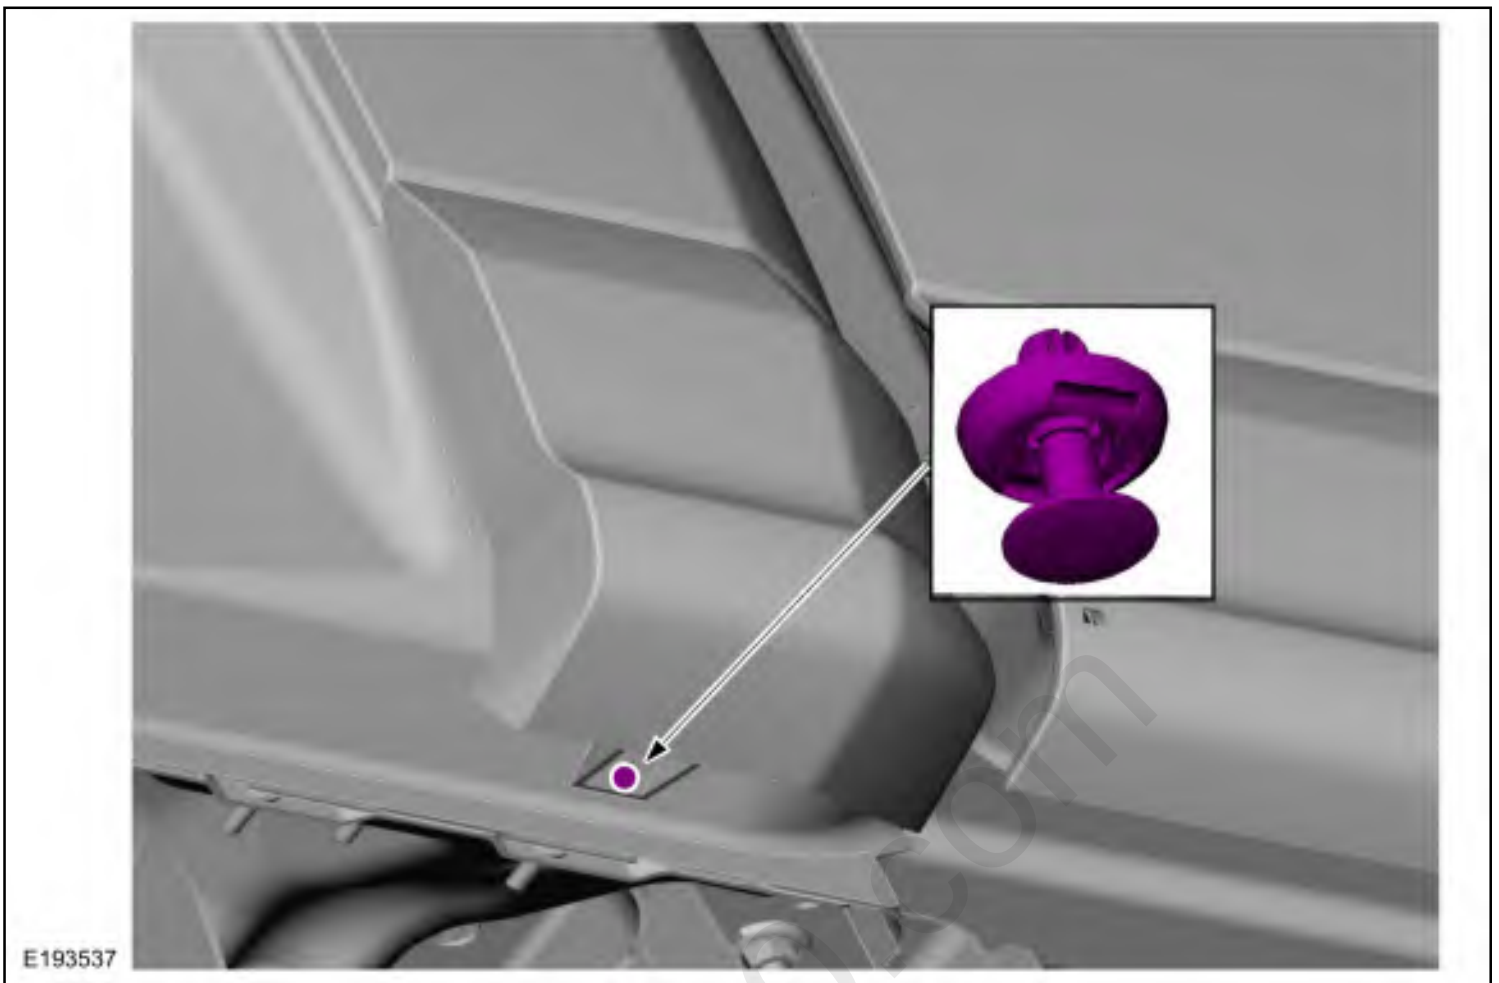


3. Using a non-marring trim tool, detach the 7 push pin retainers and remove the lower cab corner moulding.

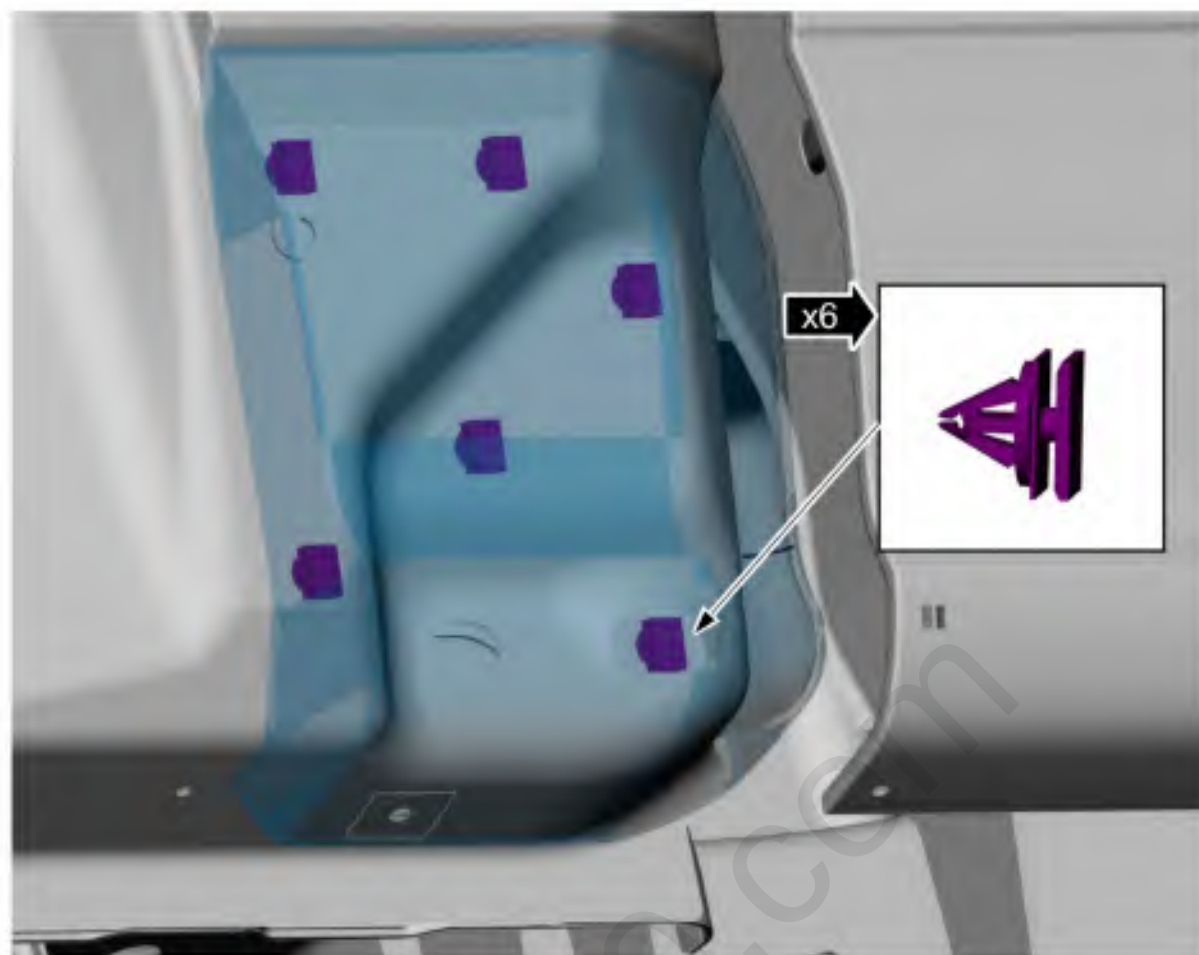


E193538

Pickup Bed Lower Moulding

4. Remove the 6 push pin retainers.

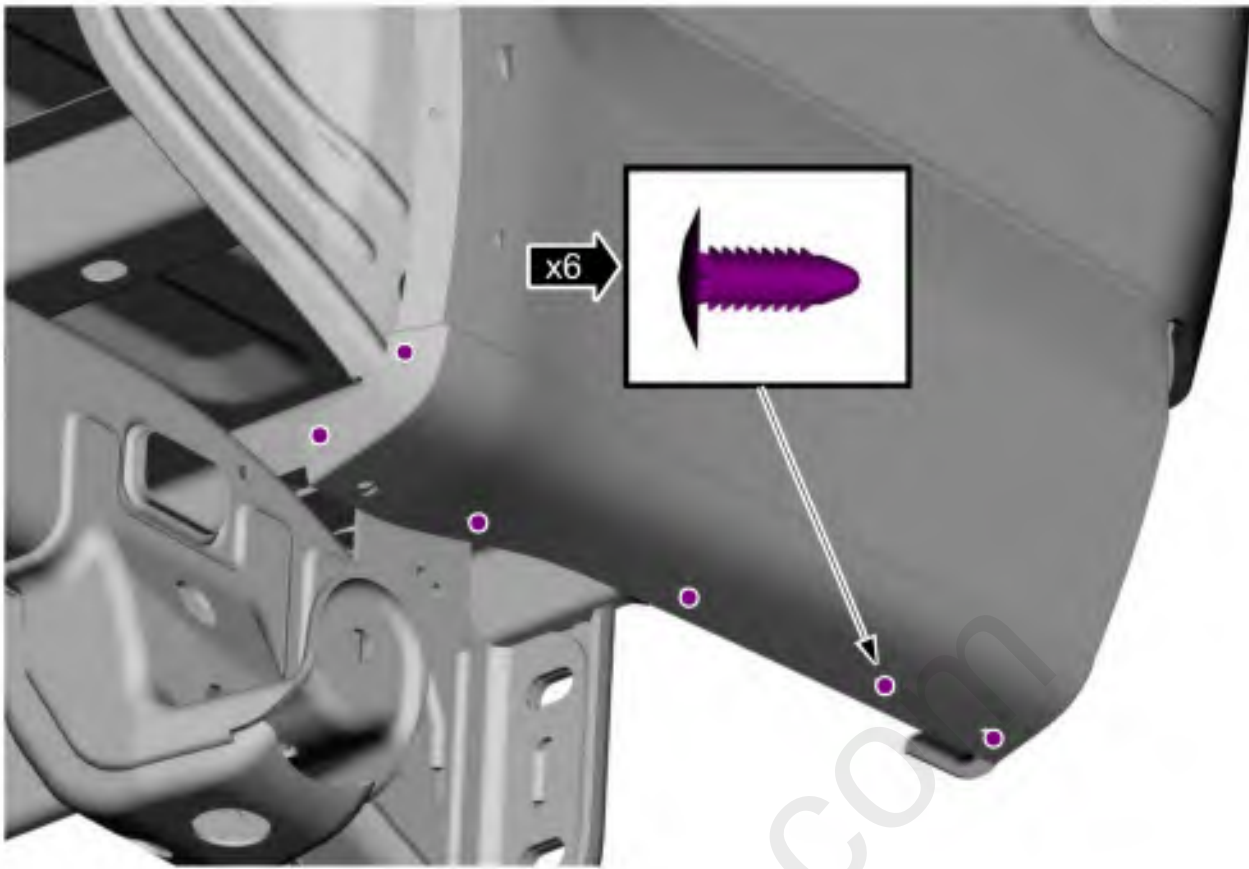


5. Using a non-marring trim tool, detach the retainers from pick up bed and remove the moulding.

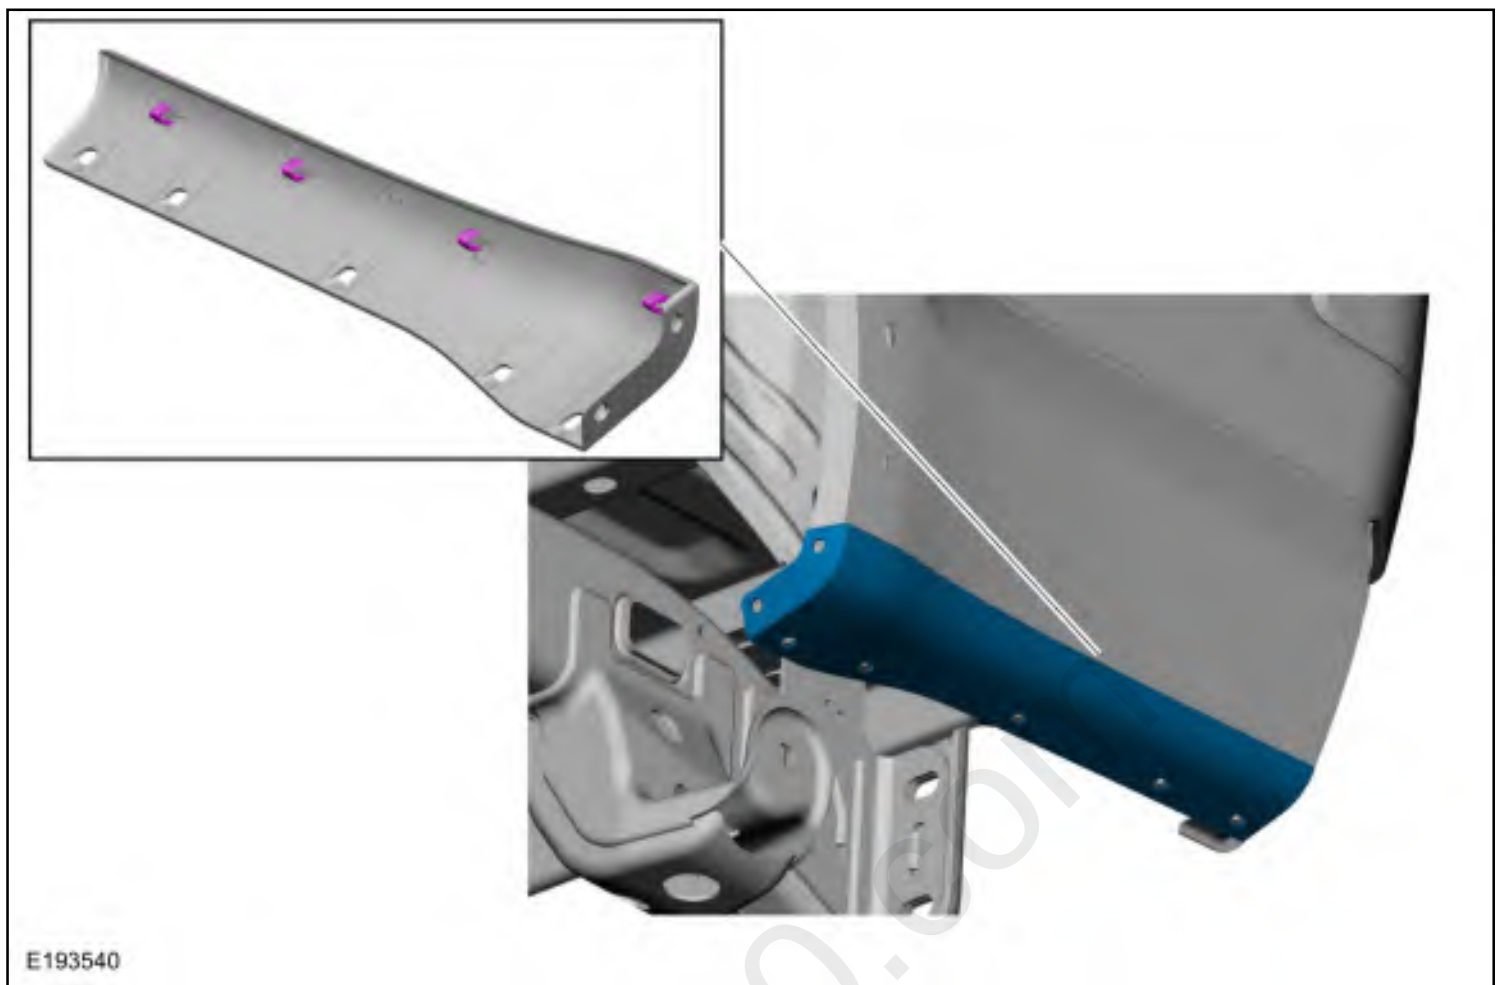

Pickup Bed Upper Rail Moulding

6. Using a non-marring trim tool, carefully detach the retainers along the length of the moulding and remove the moulding.

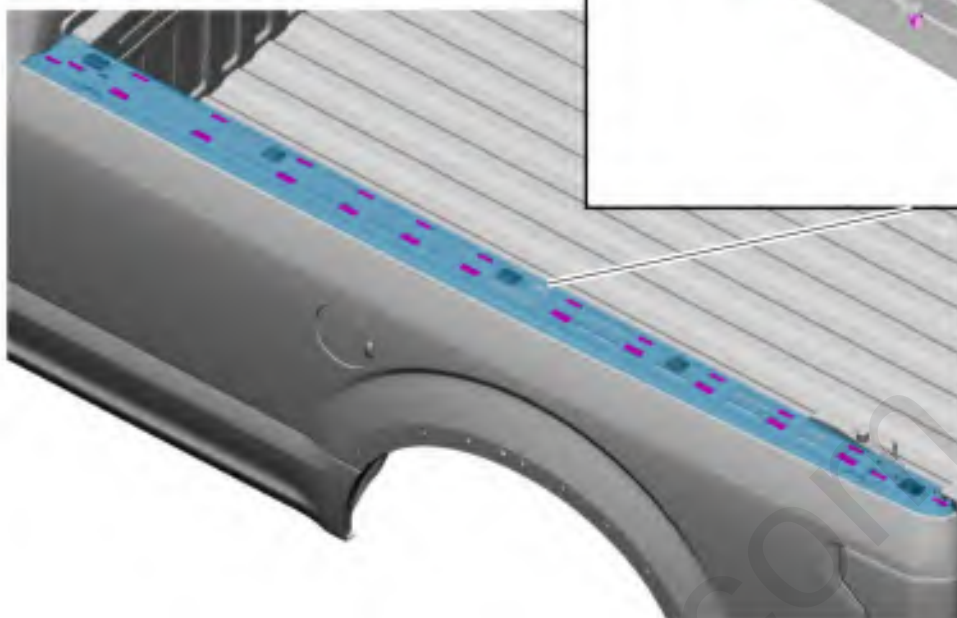

E193541



Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company
