


Rear Quarter Panel Moulding


Removal

NOTE: Removal steps in this procedure may include installation details.

1. Remove the 4 push pins and 2 screws.
Torque: 71 lb.in (8.0 Nm)

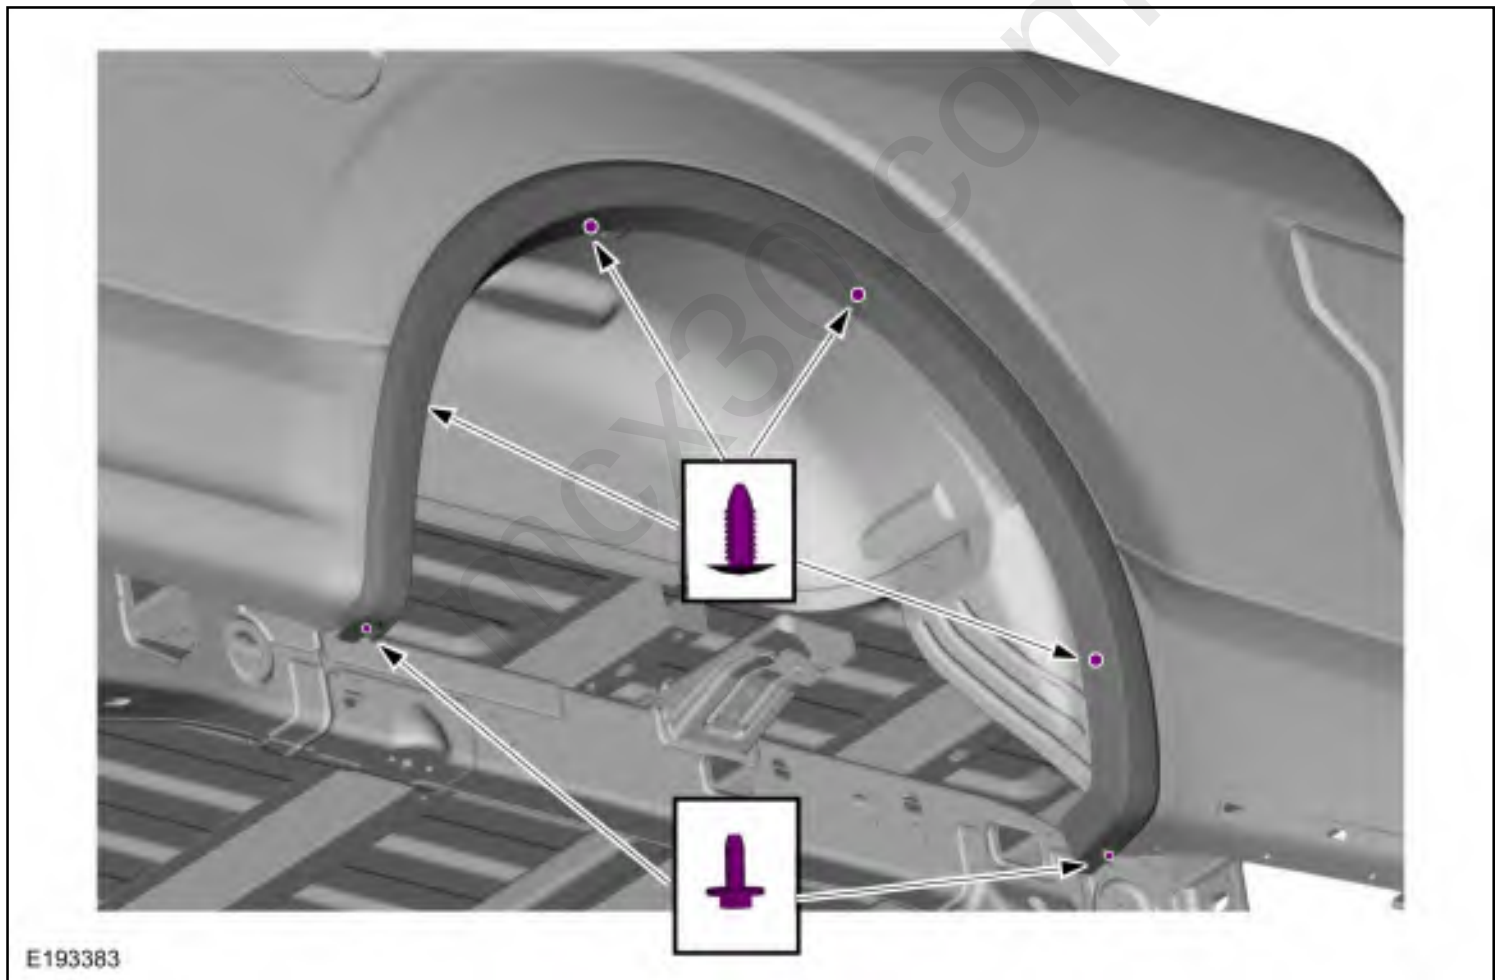

2. Using a non-marring trim tool, detach the 13 retainers and remove the moulding.

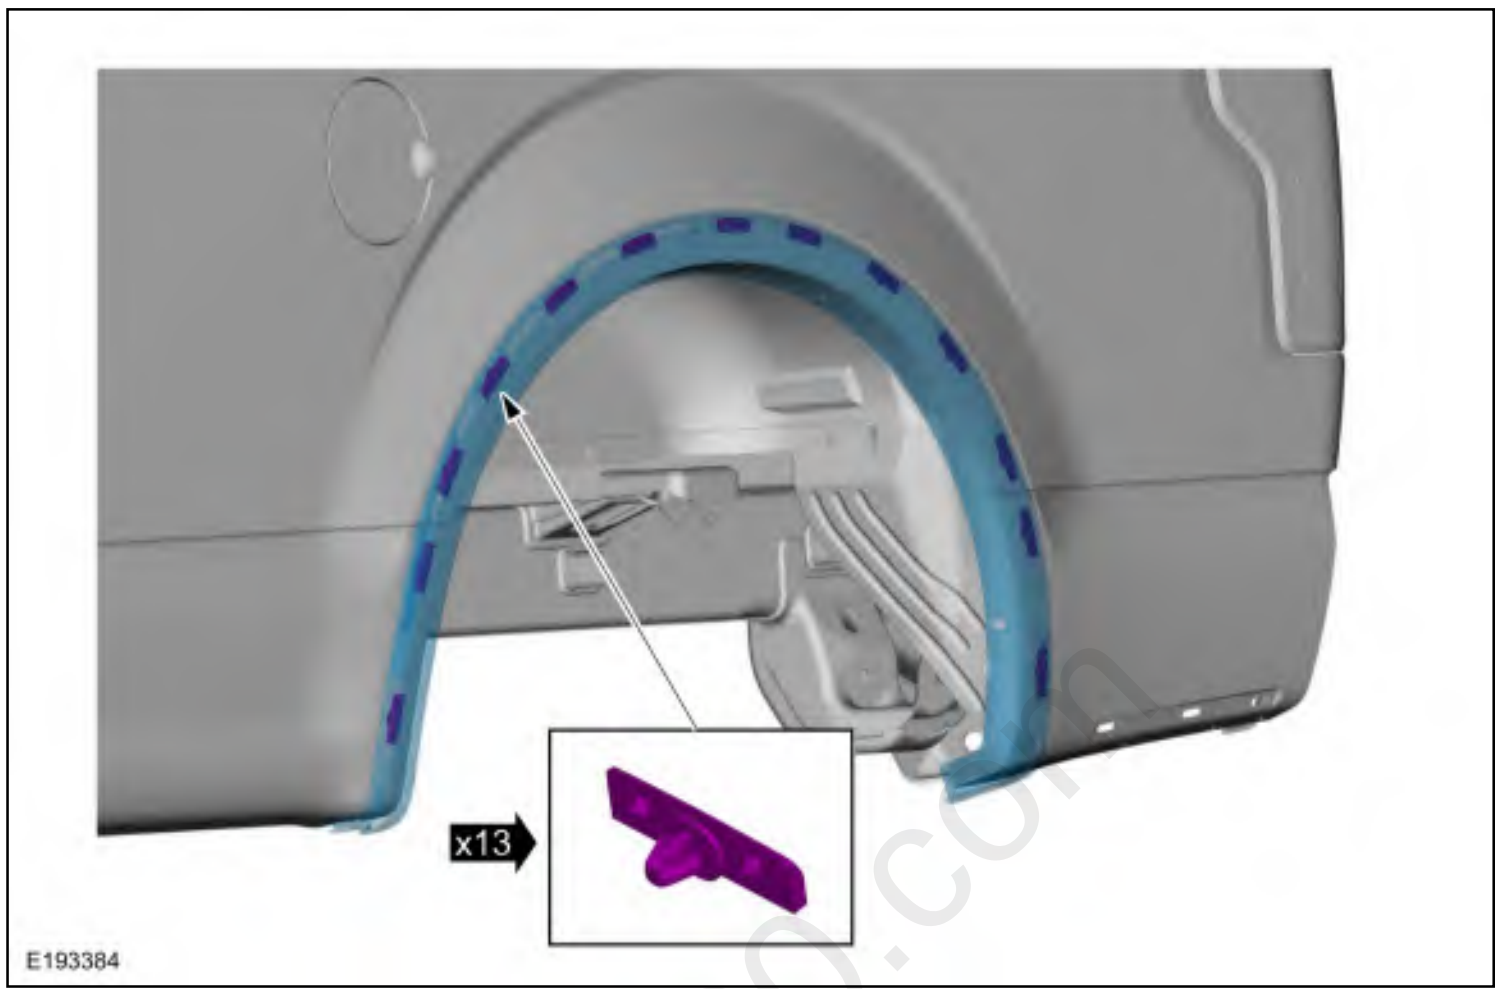

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company