

Rear Seat Armrest - SuperCrew


Base Part Number: Base Part Number: 67112

Removal

1. Fold forward the RH seat backrest.



2. Remove the armrest.
 1. Through the opening in the backrest cover and foam pad, remove the armrest fastener.
Torque: 18 lb.ft (25 Nm)
 2. Lift and rotate the armrest to release the guide pins from both sides of the armrest.

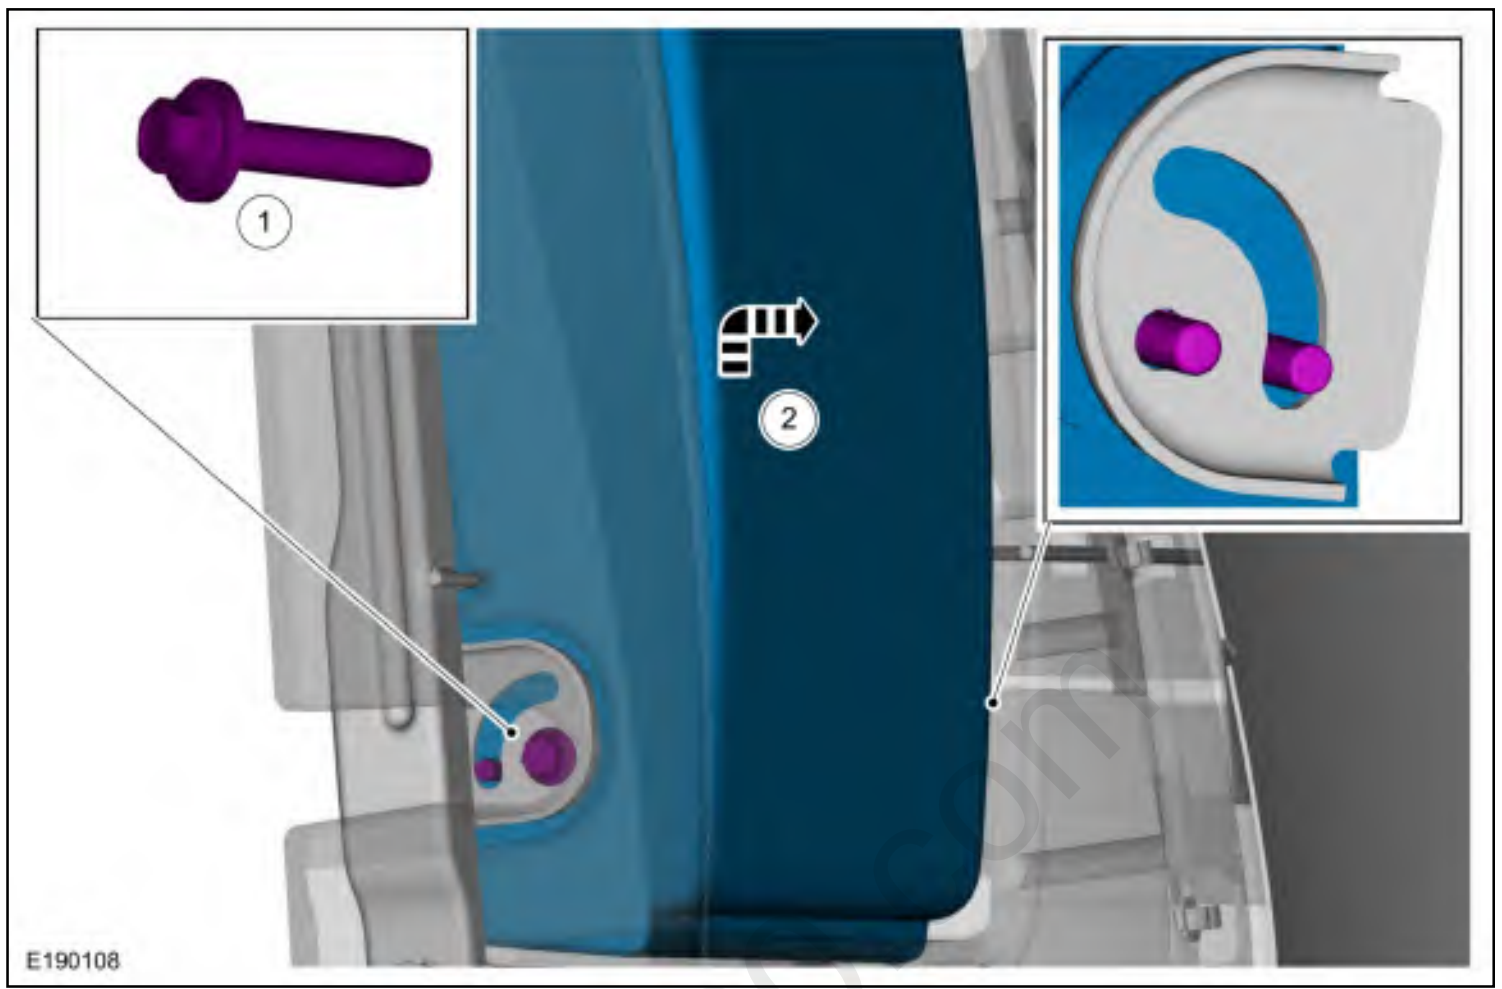

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company