

Pickup Box Corner Reinforcement

Special Tool(s) / General Equipment

6.5 mm Drill Bit
Self-Piercing Rivet (SPR) Remover/Installer
Belt Sander
Blind Rivet Gun
Hot Air Gun
Locking Pliers

Materials

Name	Specification
Metal Bonding Adhesive TA-1, TA-1-B, 3M™ 08115, LORD Fusor® 108B	-

Removal

NOTE: Aluminum body panels are highly receptive to heat transfer. With the extensive use of structural adhesives and non-structural sealers used in vehicle construction, the potential of heat transfer could impact adhesives and sealers in non-associated panels during the repair process. Many repairs areas that utilize structural adhesive may be separated after fastener removal by using a panel chisel along the joint/flange. Using heat not exceeding 425° F to loosen a bonded panel should only be done when **all panels in the joint** will be replaced and new adhesive applied.

NOTE: 6.5 foot pickup box shown, 5.5 foot and 8 foot similar.

1. Remove the tailgate.
2. Remove the tail lamp assembly.
Refer to: [Rear Lamp Assembly](#) (417-01 Exterior Lighting, Removal and Installation).

3. Remove the pickup box outer side panel.

Refer to: [Pickup Box Outer Side Panel](#) (501-30 Rear End Sheet Metal Repairs, Removal and Installation).

4. Remove the torx® screw, tailgate tether bolt, tailgate bumper, striker and hinge.




5. Route the tail lamp wiring harness out the bottom of the reinforcement and position aside.

6. Remove the SPR fasteners.

Use the General Equipment: Self-Piercing Rivet (SPR) Remover/Installer


Use the General Equipment: Belt Sander

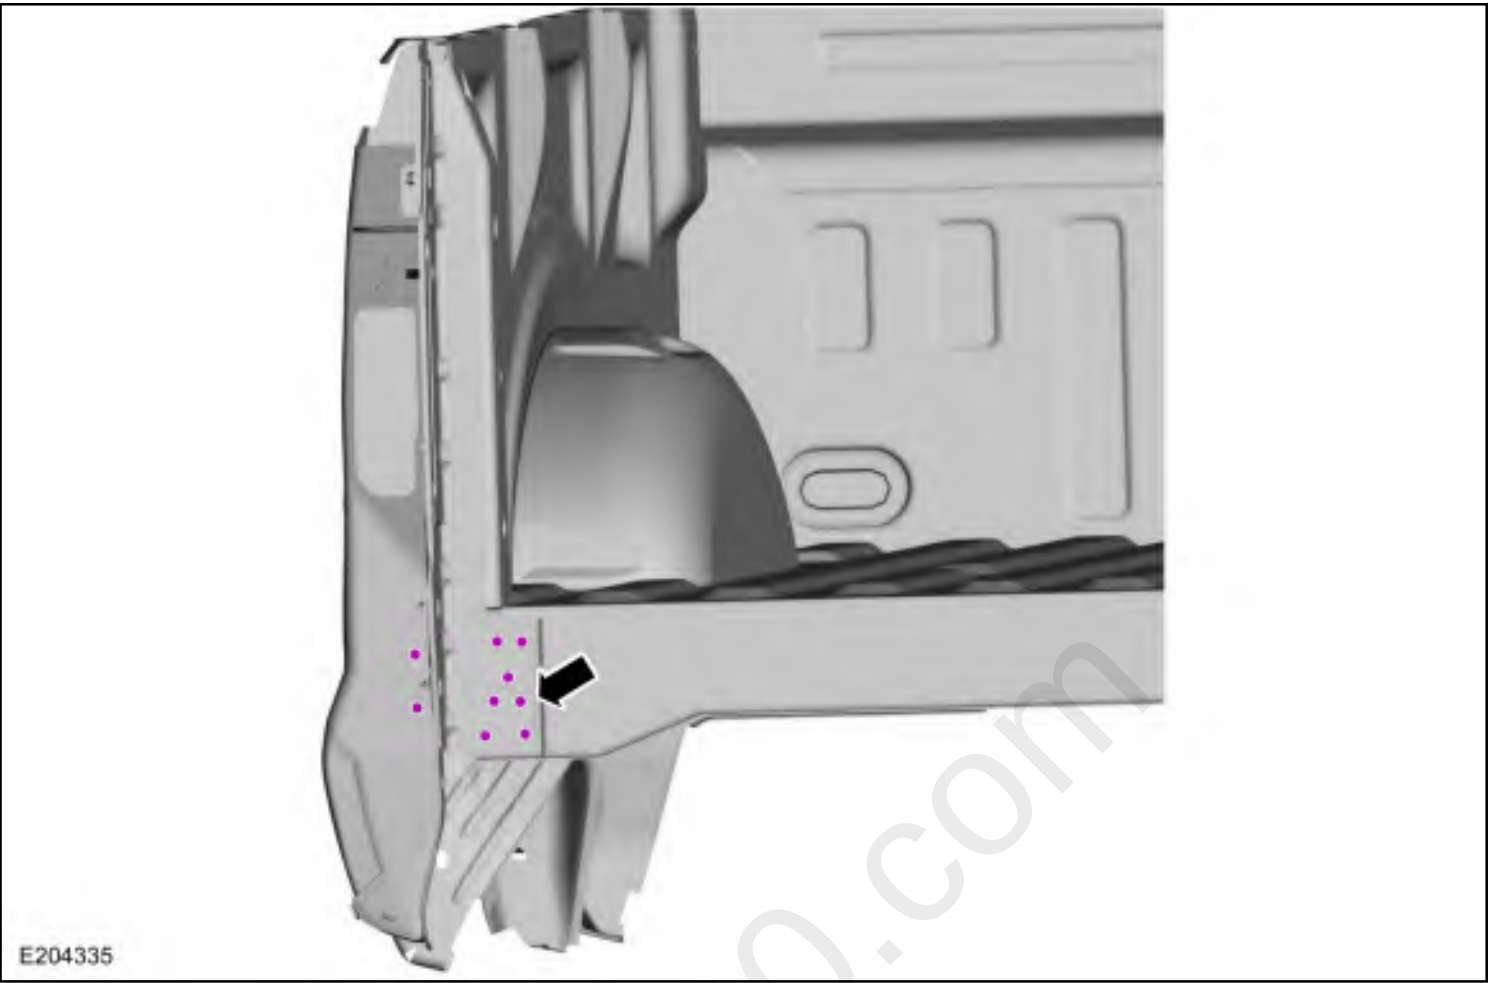

7. Remove the SPR fasteners.


Use the General Equipment: Self-Piercing Rivet (SPR) Remover/Installer

Use the General Equipment: Belt Sander

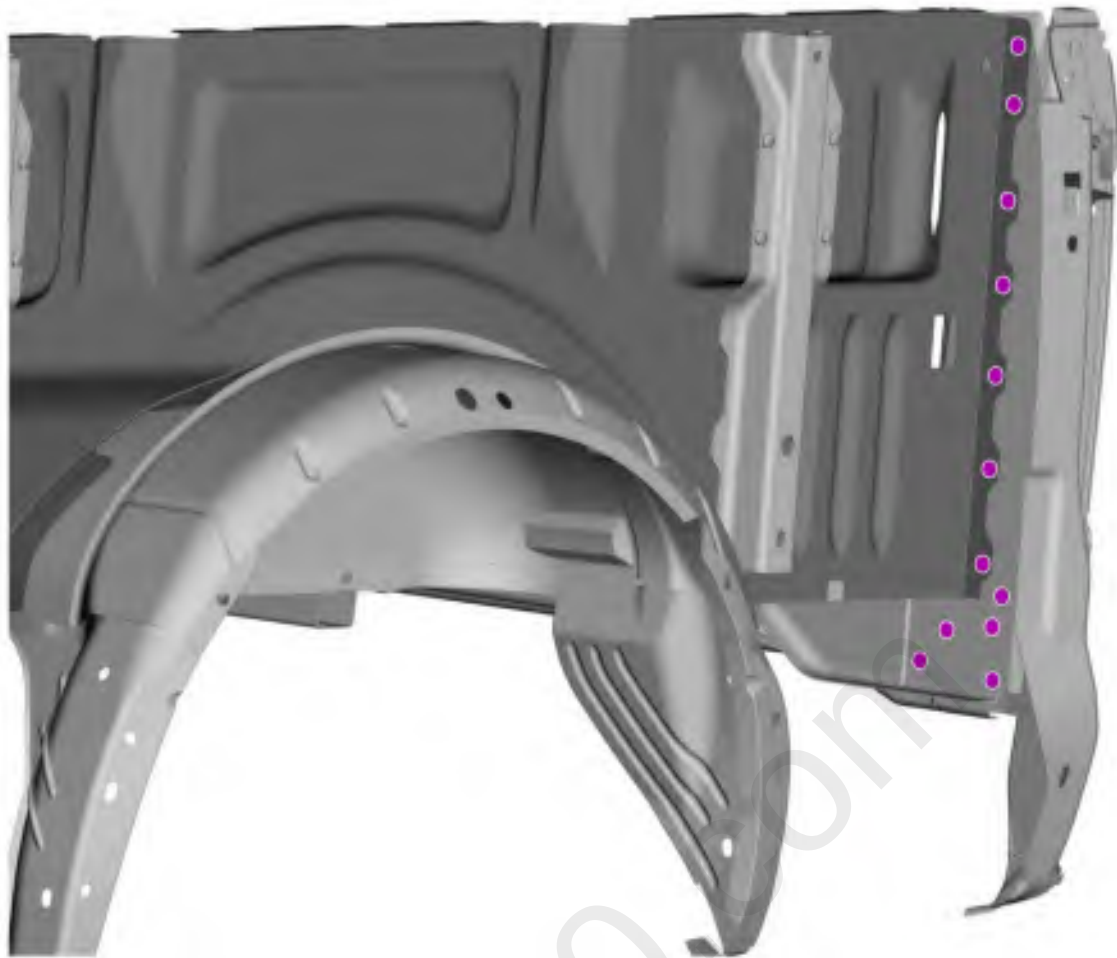

8. **NOTE:** Aluminum body panels are highly receptive to heat transfer. With the extensive use of structural adhesives and non-structural sealers used in vehicle construction, the potential of heat transfer could impact adhesives and sealers in non-associated panels during the repair process. Many repairs areas that utilize structural adhesive may be separated after fastener removal by using a panel chisel along the joint/flange. Using heat not exceeding 425° F to loosen a bonded panel should only be done when **all panels in the joint** will be replaced and new adhesive applied.


Break the adhesive bond and remove the pickup box corner reinforcement.
Use the General Equipment: Hot Air Gun

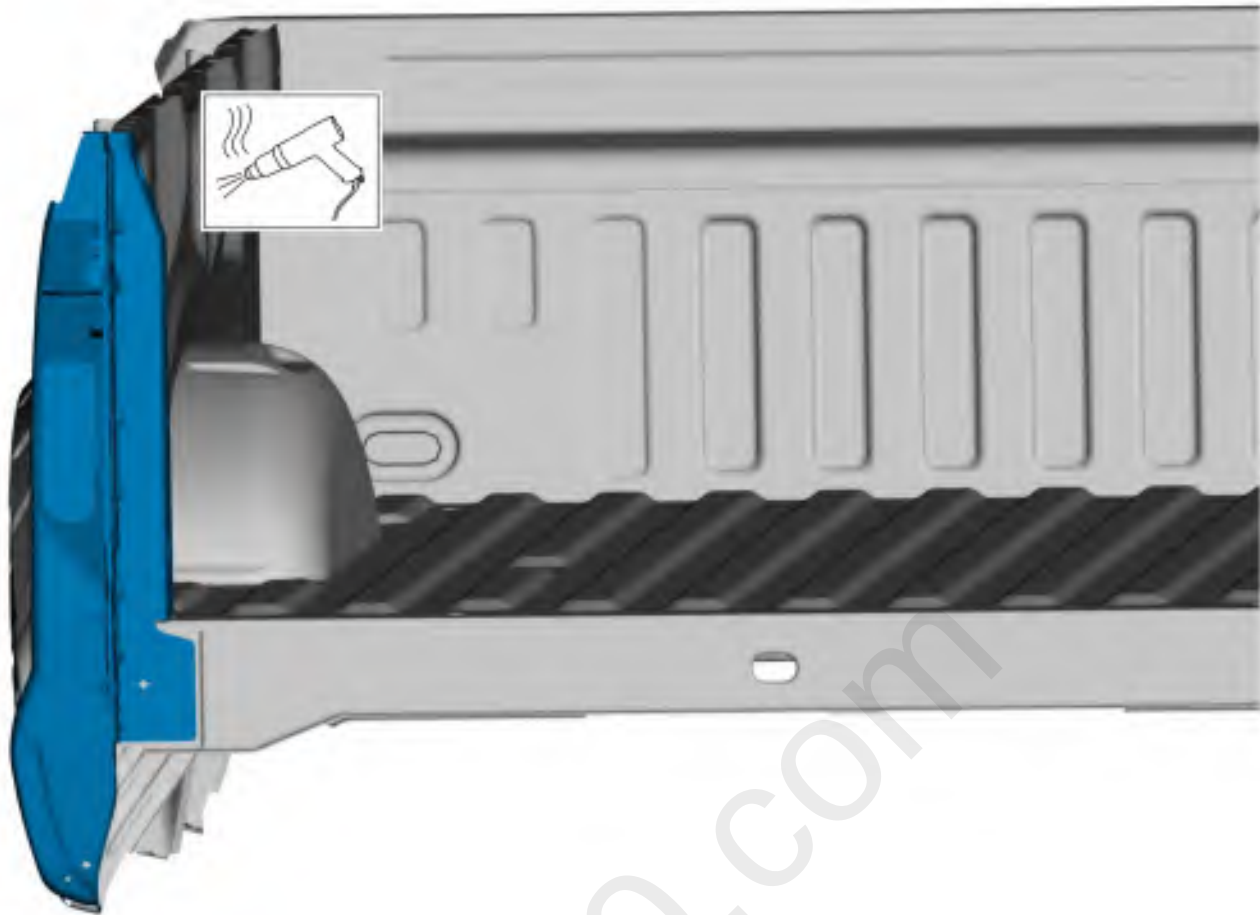

Installation


NOTE: 6.5 foot pickup box shown, 5.5 foot and 8 foot similar.

1. 80-120 grit sand paper.
Sand to remove old adhesive and clean.

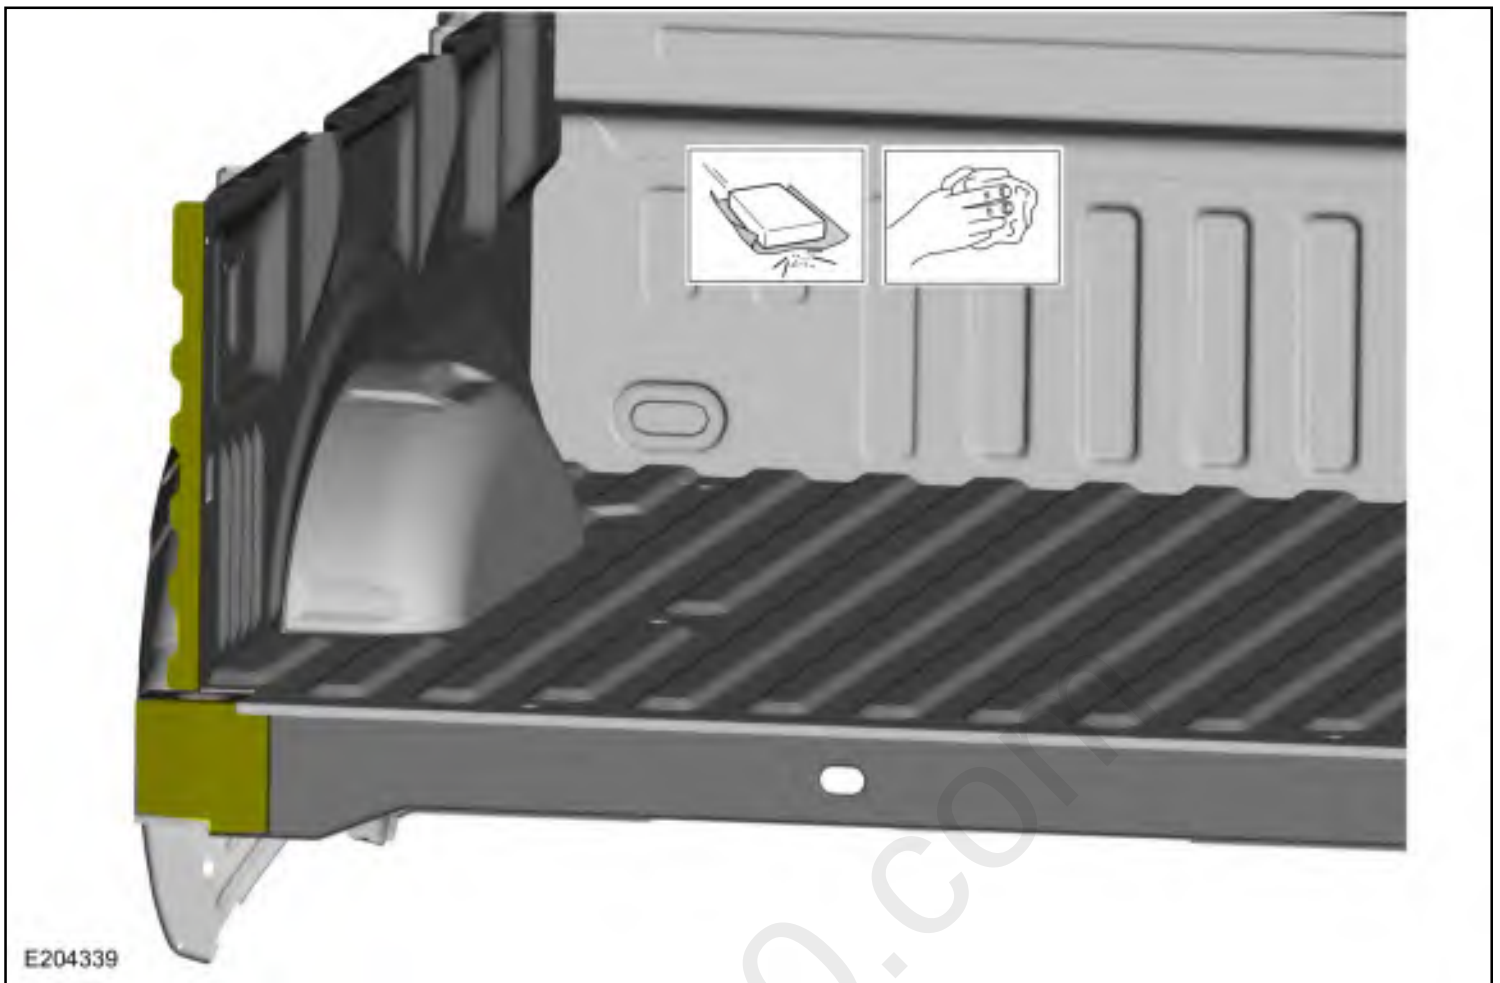


2. Apply adhesive.


Material: Metal Bonding Adhesive / TA-1, TA-1-B, 3M™ 08115, LORD Fusor® 108B

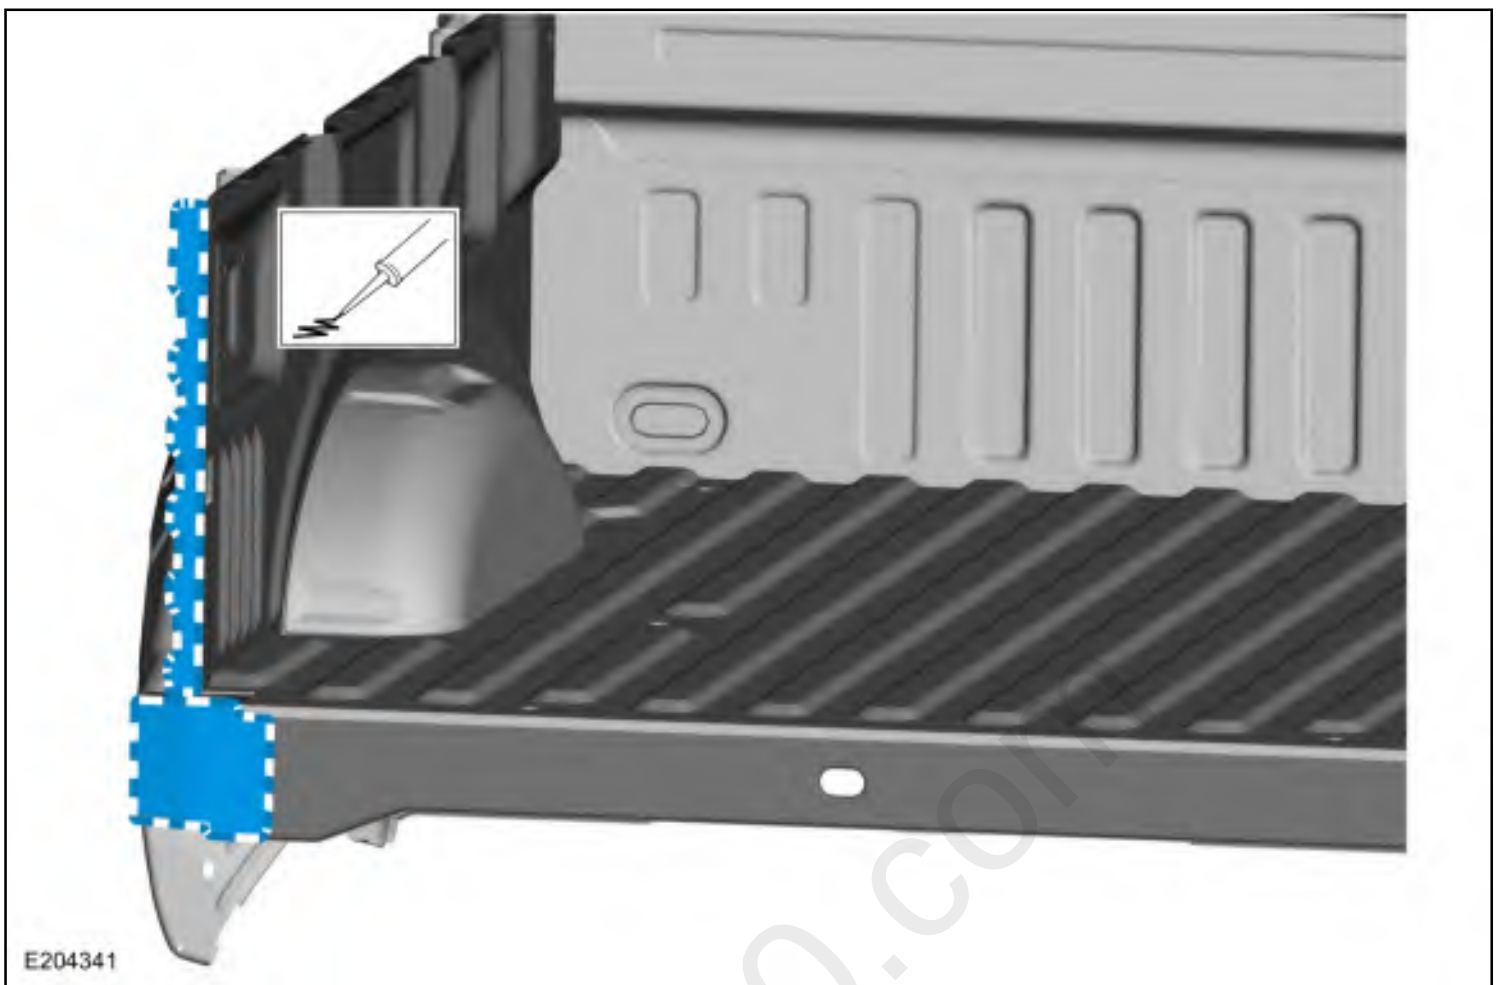



3. Install the pickup box corner reinforcement and clamp in position.
Use the General Equipment: Locking Pliers

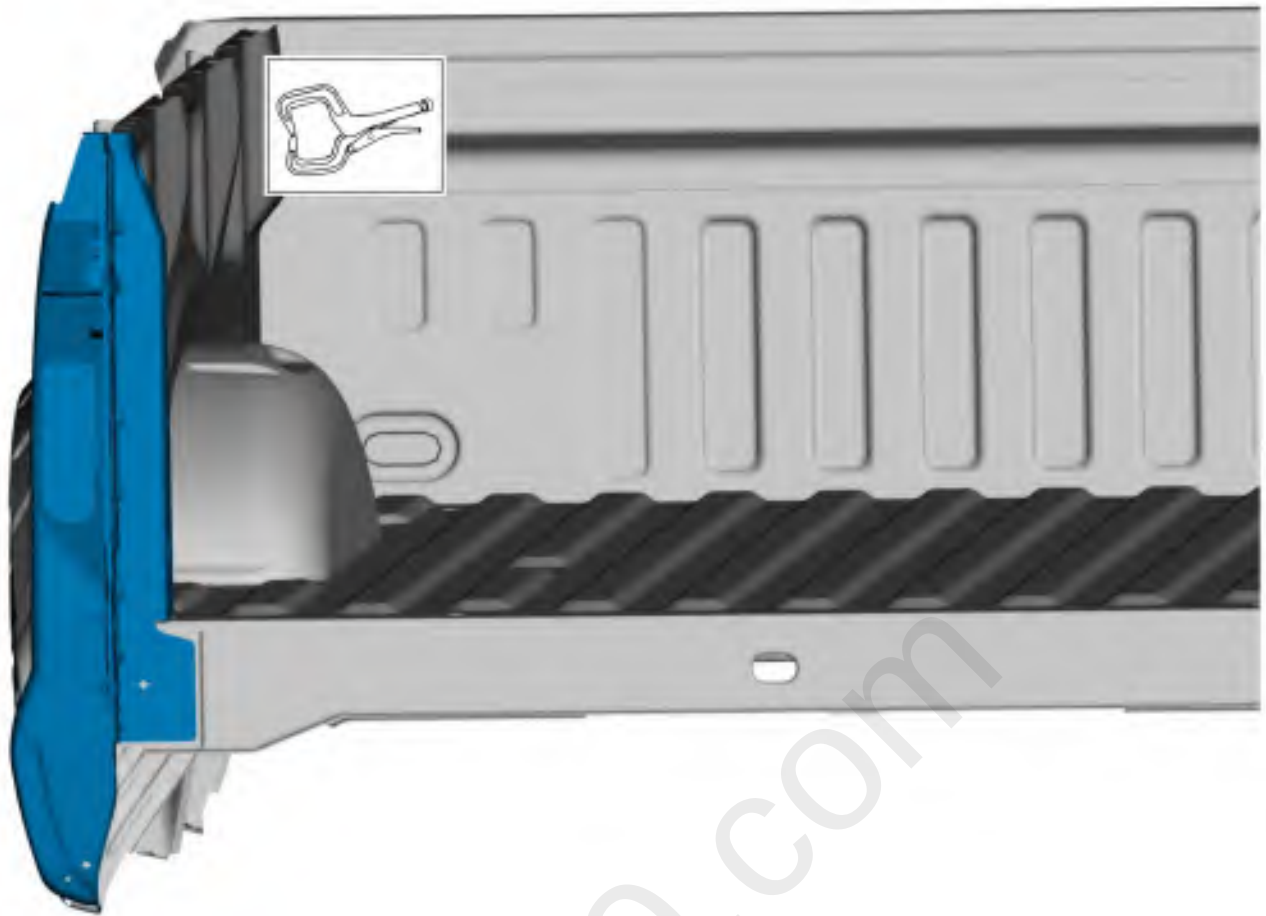

4. Drill 6.5 mm holes for blind rivet fastener installation.
Use the General Equipment: 6.5 mm Drill Bit

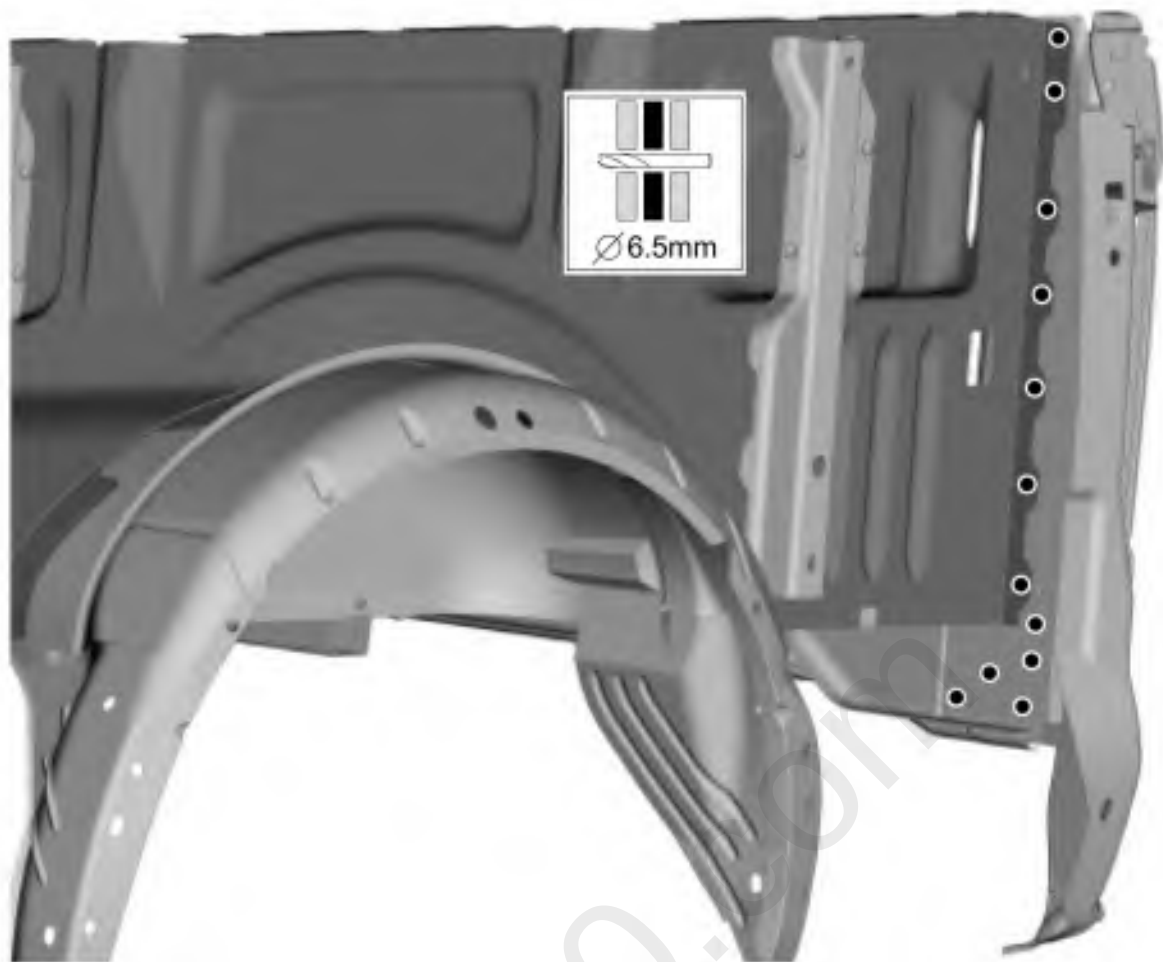

5. Drill 6.5 mm holes for blind rivet fastener installation.
Use the General Equipment: 6.5 mm Drill Bit

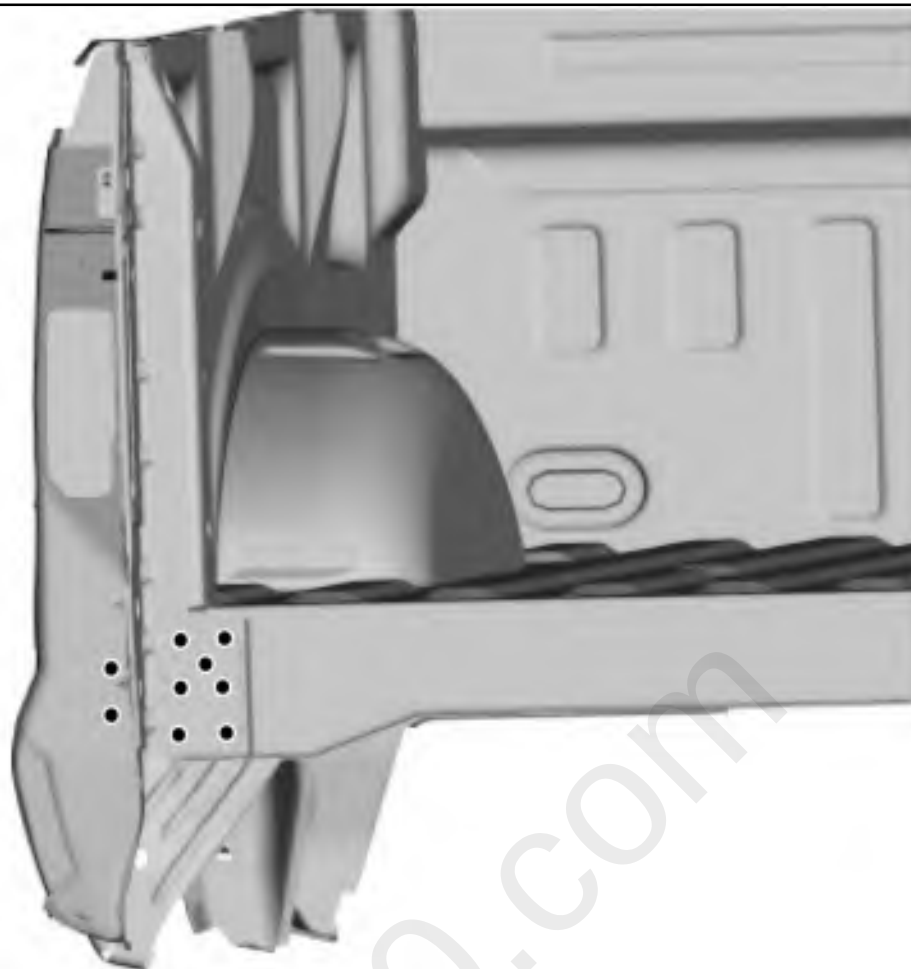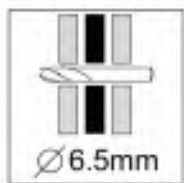


E204344



6. Install blind rivet fasteners.

Item	SPR Number	SPR Code	Henrob® Mandrel	Pro-Spot® Mandrel	Blind Rivet	Solid Rivet	Rivnut®
1	-	-	-	-	W702512-S900C	-	-
2	-	-	-	-	W707638-S900C	-	-
3	-	-	-	-	W708777-S900C	-	-



Refer to: [Joining Techniques](#) (501-25 Body Repairs - General Information, General Procedures).
Use the General Equipment: Blind Rivet Gun

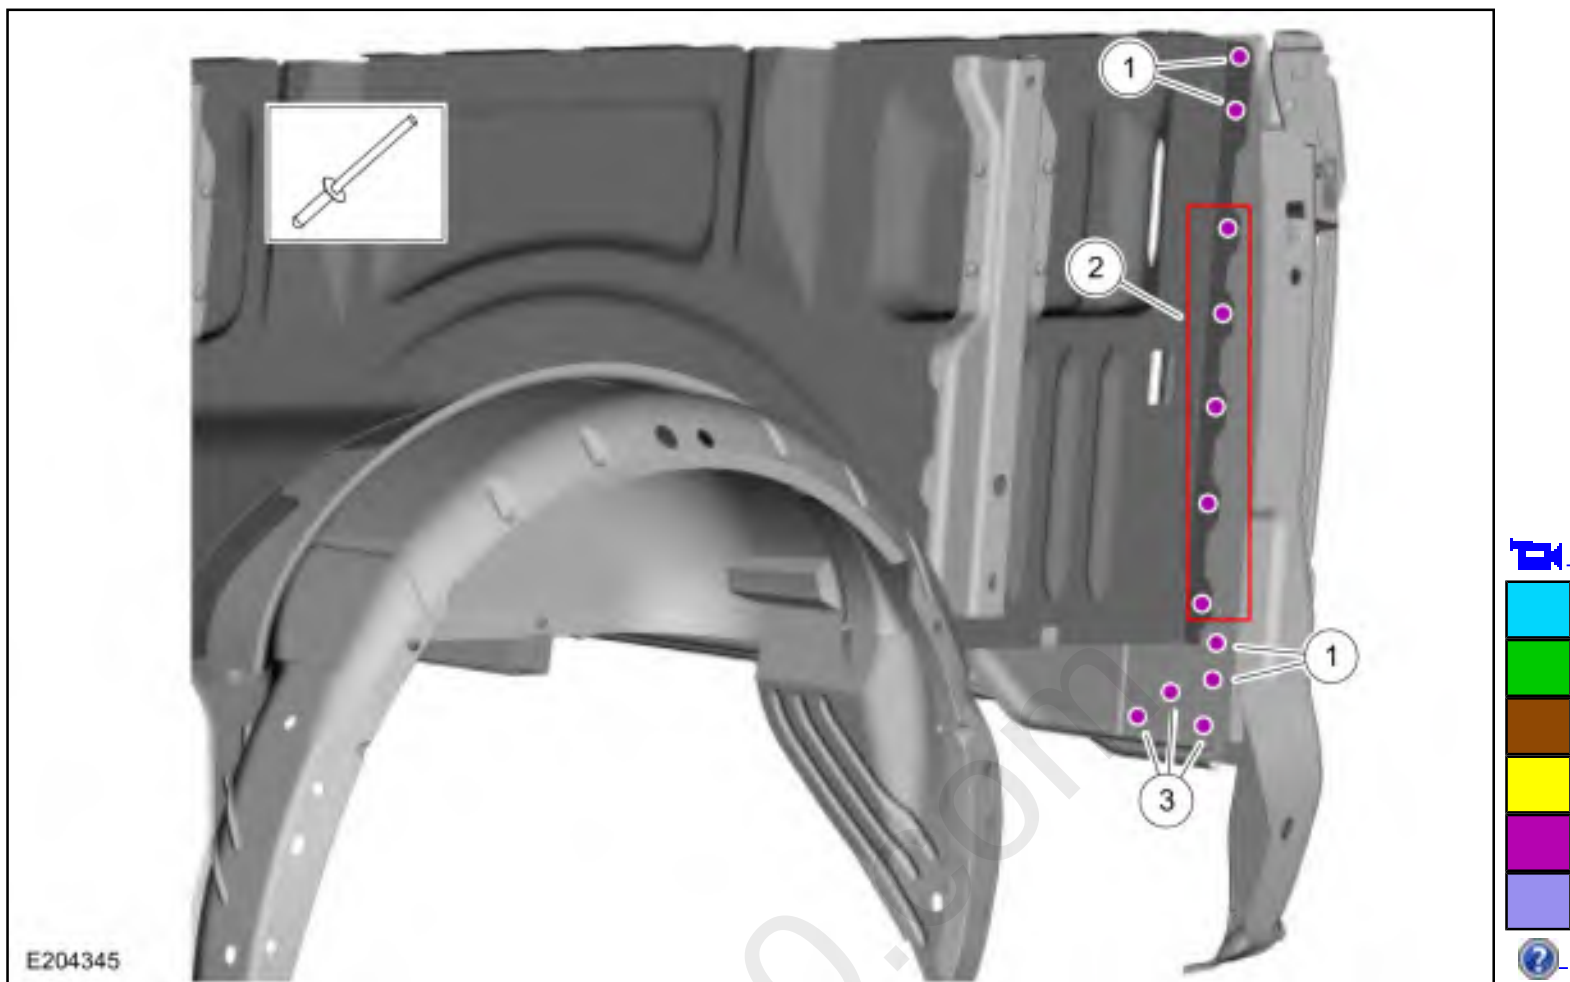

7. Install blind rivet fasteners.

Item	SPR Number	SPR Code	Henrob® Mandrel	Pro-Spot® Mandrel	Blind Rivet	Solid Rivet	Rivnut®
1	-	-	-	-	W702512-S900C	-	-

Refer to: [Joining Techniques](#) (501-25 Body Repairs - General Information, General Procedures).
Use the General Equipment: Blind Rivet Gun

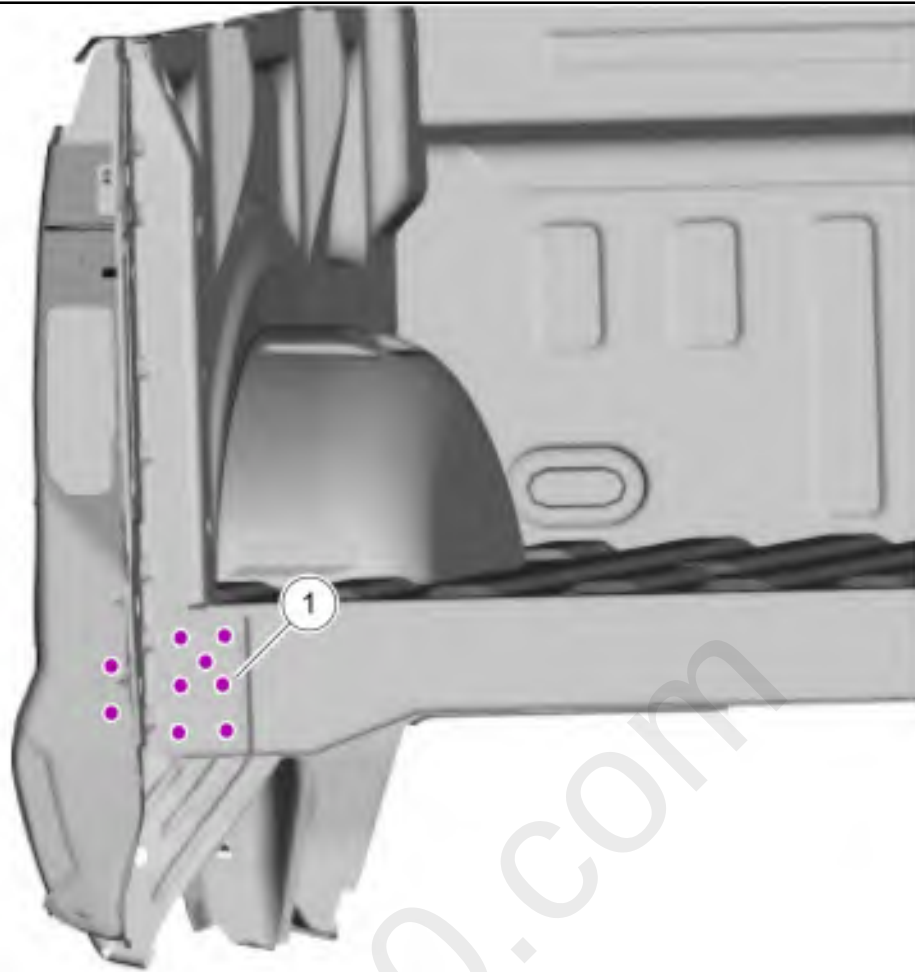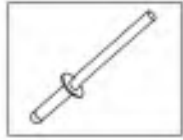

E204346



8. Route the tail lamp wiring harness through the pickup box corner reinforcement.
9. Install the pickup box outer side panel.
Refer to: [Pickup Box Outer Side Panel](#) (501-30 Rear End Sheet Metal Repairs, Removal and Installation).
10. Install the torx® screw, tailgate tether bolt, tailgate bumper, striker and hinge.
 - Torx screw.
Torque: 177 lb.in (20 Nm)
 - Tailgate tether bolt.
Torque: 30 lb.ft (40 Nm)
 - Tailgate striker.
Torque: 30 lb.ft (40 Nm)
 - Tailgate hinge bolts.
Torque: 41 lb.ft (55 Nm)



11. Install the tail lamp assembly.
Refer to: [Rear Lamp Assembly](#) (417-01 Exterior Lighting, Removal and Installation).
12. Install the tailgate.