

Cooling Fan Motor and Shroud


Base Part Number: Base Part Number: 8C607

Special Tool(s) / General Equipment


Wooden Block

Removal


1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: [Jacking and Lifting - Overview](#) (100-02 Jacking and Lifting, Description and Operation).
2. Position aside the coolant tube. Disconnect and position aside the brake booster and the crankcase ventilation tubes. Loosen the clamp and remove the retainers and the air cleaner and outlet pipe assembly.
Torque:
Clamp: 35 lb.in (4 Nm)
Bolt: 150 lb.in (17 Nm)

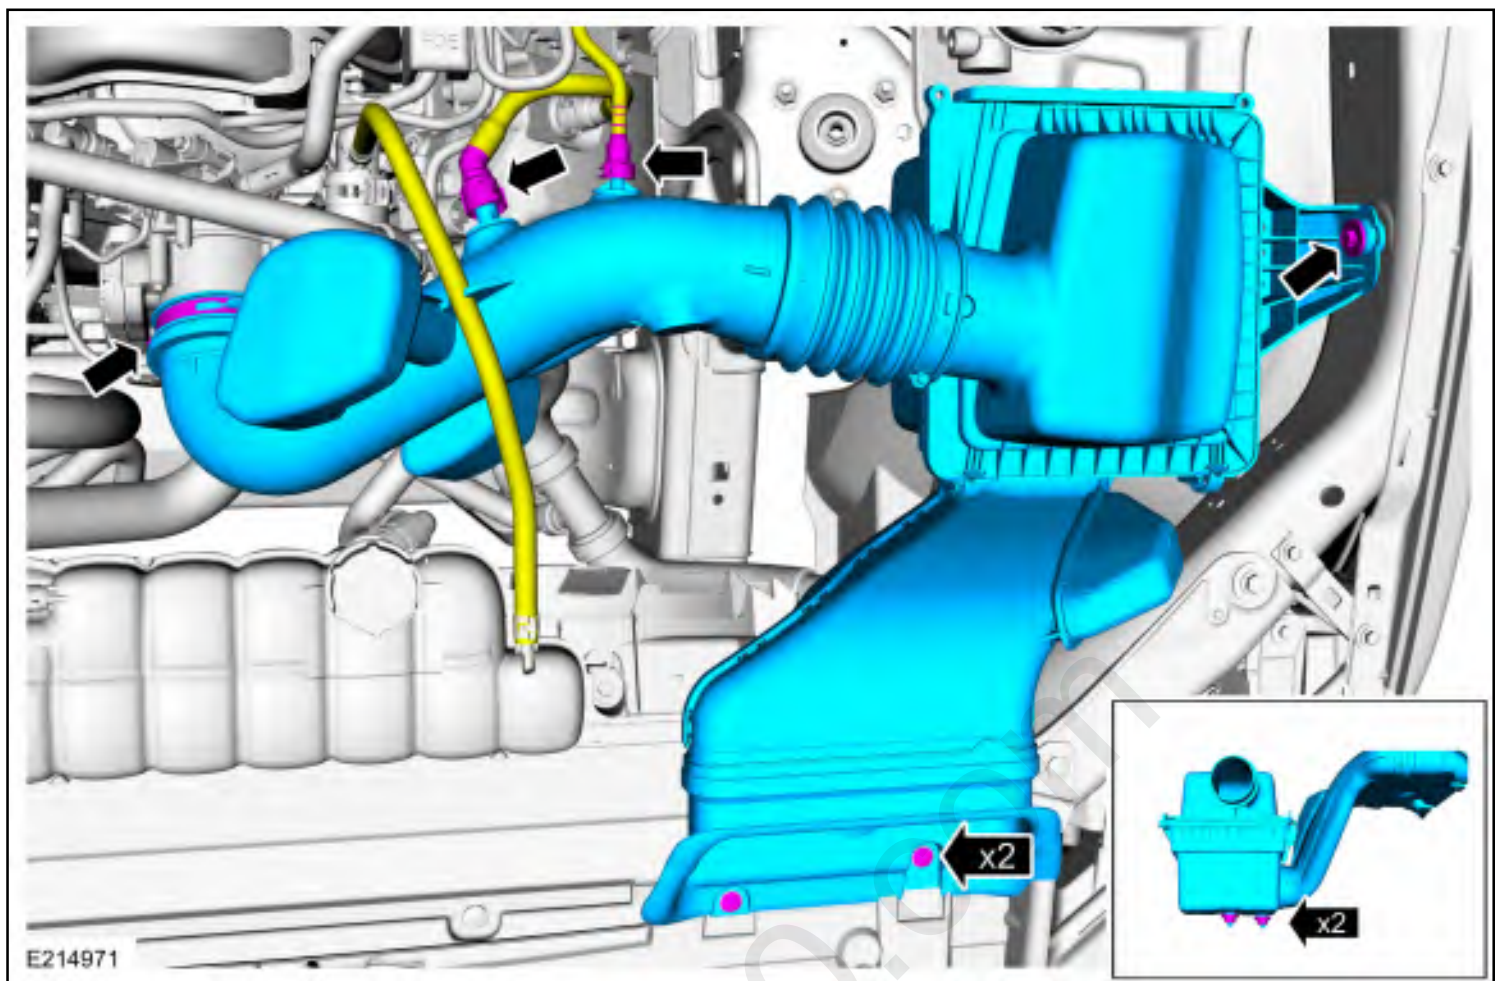


3. Remove the pin-type retainers and the upper radiator air deflector.

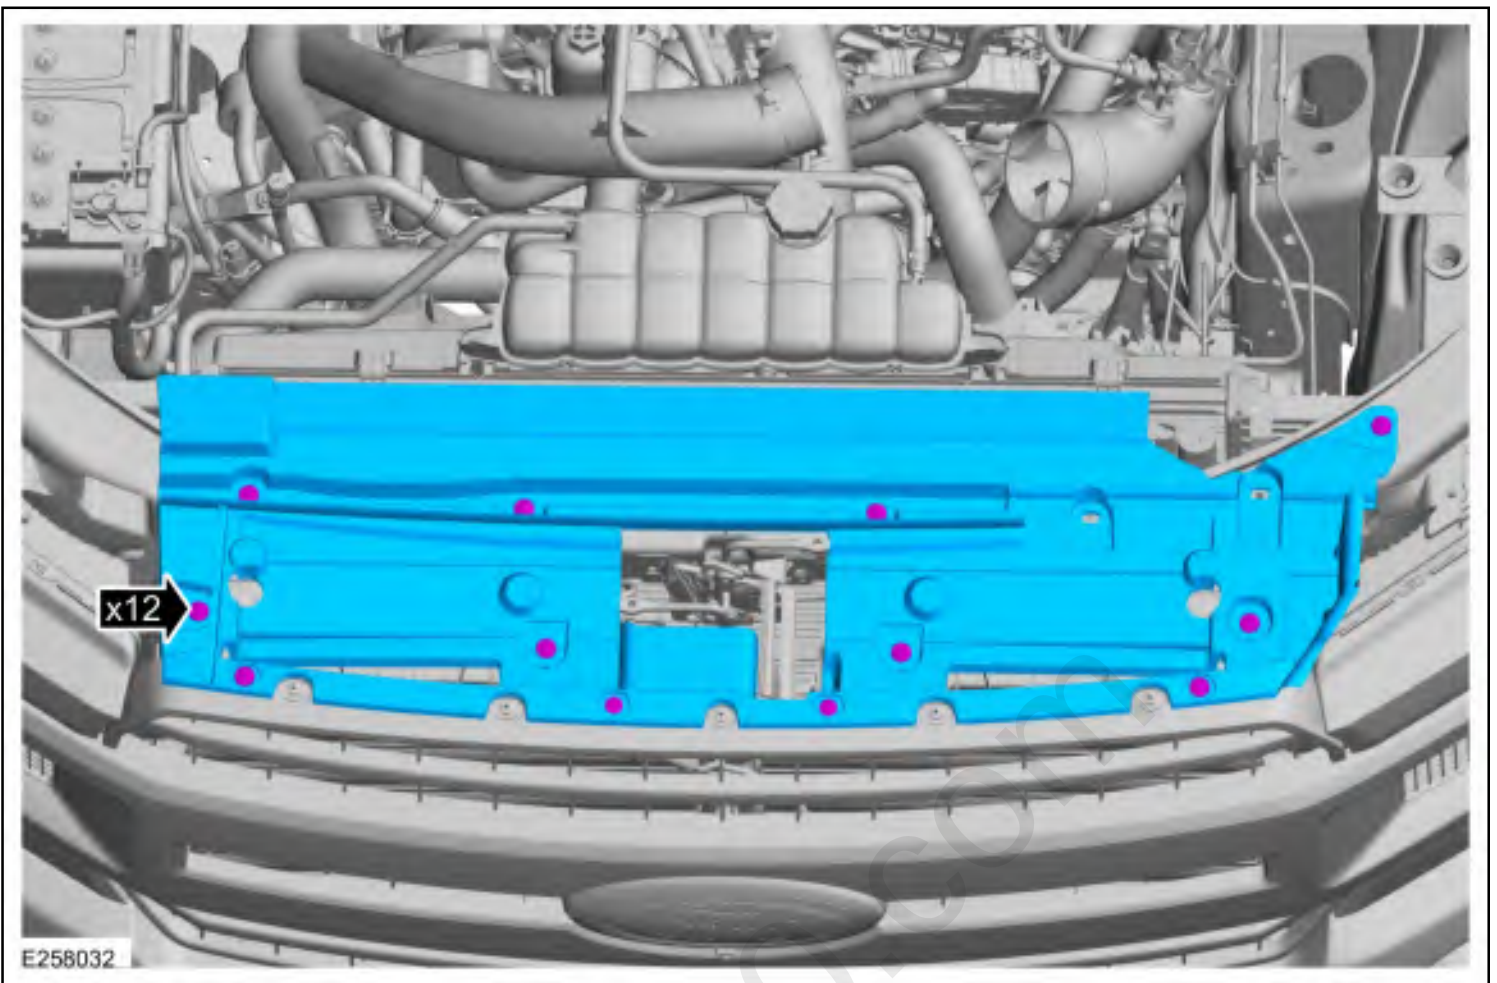

4. Remove the bolts and position the degas bottle aside.
Torque: 62 lb.in (7 Nm)

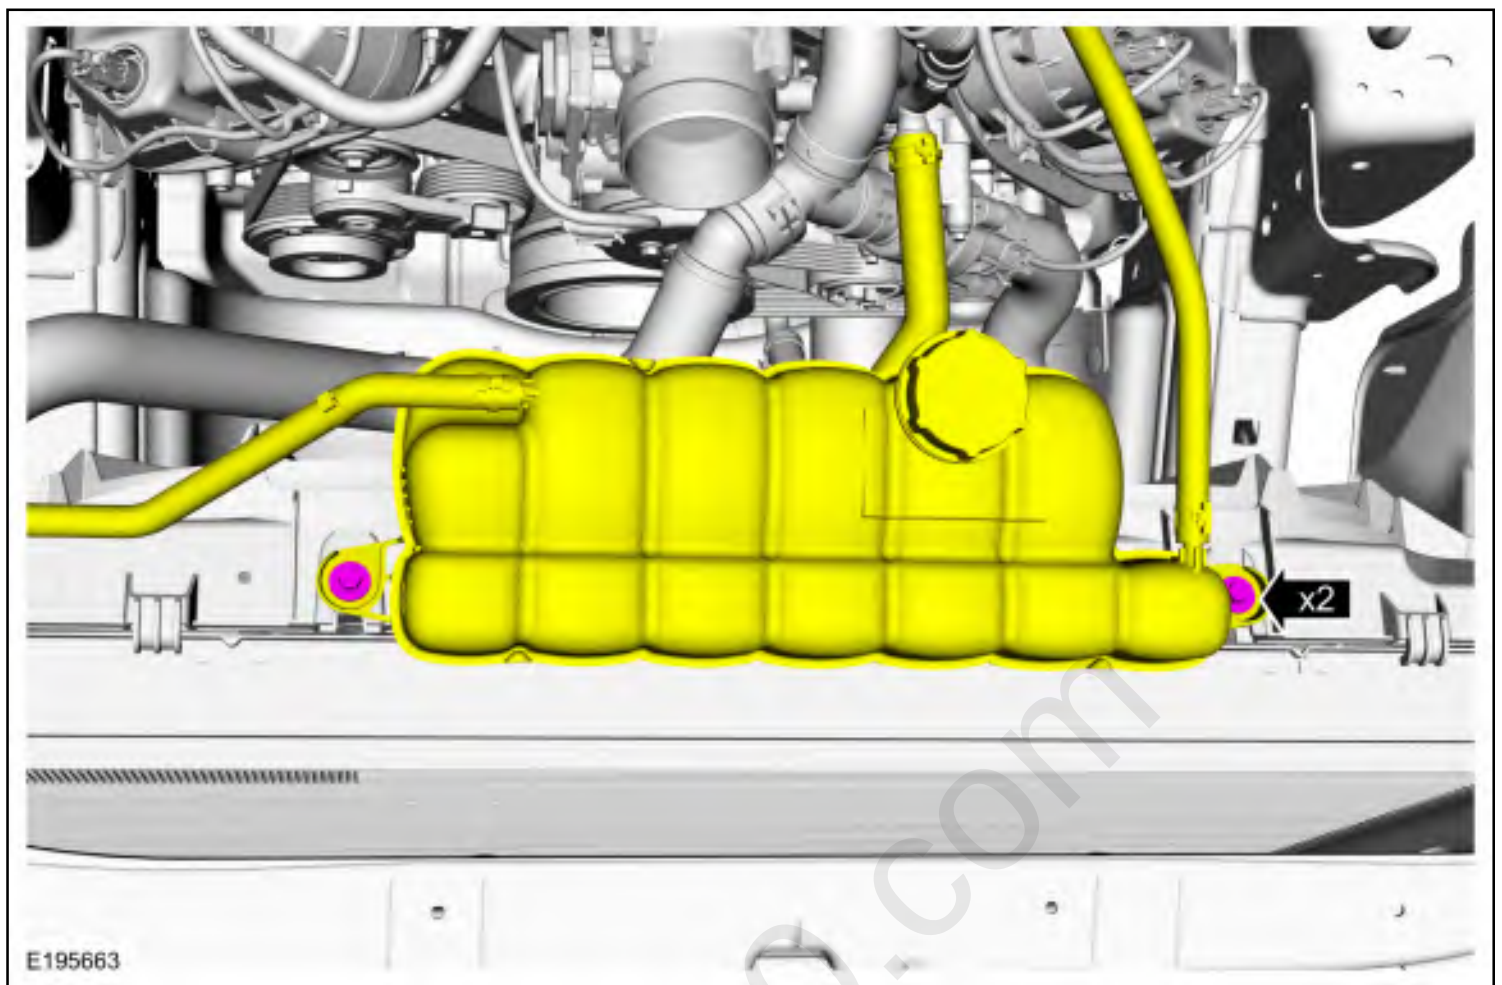

5. Disconnect the electrical connectors, detach the pin-type retainers and position the wiring harness aside.

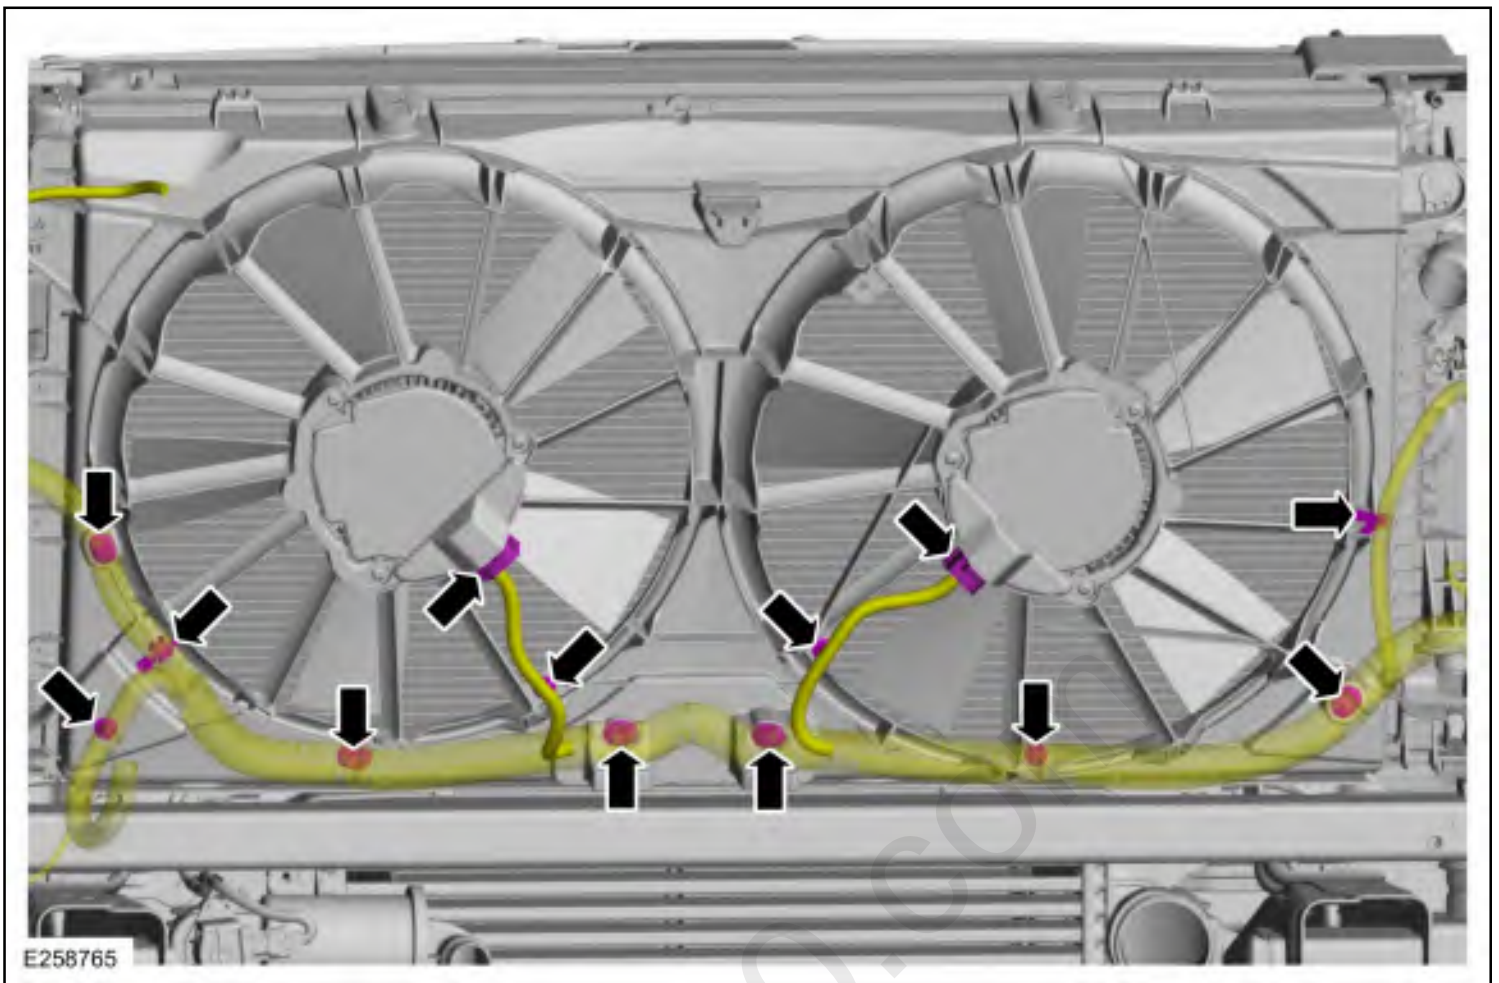


6. Remove the bolts that secure the cooling fan motor and shroud.
Torque: 62 lb.in (7 Nm)




7. Lift the cooling fan motor and shroud upward and place wooden block to support it. Detach the pin-

type retainers that secure the lower radiator shield to the cooling fan shroud.
Use the General Equipment: Wooden Block

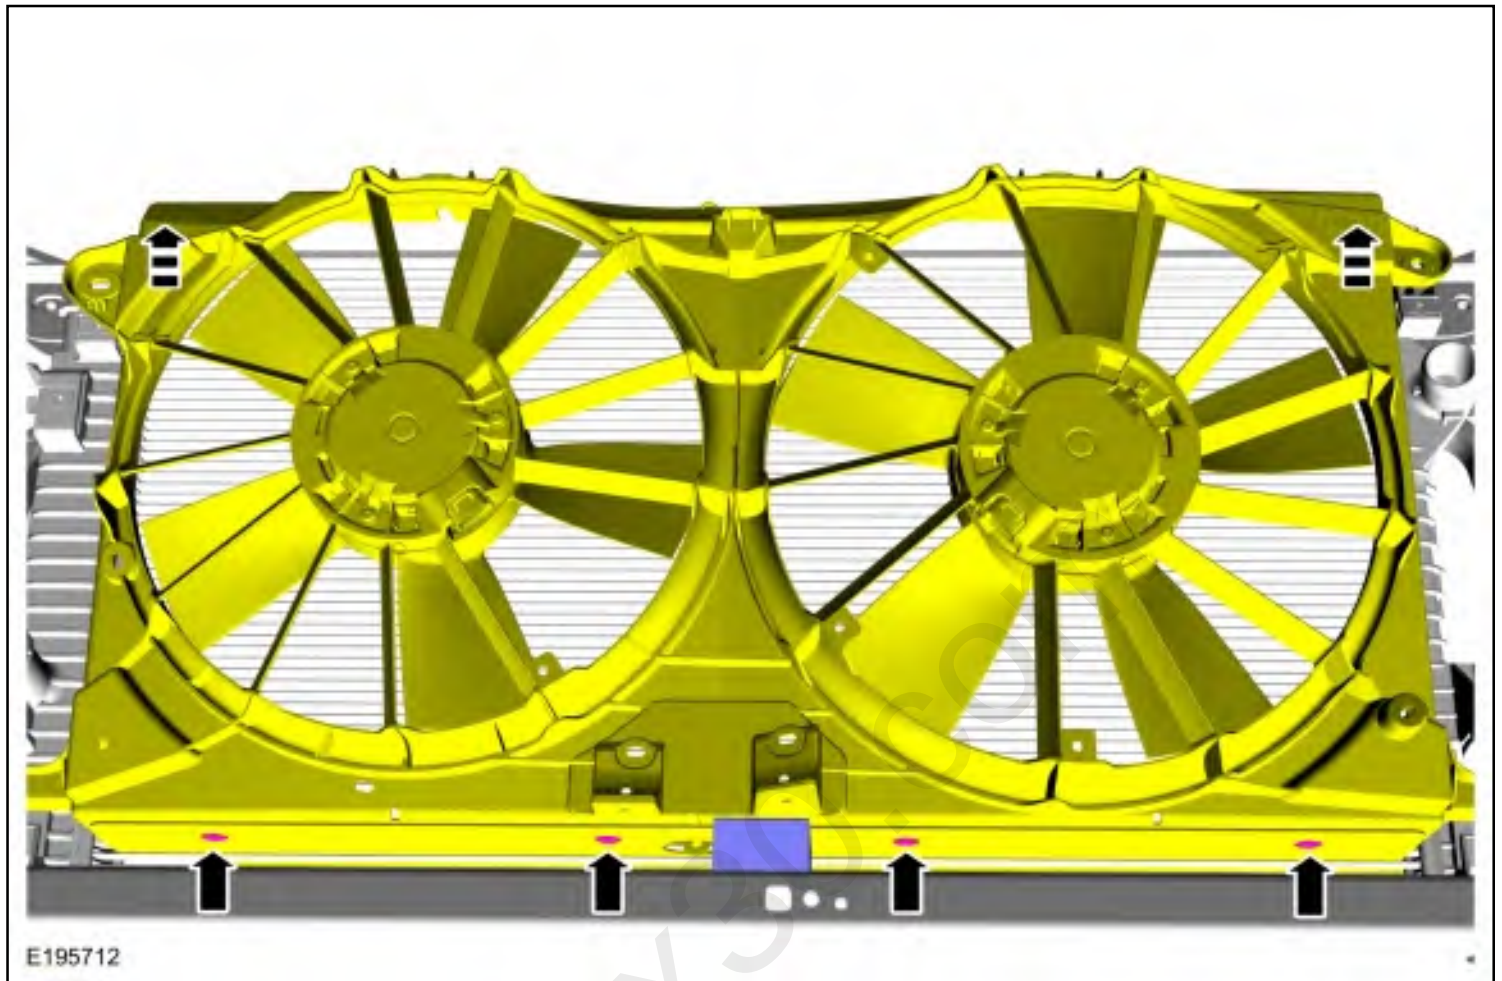

8. Remove the cooling fan motor and shroud.

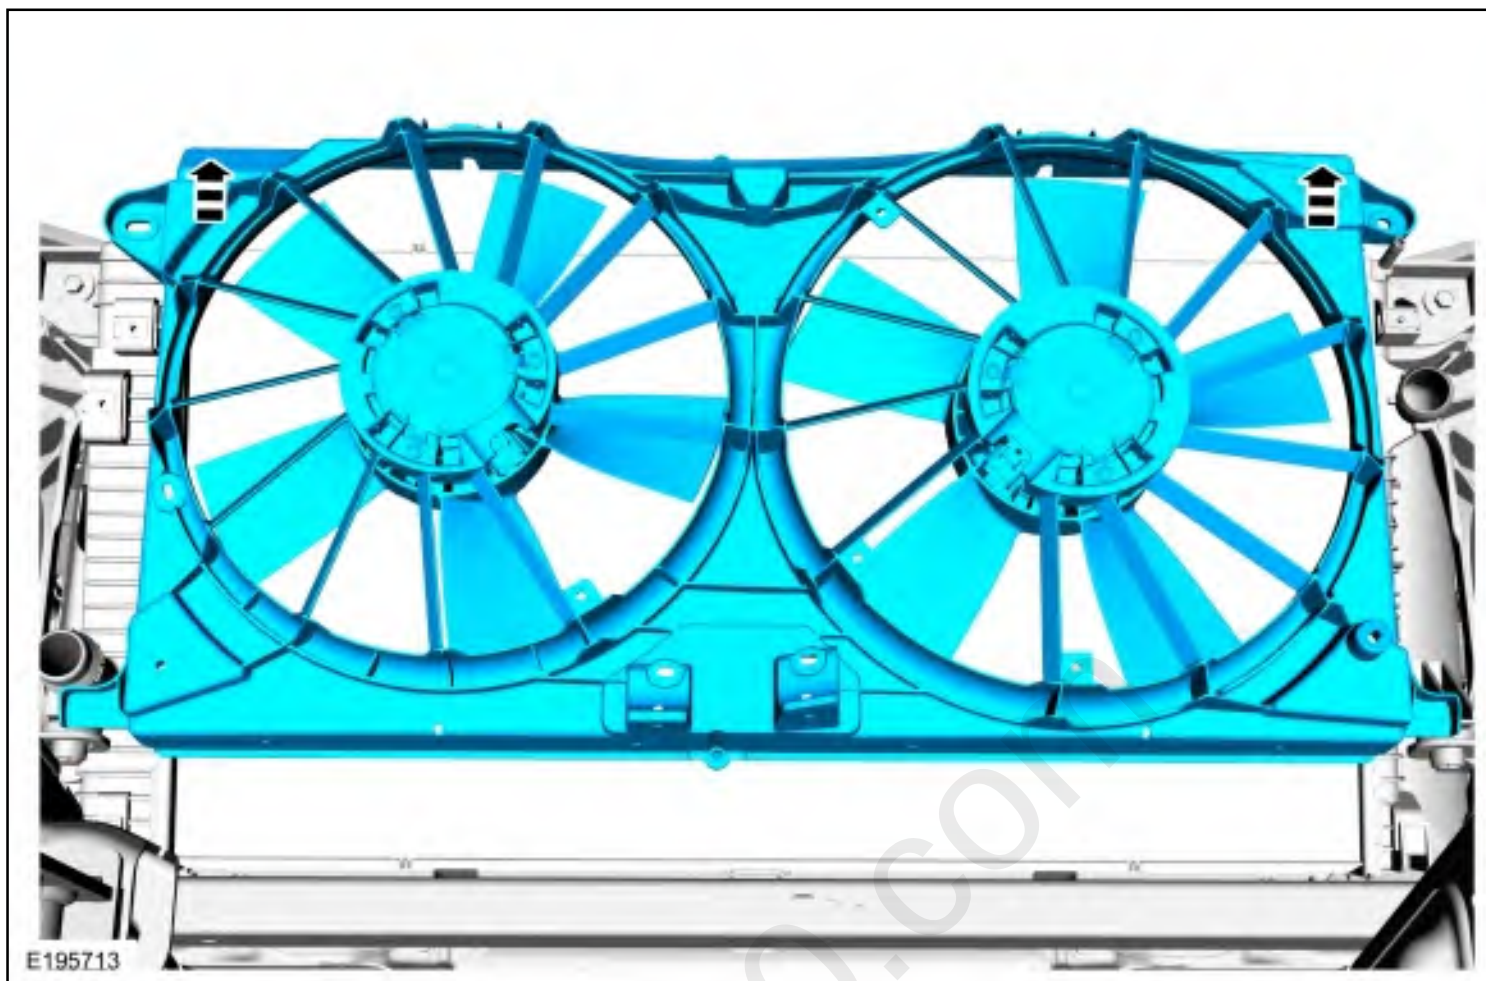

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company
