

Telematics Control Unit (TCU) Module Antenna Coaxial Cable

Removal

Regular Cab

1. Lower the headliner.
Refer to: [Headliner - Lowering - Regular Cab](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

Crew Cab/Super Cab


2. Remove the loadspace trim panel.
Refer to: [Loadspace Trim Panel - SuperCab/SuperCrew](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
3. Lower the headliner.
Refer to: [Headliner - Lowering - SuperCrew](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
Refer to: [Headliner - Lowering - SuperCab](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

Installation

Regular Cab

NOTE: The original equipment telematics antenna cable is part of the wiring harness and cannot be removed. This procedure refers to replacement of the telematics antenna cable by overlaying existing body harness with a new telematics antenna cable and securing it to the wiring harness.

1. Cut the ends off the old telematics antenna cable. Overlay the new telematics antenna cable on the vehicle wiring harness following the routing shown. Secure the new telematics antenna cable to the wiring harness with tape or zip ties as necessary.

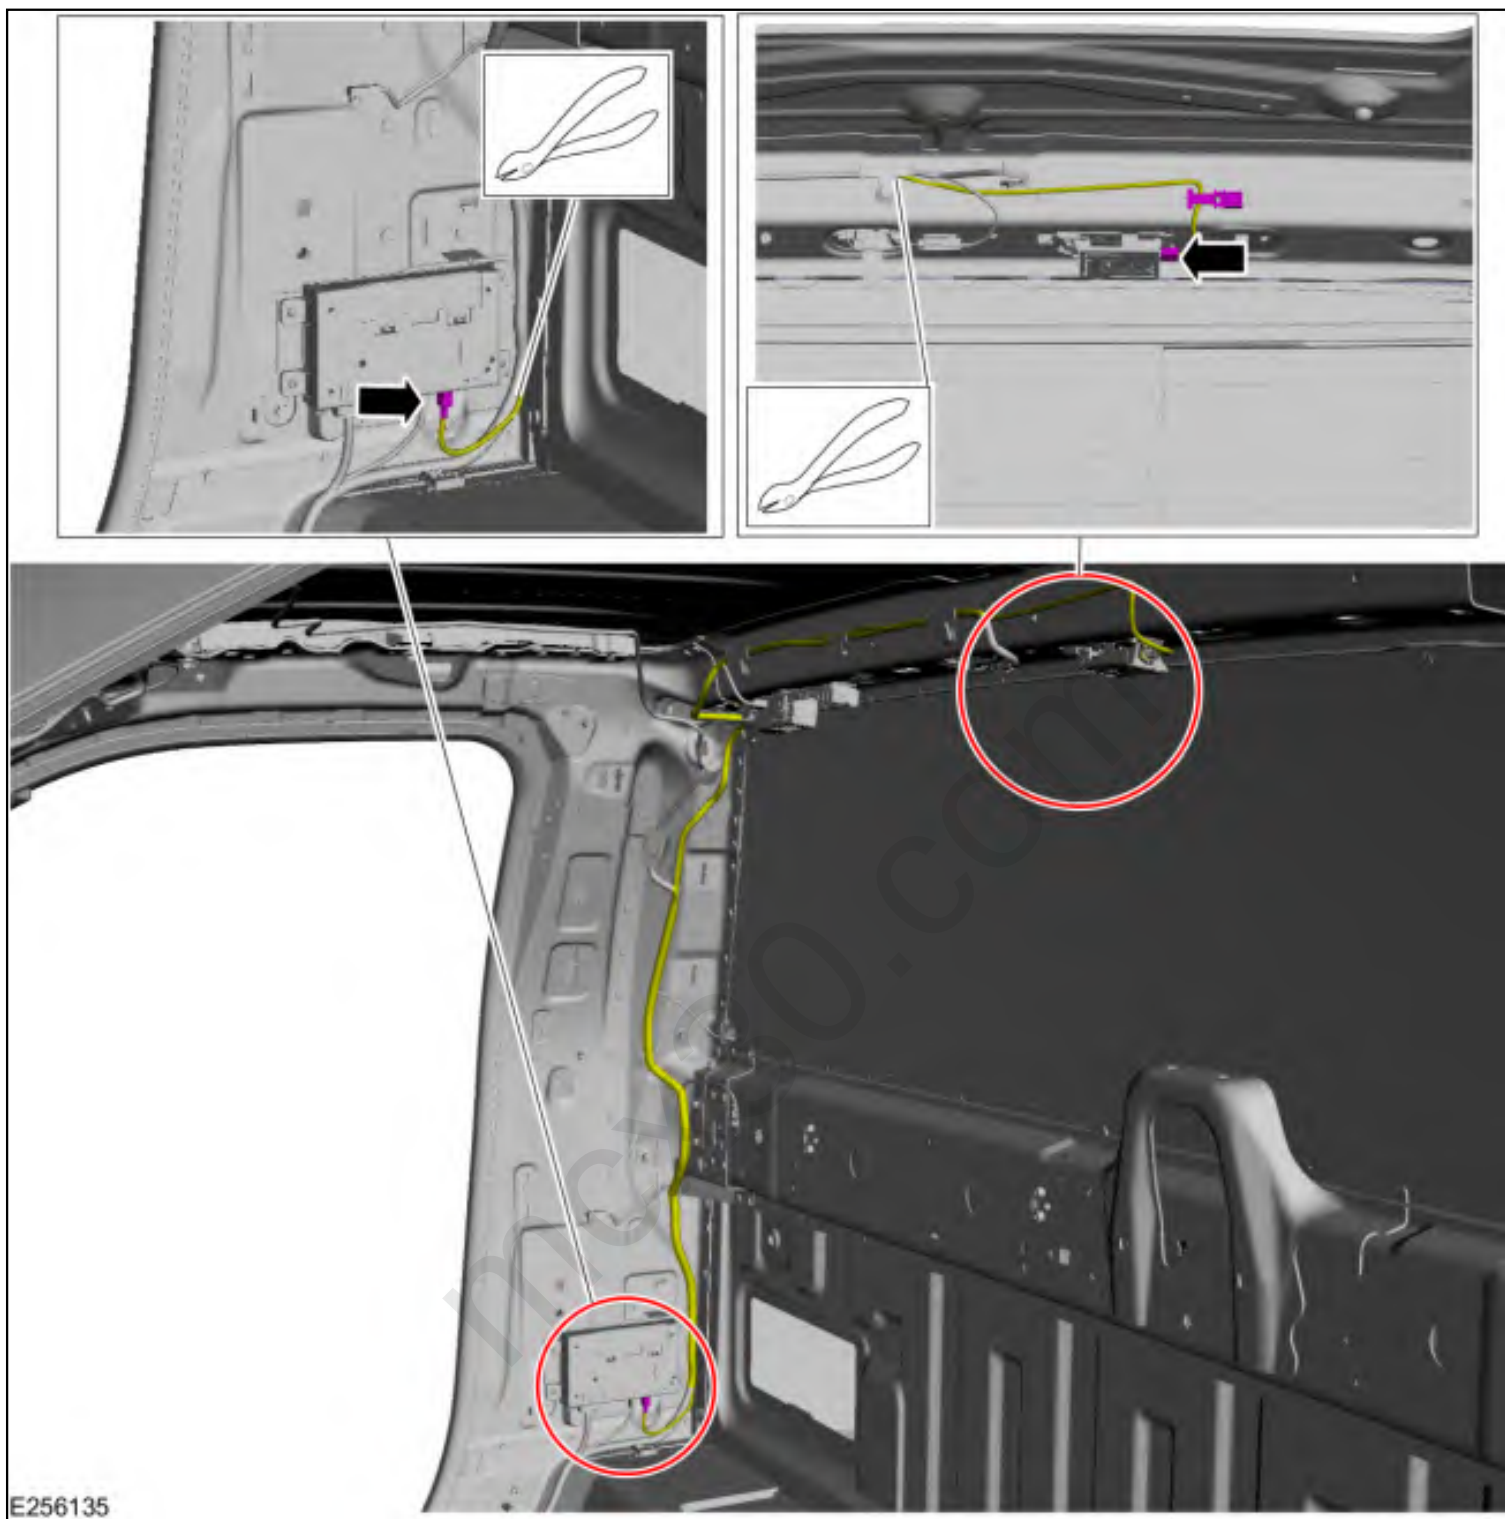


2. Install the headliner.

Refer to: [Headliner - Regular Cab](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

Crew Cab/Super Cab

NOTE: The original equipment telematics antenna cable is part of the wiring harness and cannot be removed. This procedure refers to replacement of the telematics antenna cable by overlaying existing body harness with a new telematics antenna cable and securing it to the wiring harness.

3. Cut the ends off the old telematics antenna cable. Overlay the new telematics antenna cable on the vehicle wiring harness following the routing shown. Secure the new telematics antenna cable to the wiring harness with tape or zip ties as necessary.

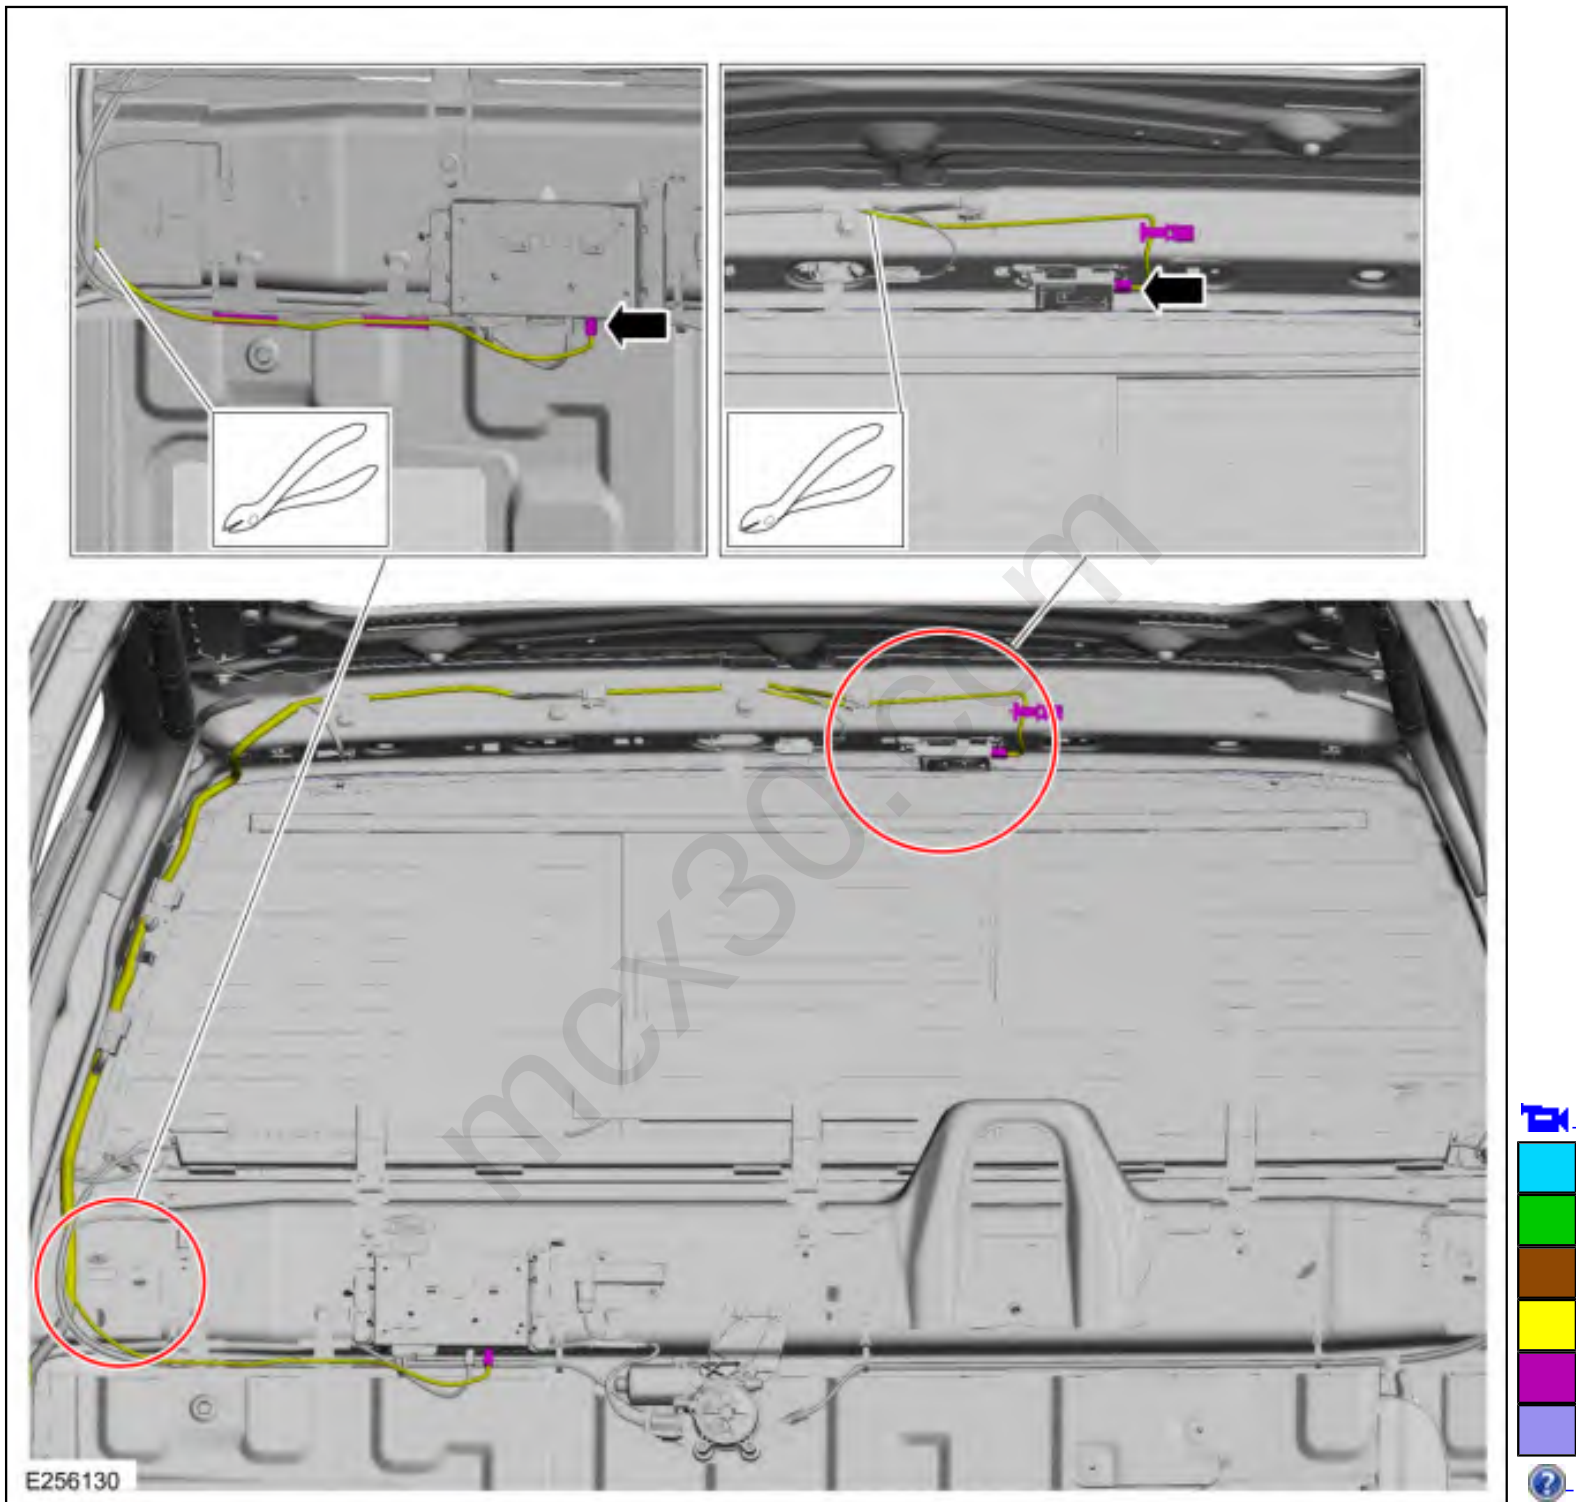

4. Install the headliner.
Refer to: [Headliner - Lowering - SuperCrew](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
Refer to: [Headliner - Lowering - SuperCab](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
5. Install the loadspace trim panel.
Refer to: [Loadspace Trim Panel - SuperCab/SuperCrew](#) (501-05 Interior Trim and Ornamentation, Removal and

Installation).

Copyright © 2018 Ford Motor Company

mcx30.com