


Cellular Antenna Cable

Removal


NOTE: Removal steps in this procedure may contain installation details.

All vehicles

1. Release the clips and remove the RH side front scuff plate.

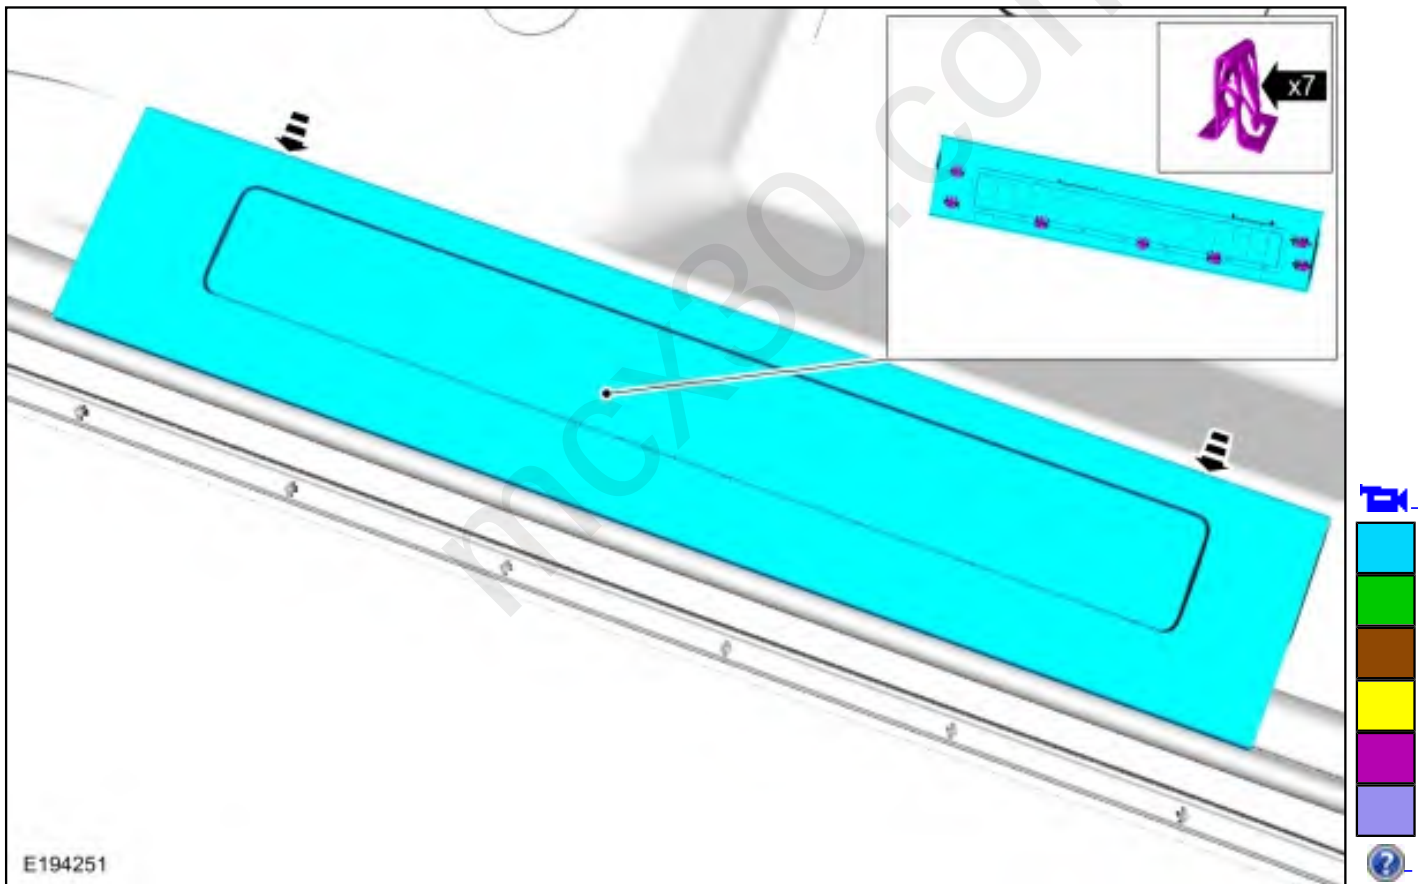

1. Position aside the weather strip.
2. Remove the BCM access cover.
3. Release the 4 clips and remove the RH side lower cowl trim panel.

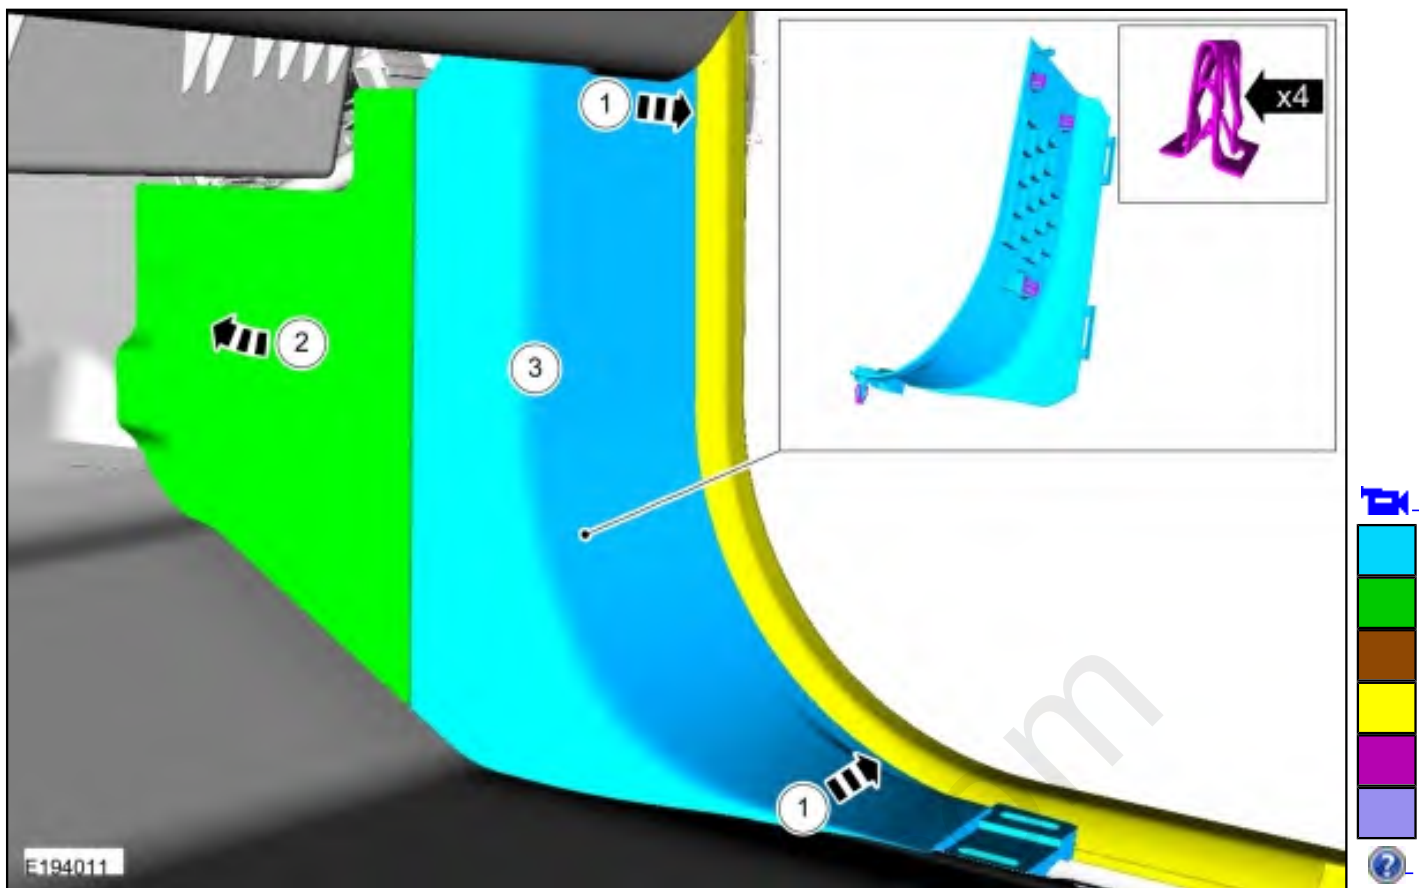

Regular Cab

3. Remove the RH lower B-pillar trim panel.

Refer to: [B-Pillar Trim Panel - Regular Cab](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

Crew Cab/Super Cab

4. Remove the loadspace trim panel.


Refer to: [Loadspace Trim Panel - SuperCab/SuperCrew](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

Installation

Crew Cab/Super Cab




1. **NOTE:** Crew cab is shown, super cab is similar.

Disconnect the electrical connectors, cut and remove the cable ends and overlay and secure the replacement cable.

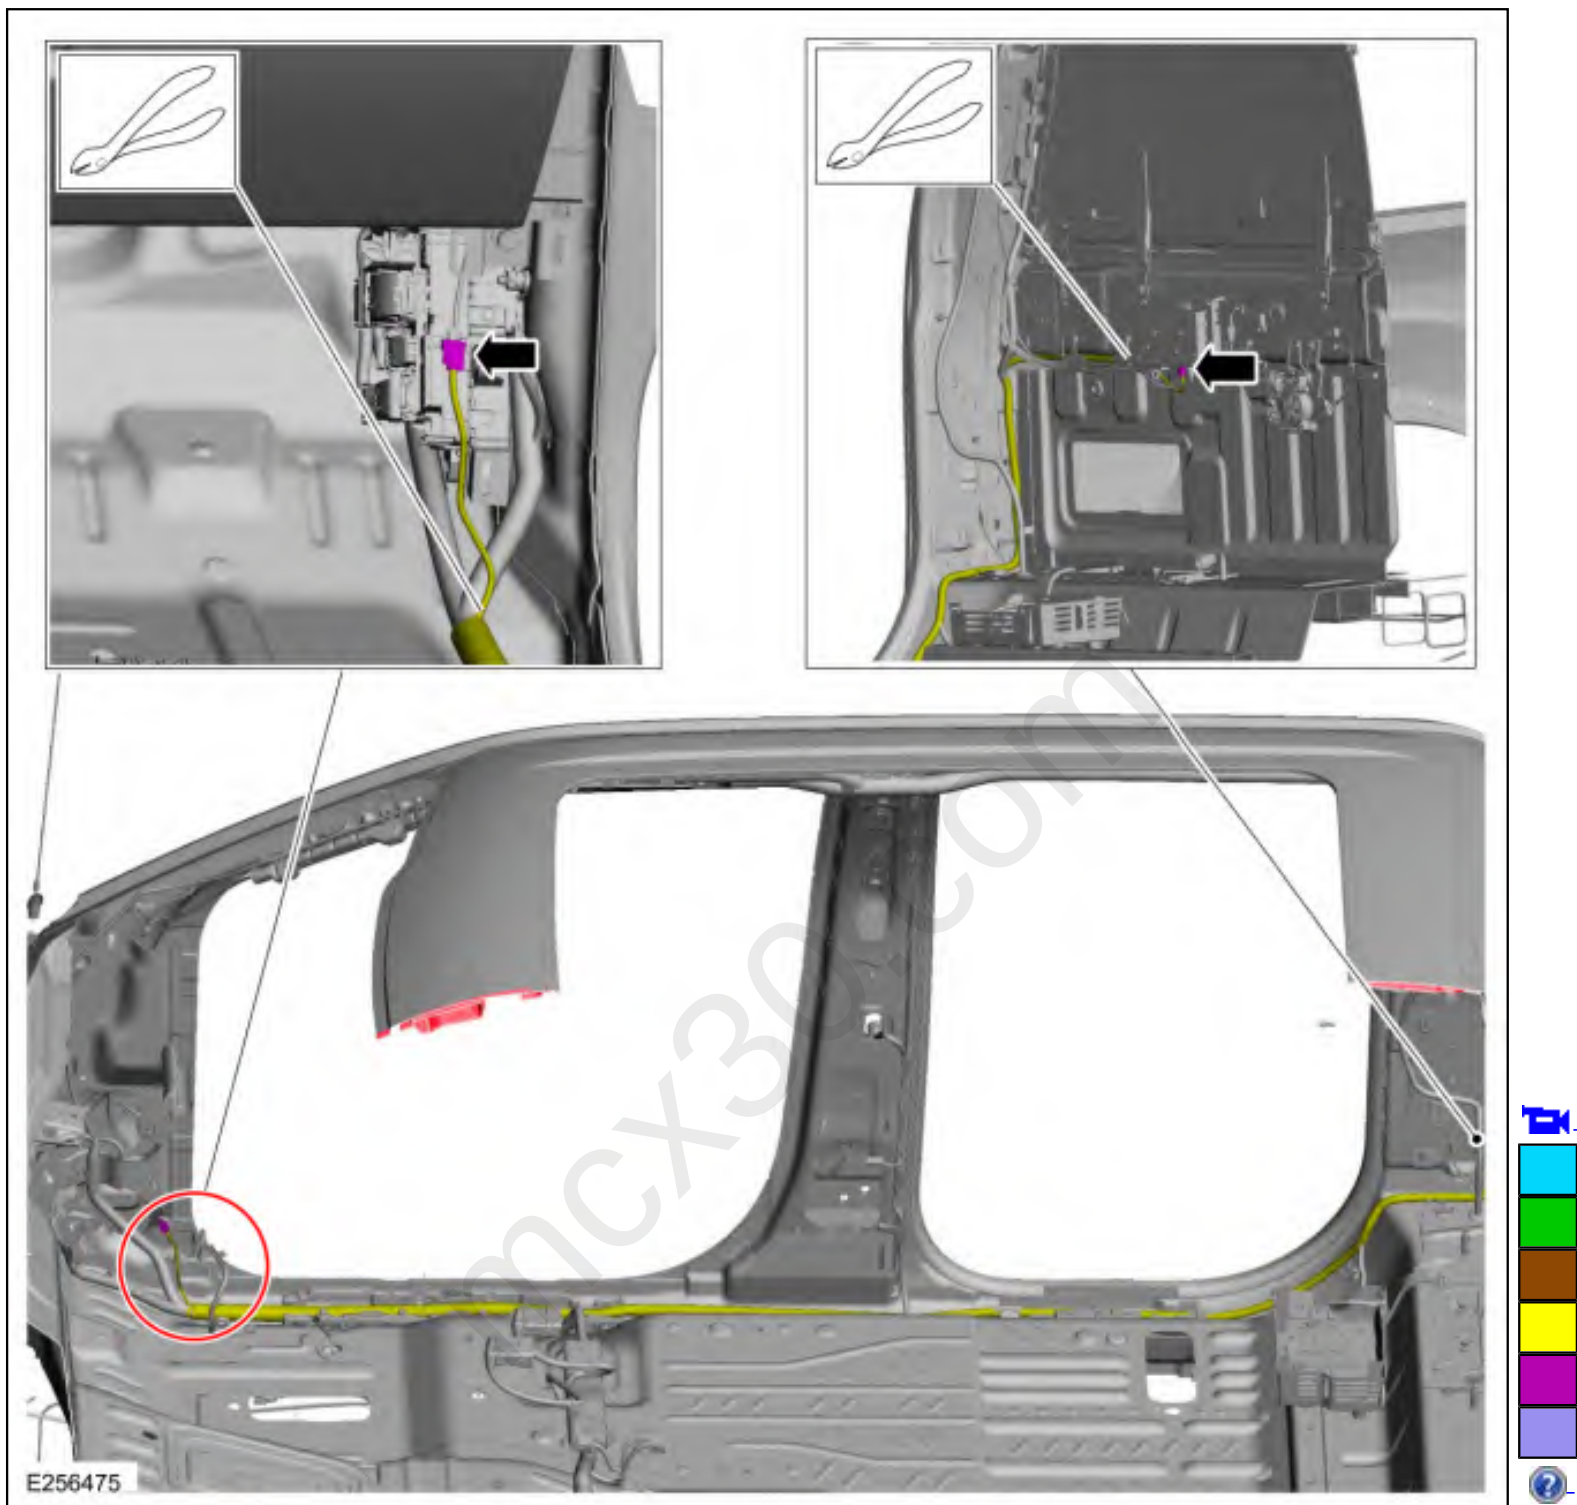

Regular Cab

2. Disconnect the electrical connectors, cut and remove the cable ends and overlay and secure the replacement cable.

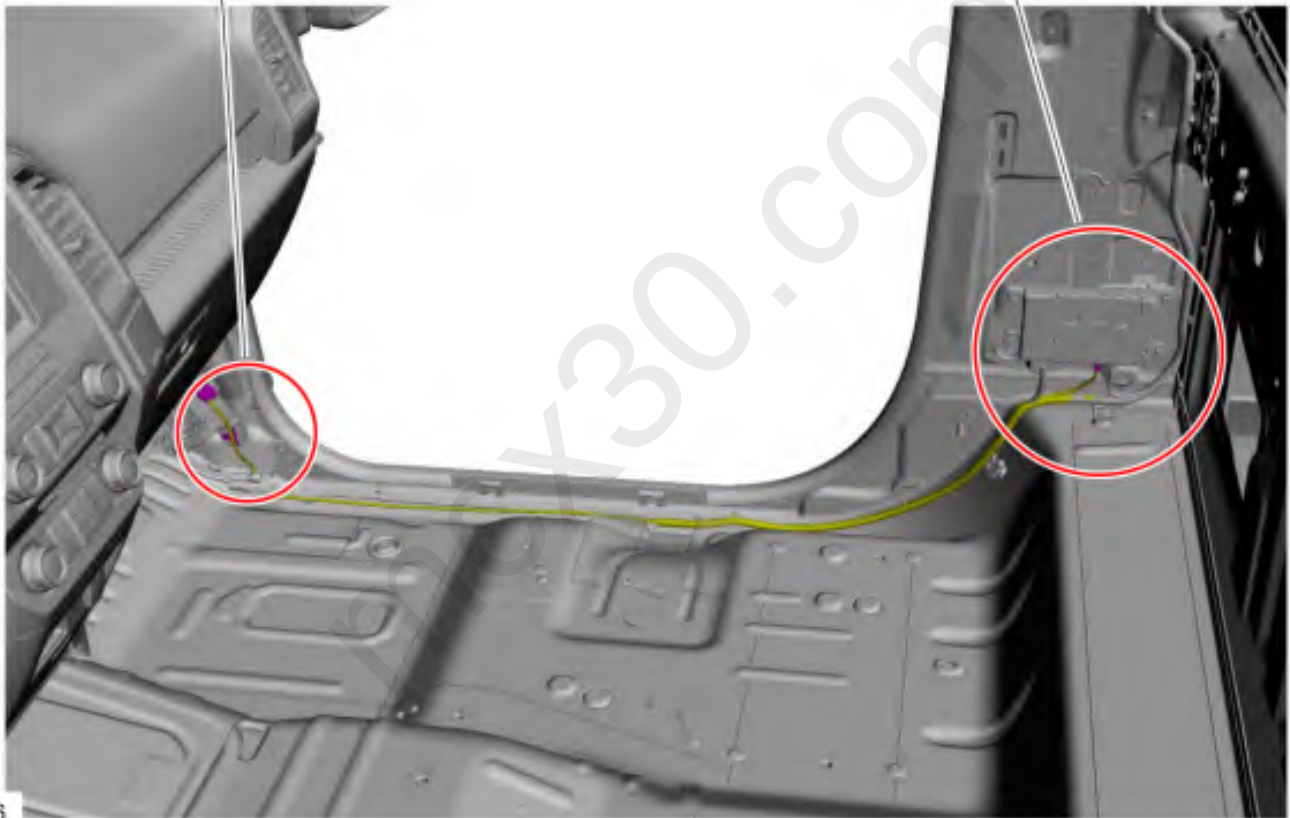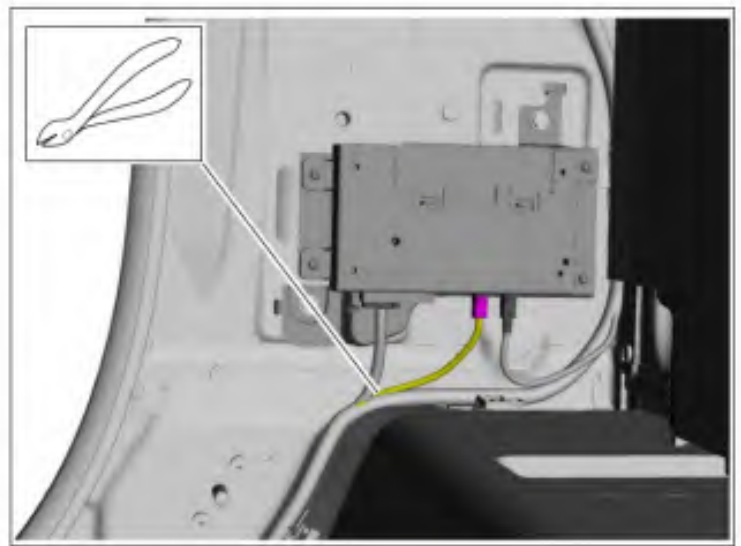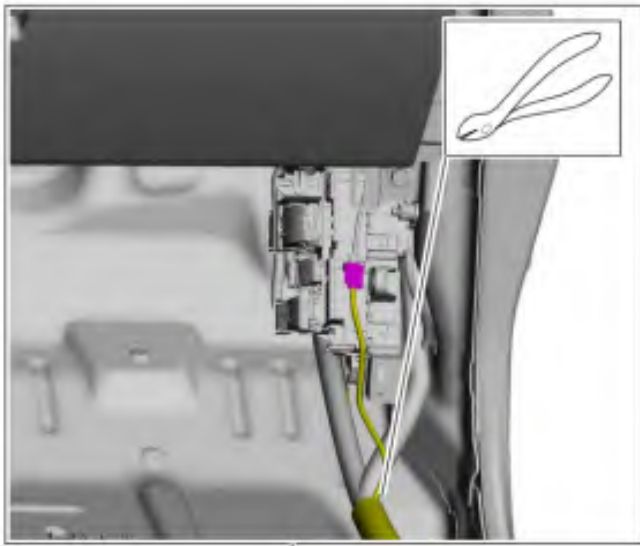

E256476



All vehicles

3. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company