


# Headlamp Assembly

Base Part Number: Base Part Number: 13005


## Removal

### All vehicles


1. Remove the radiator grille.  
Refer to: [Radiator Grille](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).
2. Remove the fender moulding screws and position the fender moulding out.

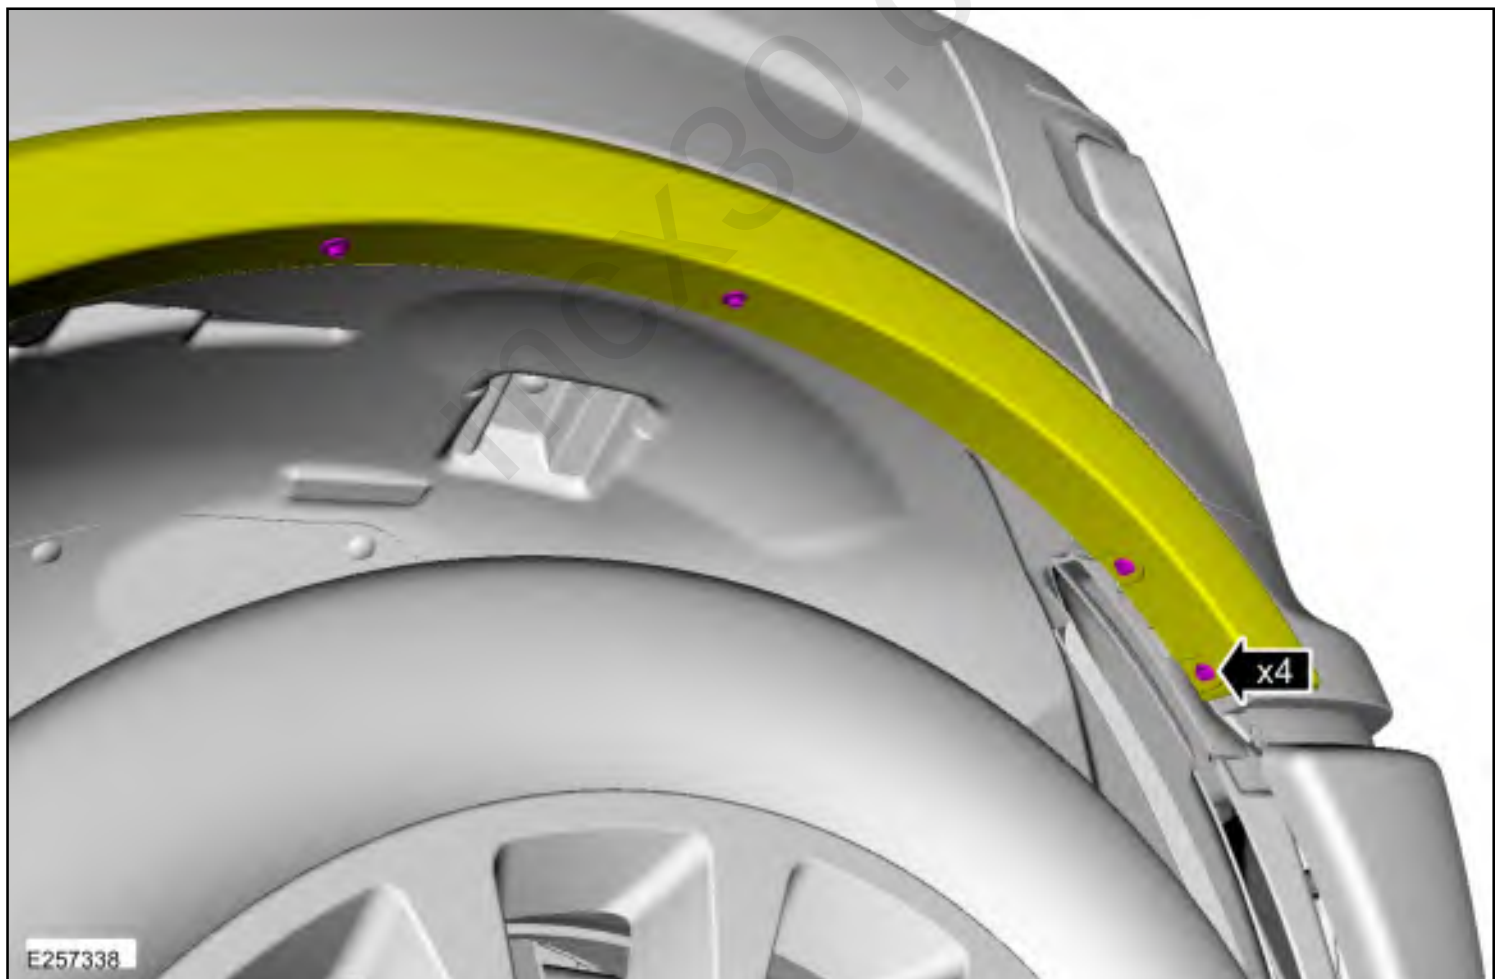

3. Release the clips and remove the front bumper filler panel.

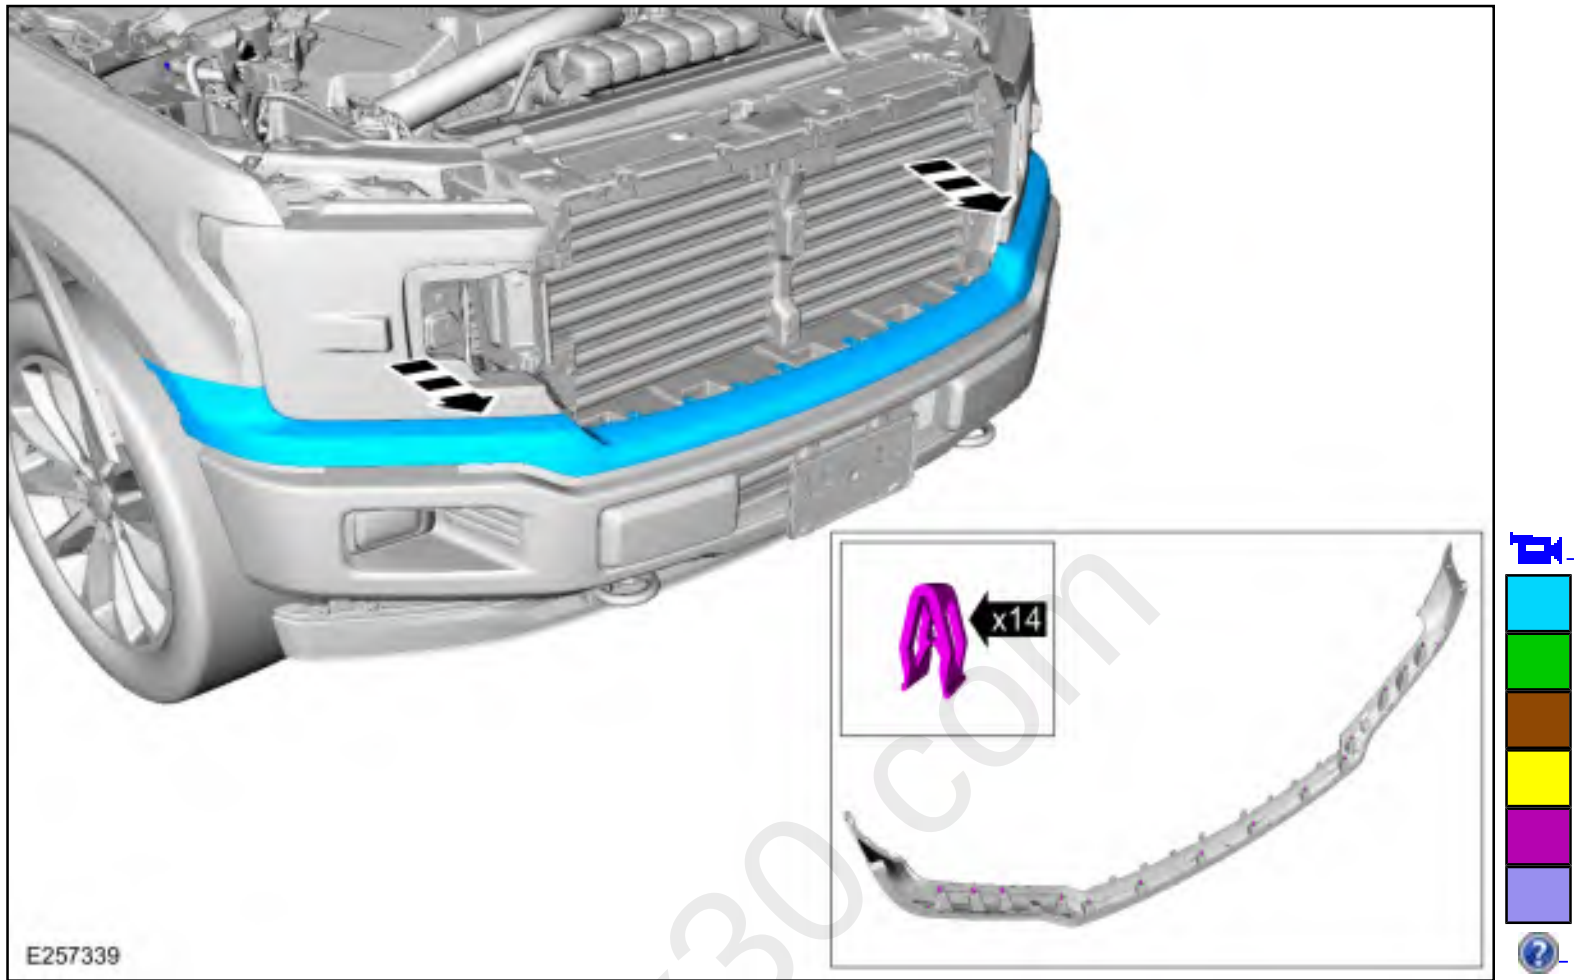


4. Remove the bolts and the front bumper filler panel mounting bracket.

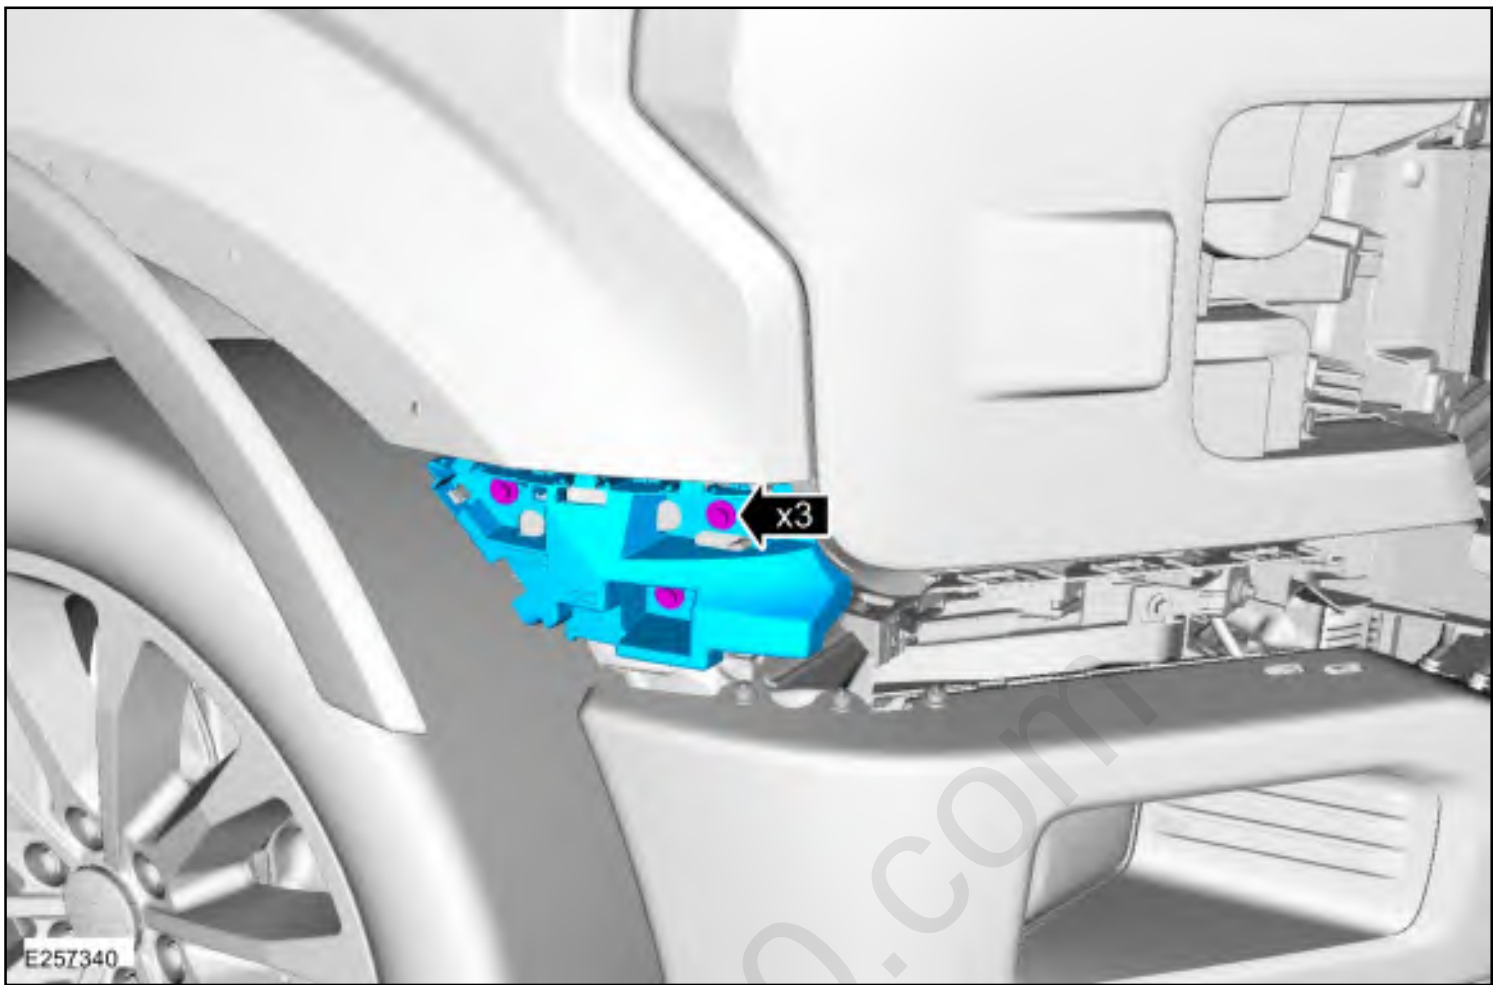


### Vehicles with halogen headlamps

5. Disconnect the marker lamp electrical connector.

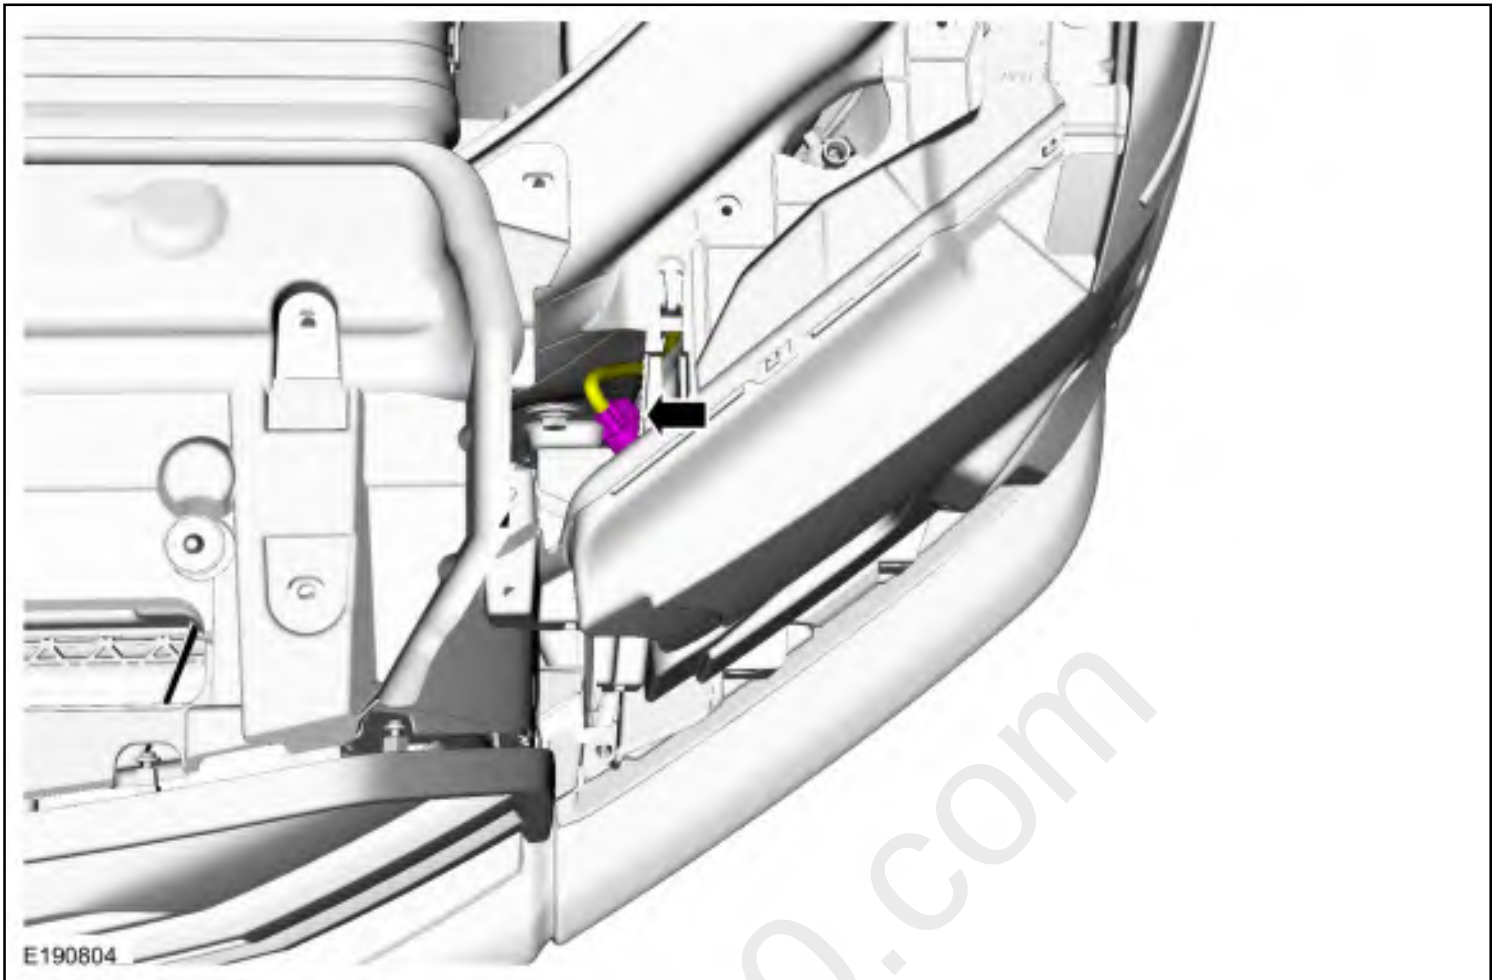


## All vehicles

1. Remove the upper headlamp bolts and the push pin.  
*Torque: 28 lb.in (3.2 Nm)*
2. Remove the lower headlamp bolts.  
*Torque: 155 lb.in (17.5 Nm)*

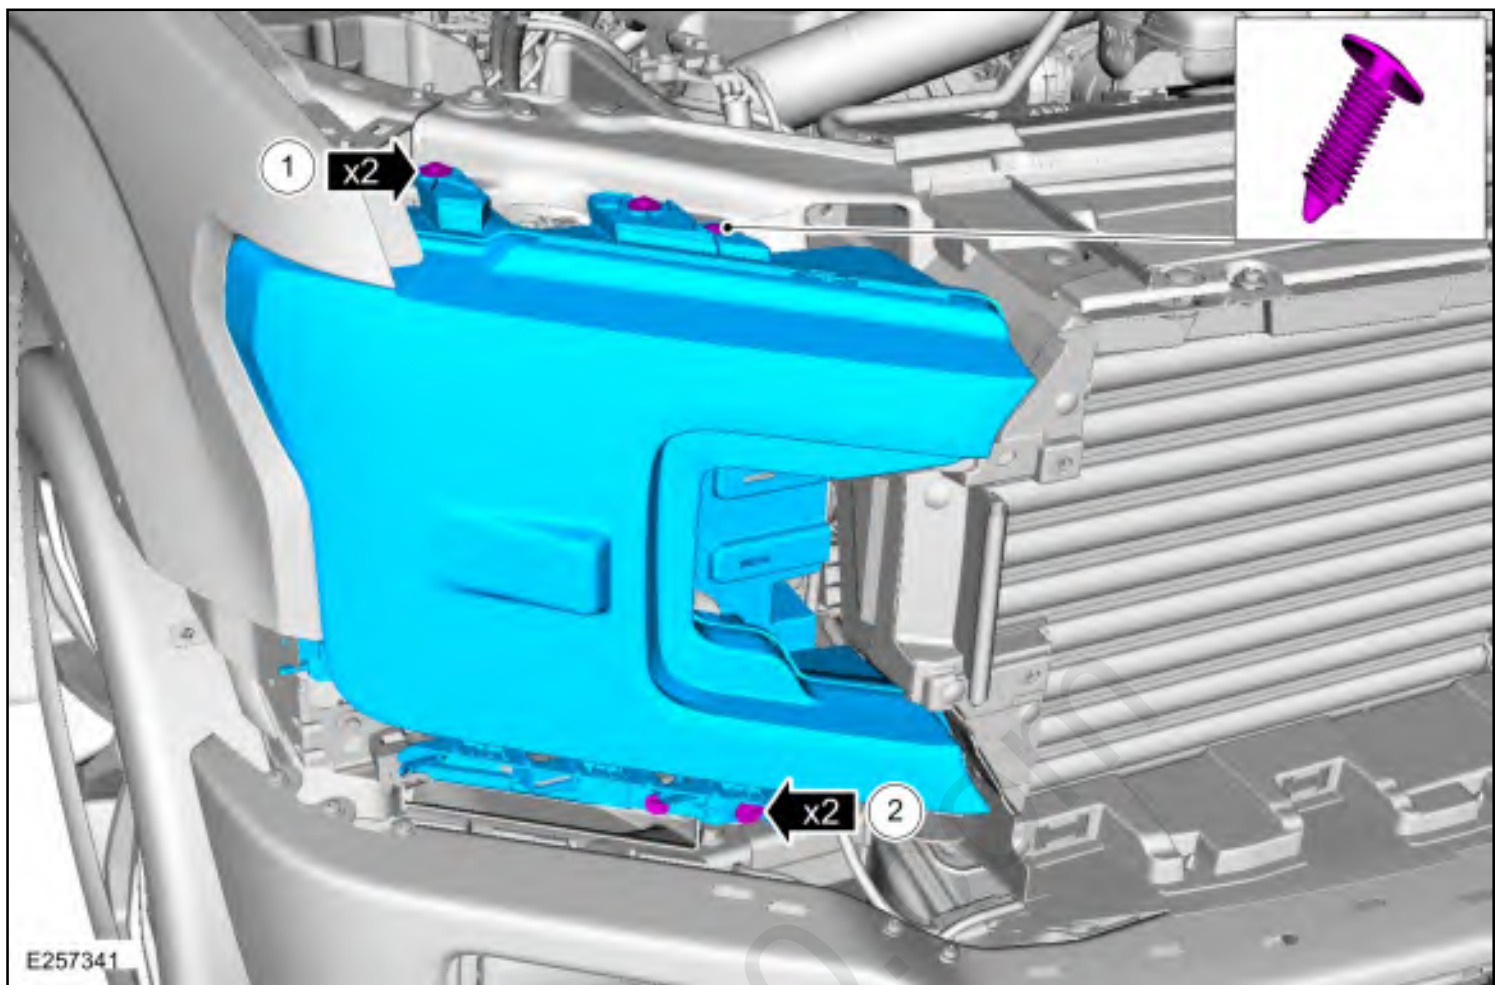


### Vehicles with halogen headlamps

7. Disconnect the electrical connectors and remove the headlamp assembly.

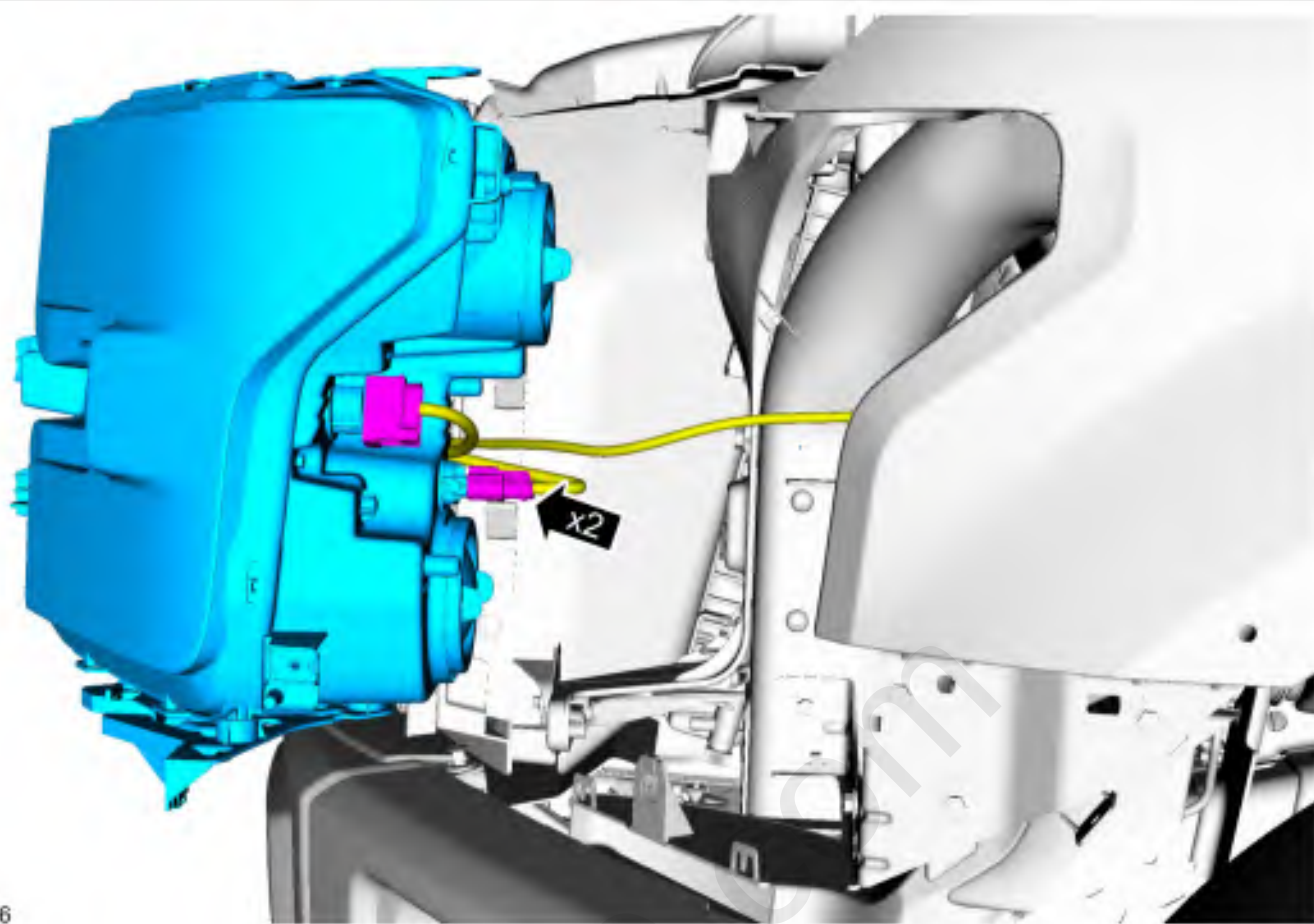

## Vehicles with LED headlamps

8. Disconnect the electrical connectors and remove the headlamp assembly.

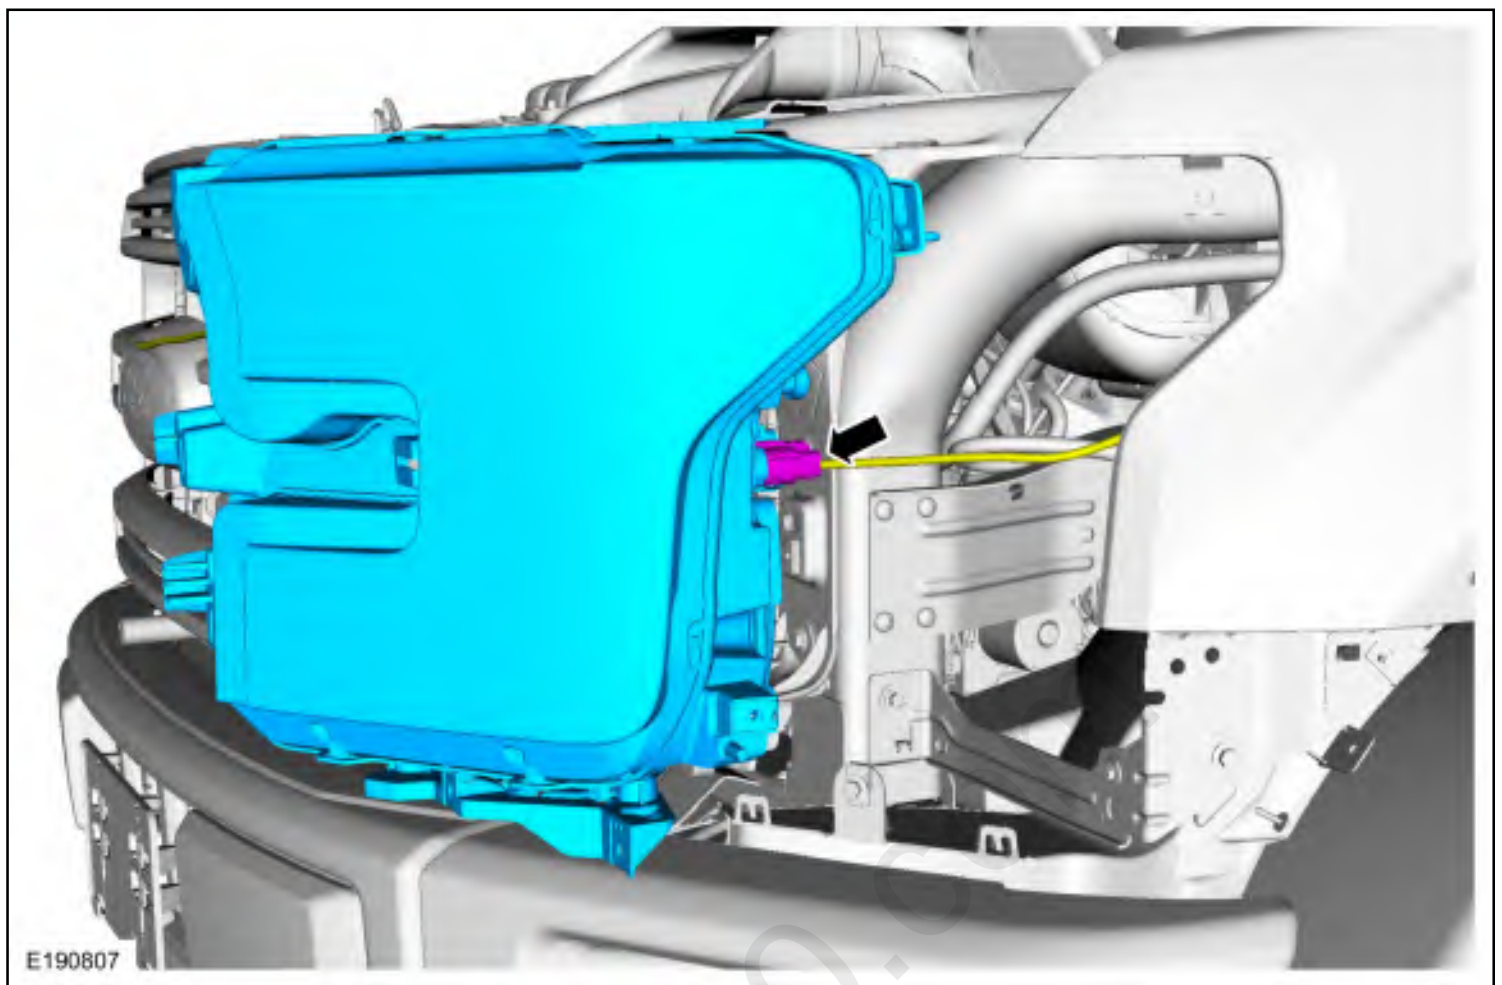

## Installation

1. To install, reverse the removal procedure.
2. Adjust the headlamps.  
Refer to: [Headlamp Adjustment](#) (417-01 Exterior Lighting, General Procedures).

Copyright © 2018 Ford Motor Company