

High Mounted Stoplamp

Removal

All vehicles


1. Lower the rear of the headliner.

Refer to: [Headliner - Lowering - Regular Cab](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).


Refer to: [Headliner - Lowering - SuperCab](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

Refer to: [Headliner - Lowering - SuperCrew](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

2. Disconnect the center high mounted stoplamp electrical connector.

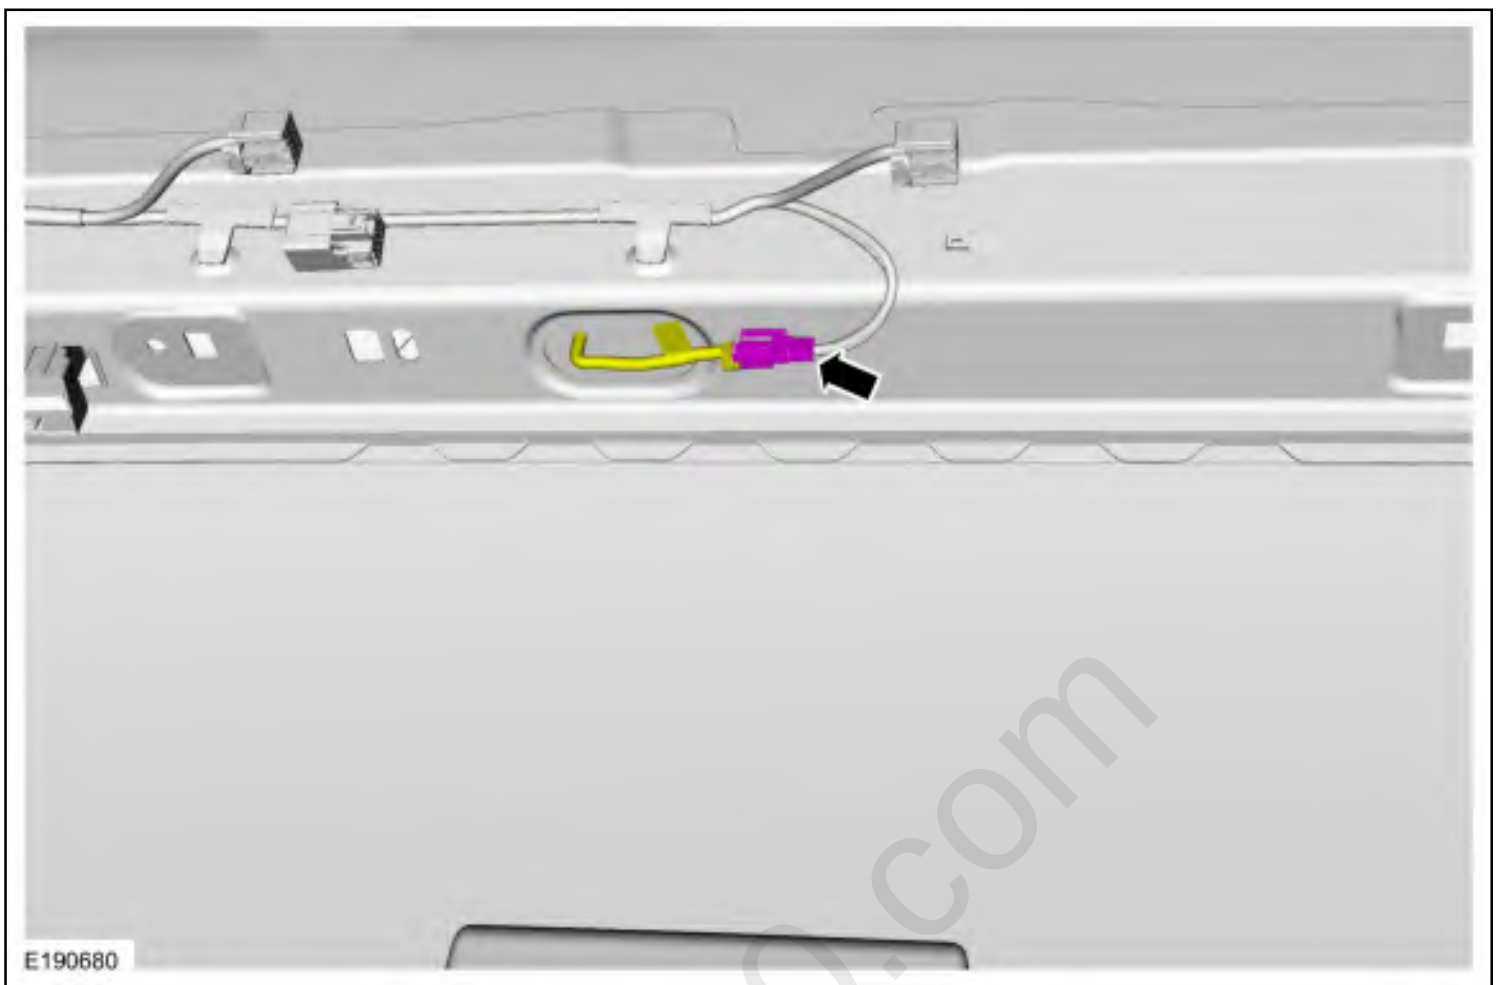


3. Remove the screws and the center high mounted stoplamp assembly.

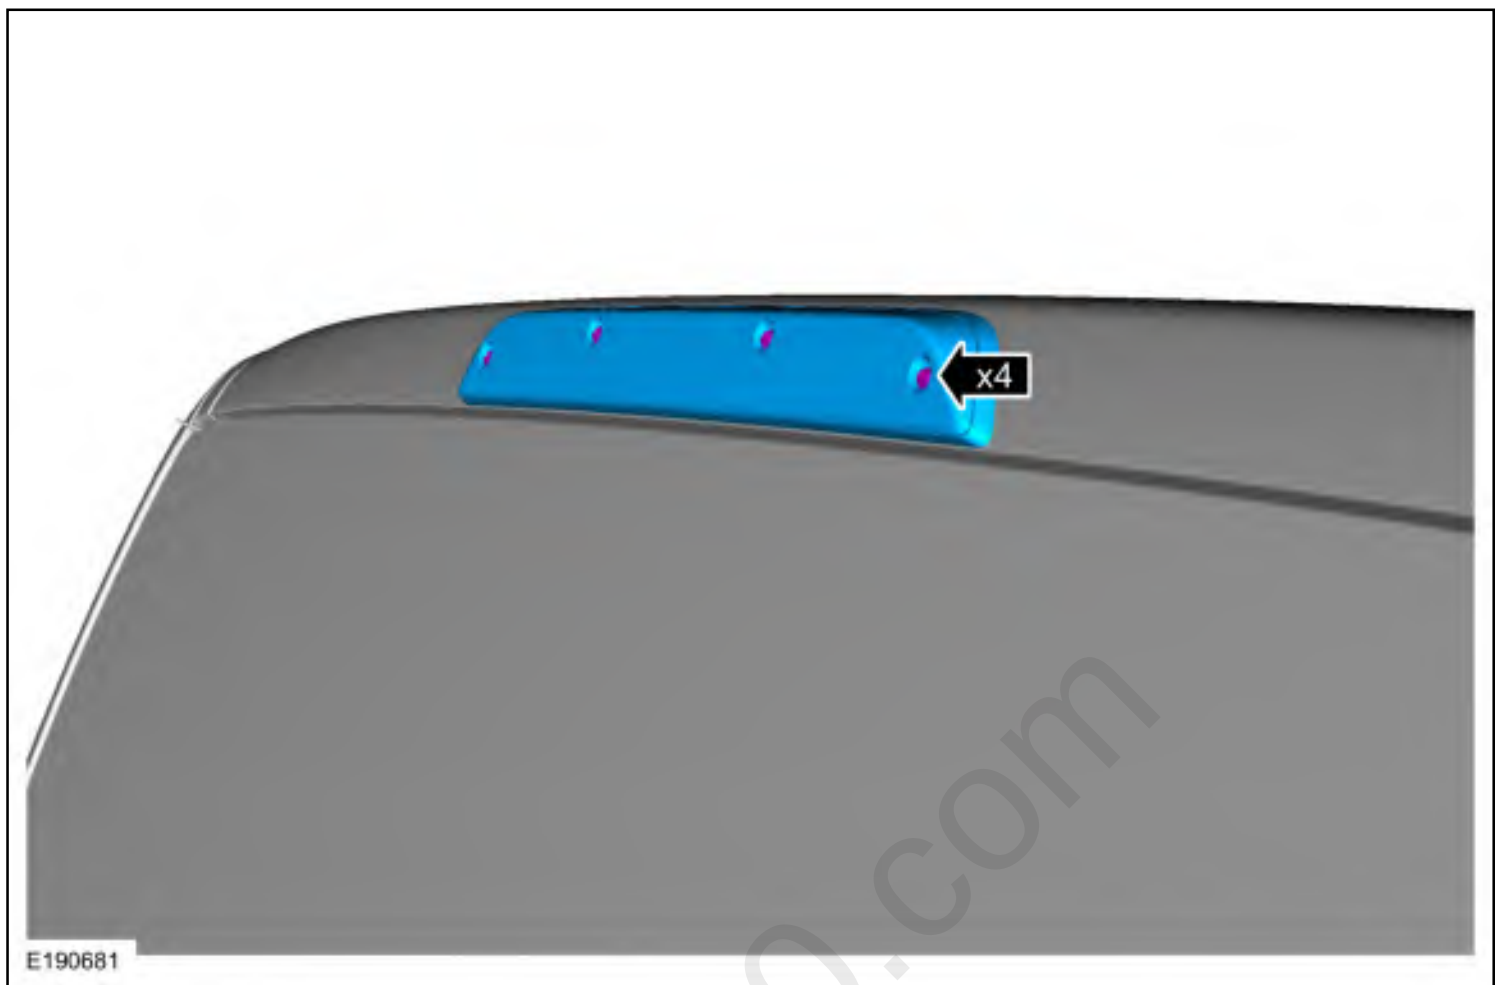


Vehicles equipped with incandescent bulbs

4. Remove the screws and position the high mounted stoplamp aside.

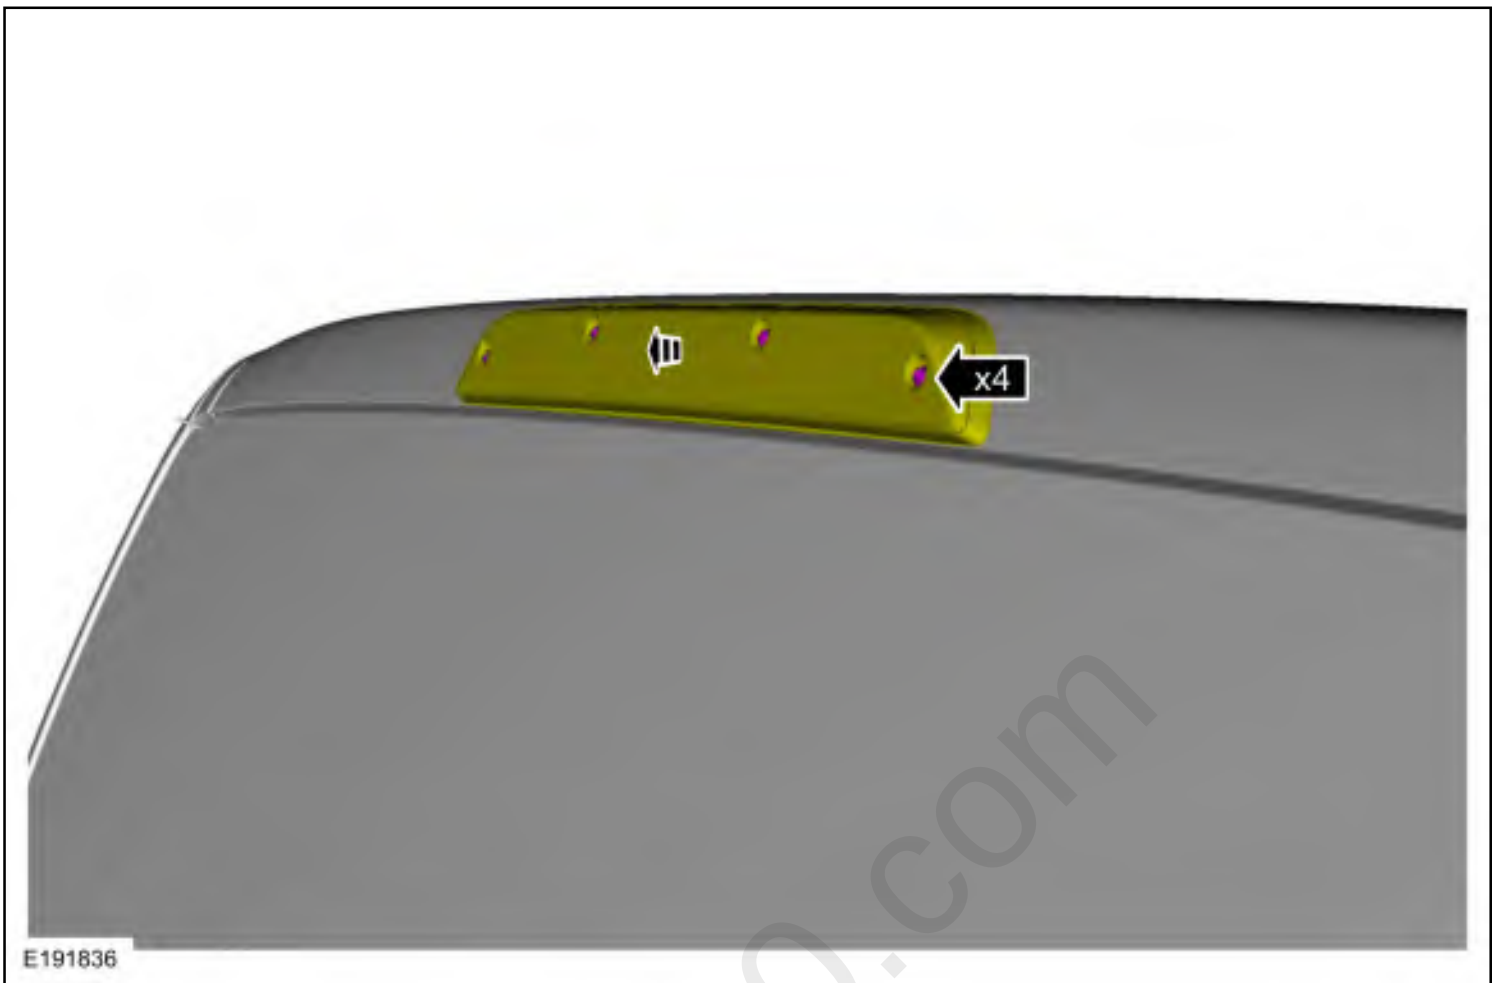

5. If required, remove the incandescent bulb.

1. Remove the bulb holder.
2. Remove the bulb.

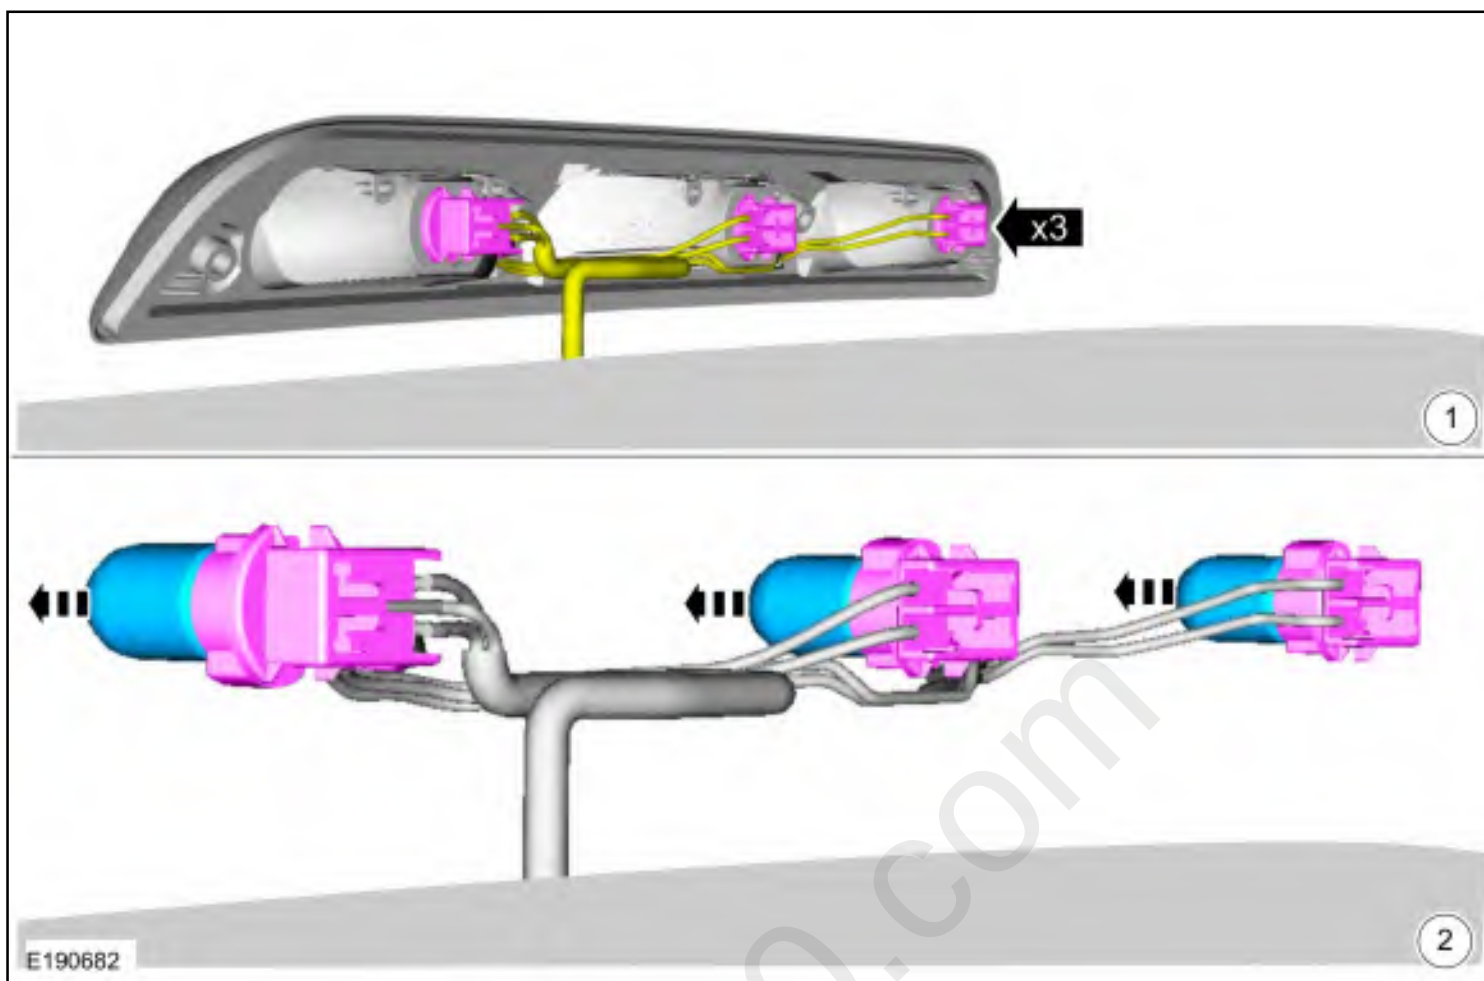

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company