



Passive Anti-Theft System (PATS) Transceiver

Removal

1. Remove the steering column shrouds.
Refer to: [Steering Column Shrouds](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
1. Disconnect the electrical connector.
2. Detach the tabs and remove the PATS transceiver.

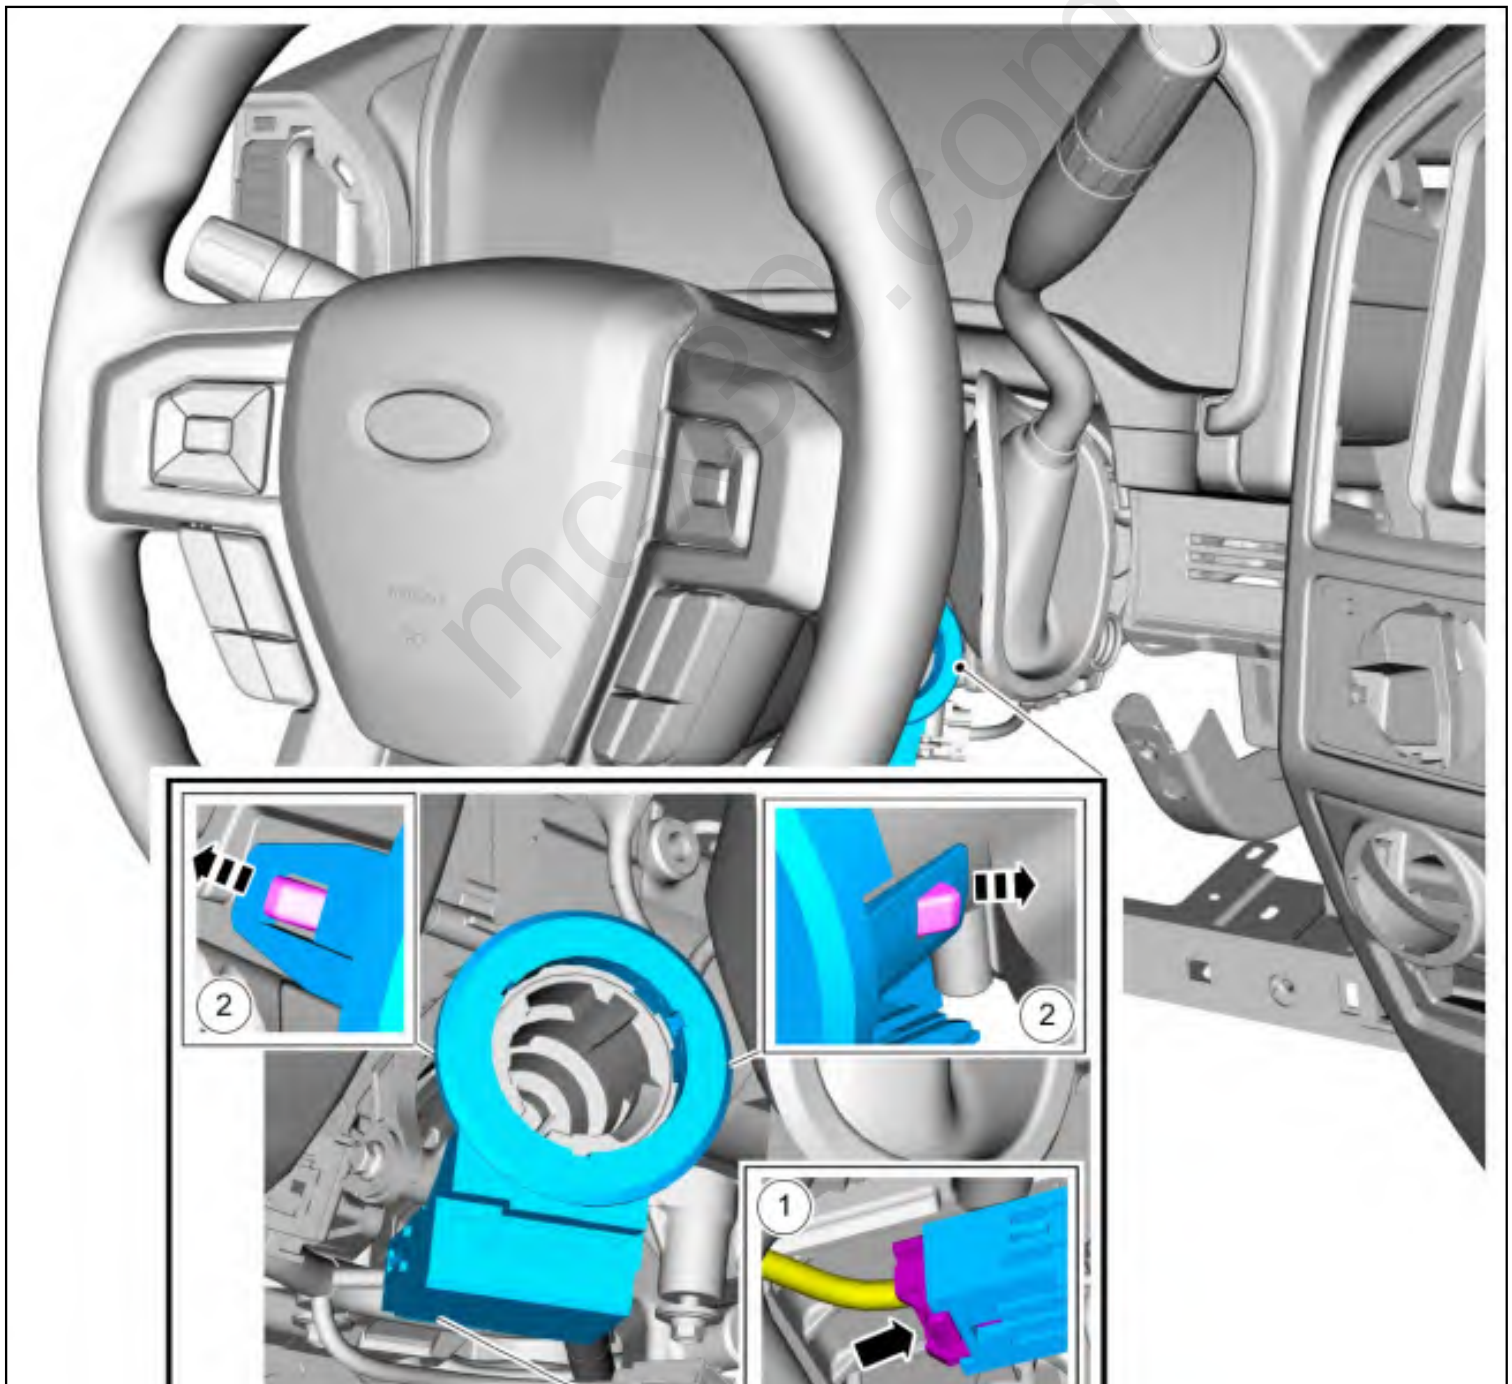

E190491

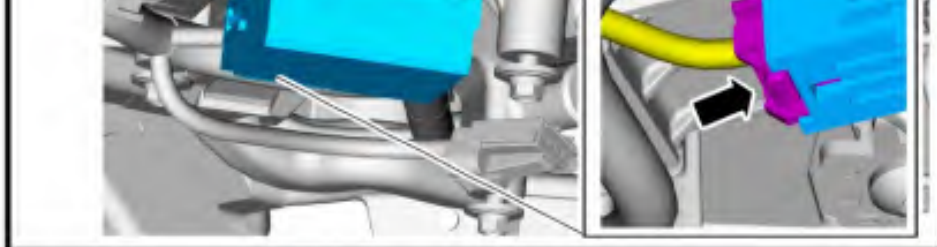

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company

mcx30.com