


Passive Anti-Theft System (PATS) Rear Antenna

Removal

1. Remove the appropriate loadspace trim panel.
Refer to: [Loadspace Trim Panel - Regular Cab](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
Refer to: [Loadspace Trim Panel - SuperCab/SuperCrew](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Disconnect the electrical connector, release the clips and remove the rear PATS antenna.

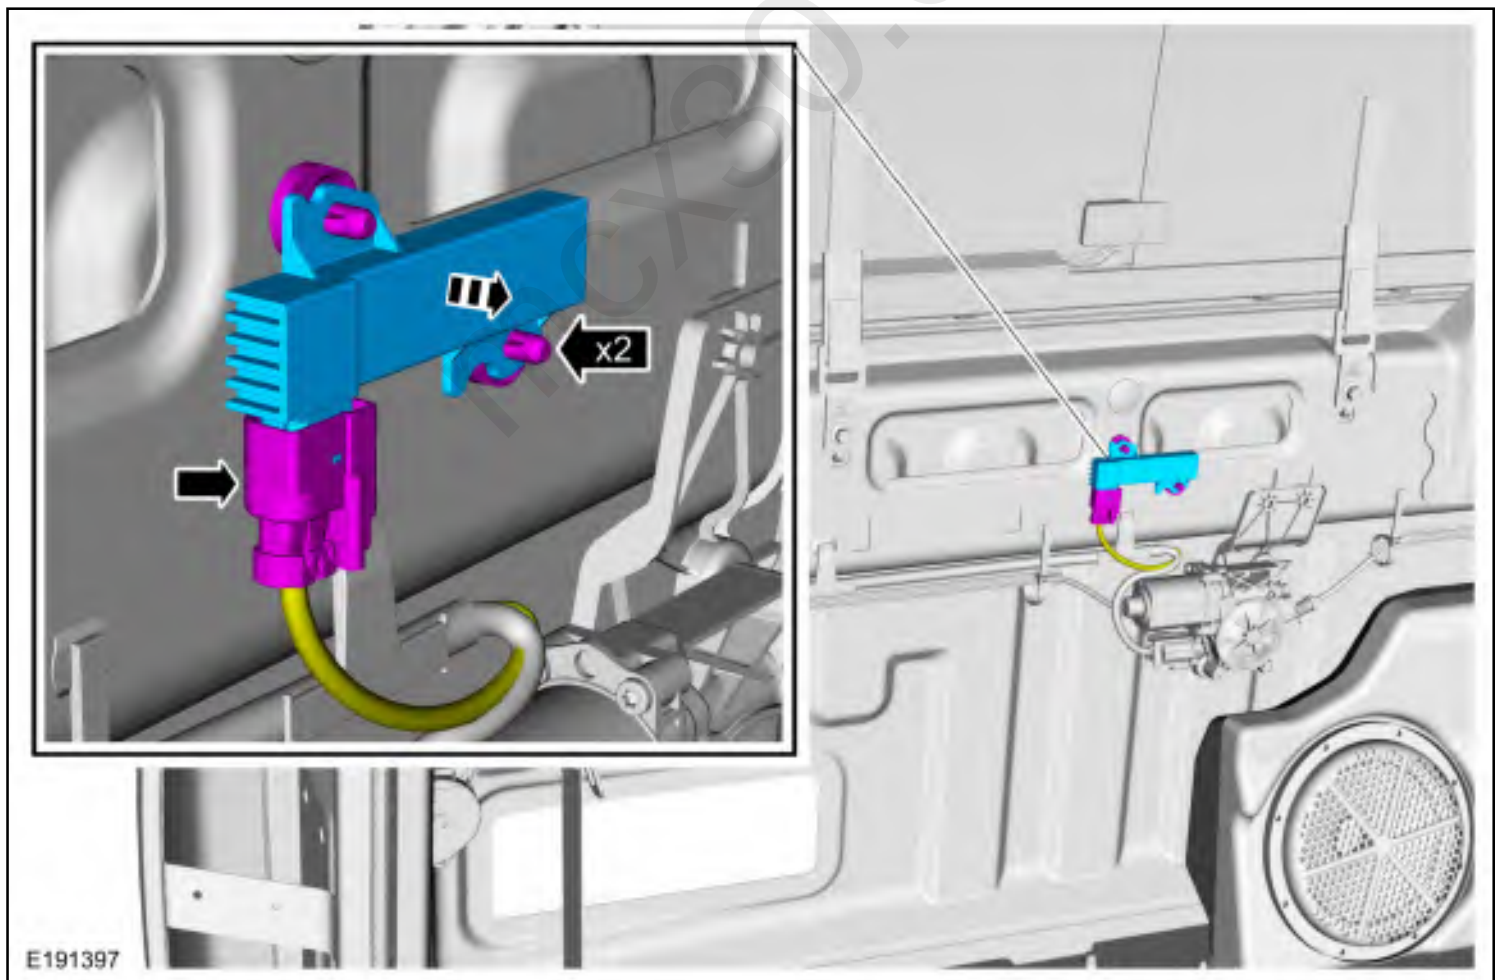

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company

mcx30.com