


Transmission Fluid Level Check


Materials

Name	Specification
Motorcraft® Thread Sealant with PTFE TA-24-B	WSK-M2G350-A2
Motorcraft® MERCON® V Automatic Transmission and Power Steering Fluid XT-5-QMC	WSS-M2C919-E MERCON® V

1. **NOTE:** Make sure that the vehicle is level.
- Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. Remove the fill plug.

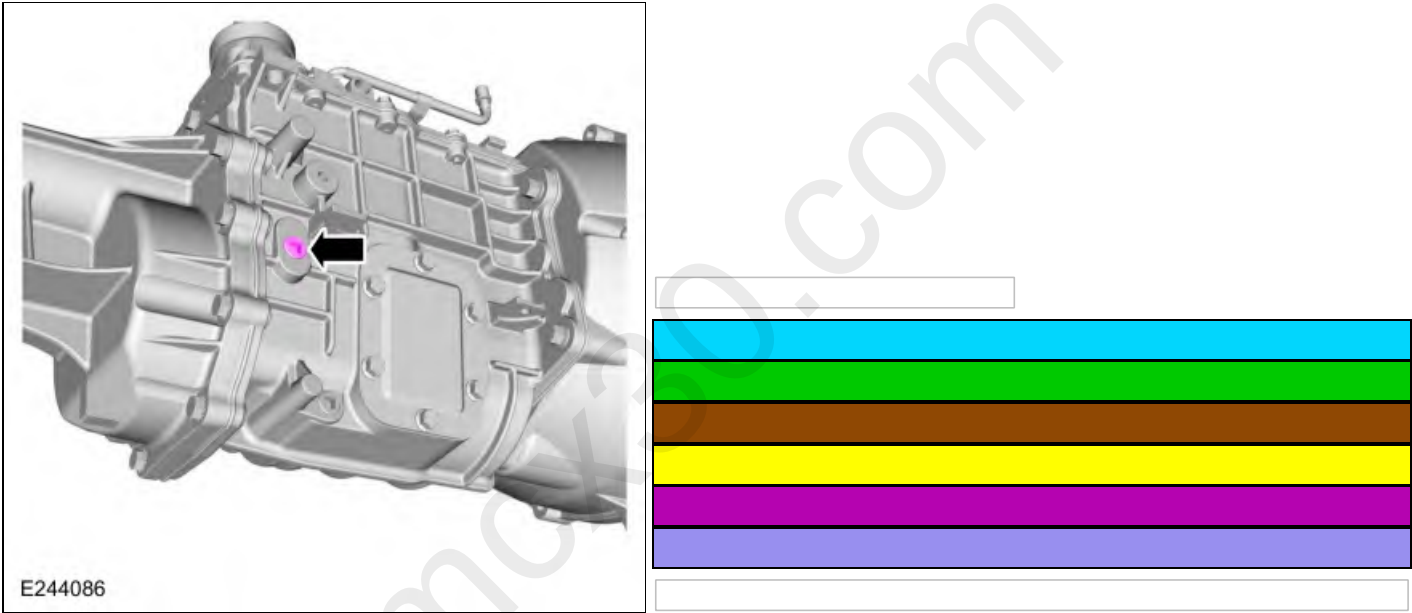

3. Fill the transmission to the bottom of the fill hole.
- Refer to: Specifications (308-03 Manual Transmission, Specifications).
- Material: Motorcraft® MERCON® V Automatic Transmission and Power Steering Fluid / XT-5-QMC (WSS-M2C919-E)
(MERCON® V)

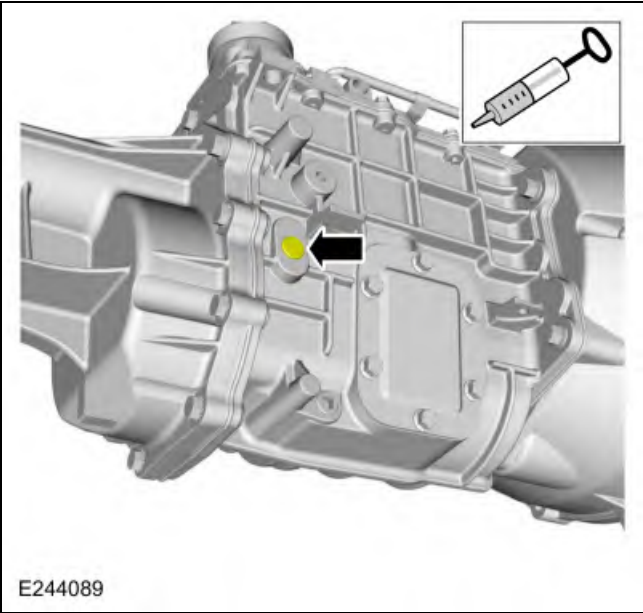

All vehicles

4. Apply thread sealer to the fill plug. Install the fill plug.
Material: Motorcraft® Thread Sealant with PTFE / TA-24-B (WSK-M2G350-A2)
Torque: 177 lb.in (20 Nm)

