


Passive Anti-Theft System (PATS) Transceiver

Removal

1. Remove the steering column shrouds.
Refer to: Steering Column Shrouds (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Remove the PATS transceiver.
 1. Disconnect the electrical connector.
 2. Detach the tabs.

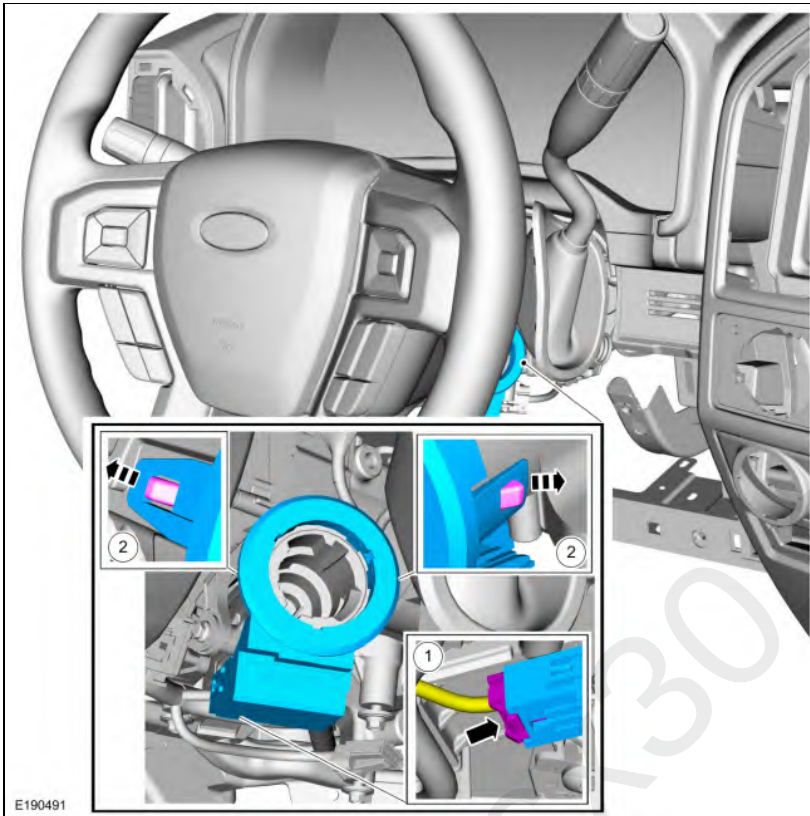

Installation

1. To install, reverse the removal procedure.