



Passive Anti-Theft System (PATS) Center Antenna - Vehicles Without: Center Console

Removal



1. Release the clips, disconnect the auxiliary power outlet electrical connector and remove the rear trim panel.

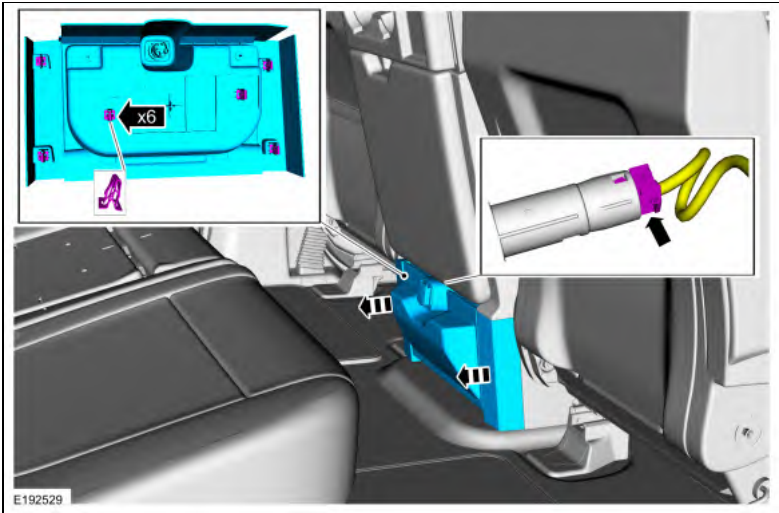

2. Release the tabs and remove the center seat lower rear trim panel.

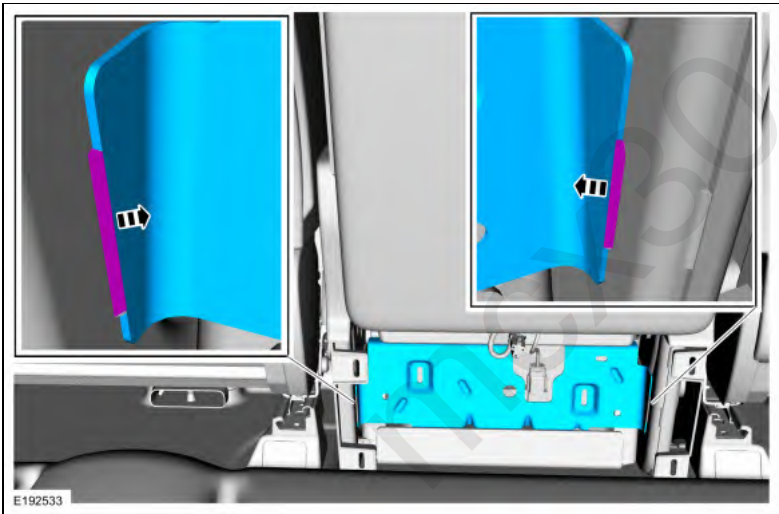

3. Remove the nuts, disconnect the electrical connector and remove the center PATS antenna.

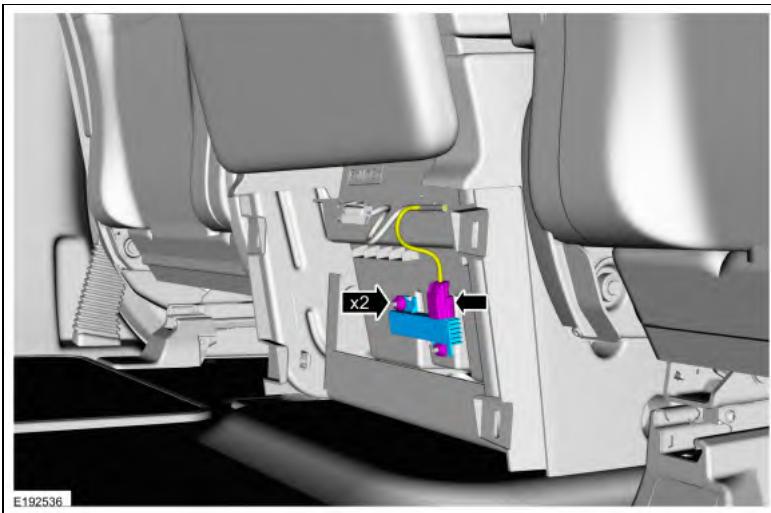

Installation

1. To install, reverse the removal procedure.

mcx30.com