


Headliner - Lowering - Regular Cab


1. On both sides.
Remove the A-pillar trim panels.
Refer to: A-Pillar Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. On both sides.
Remove the B-pillar trim panels.
Refer to: B-Pillar Trim Panel - Regular Cab (501-05 Interior Trim and Ornamentation, Removal and Installation).
3. **NOTE:** *LH side shown, RH side similar.*

On both sides.
Remove the sun visor.
 1. Remove the screw cover.
 2. Remove the screw.
 3. Remove the sun visor.
 4. If equipped.
Disconnect the electrical connector.

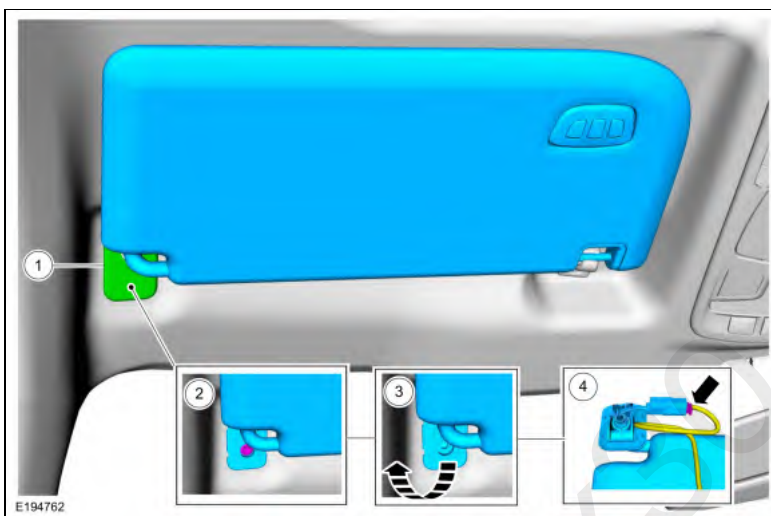


4. **NOTE:** *LH side shown, RH side similar.*


On both sides.
Remove the screws and the sun visor clips.

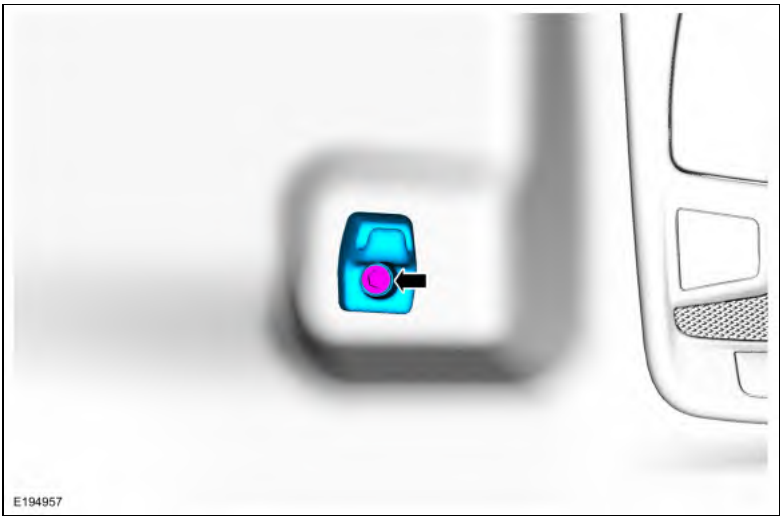


5. If equipped.
Release the clips and remove the rain sensor outer covers.

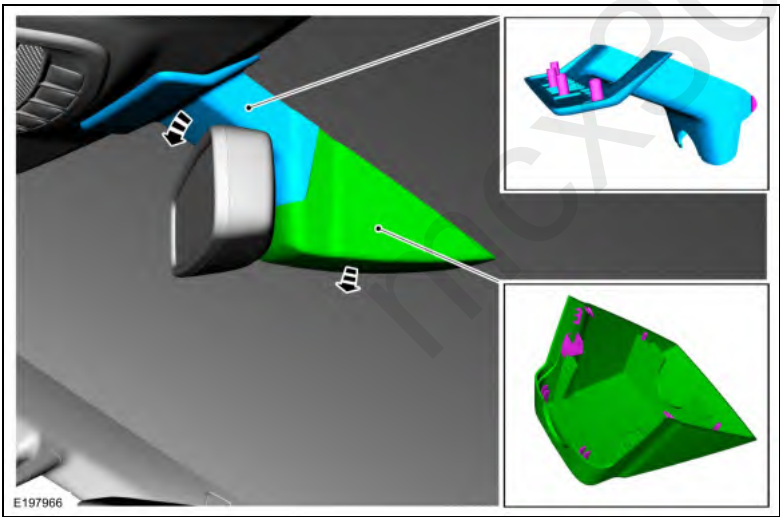


6. If equipped.
Disconnect the rear view mirror electrical connector.

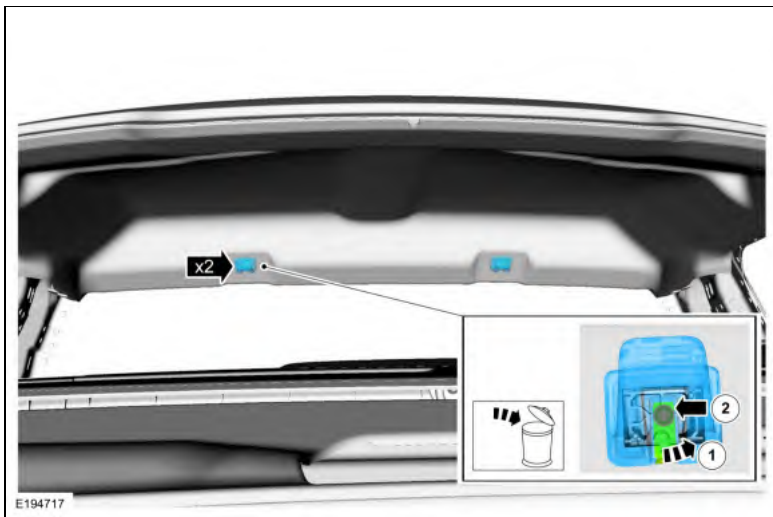

9. Disconnect the headliner wiring harness connectors, release the wiring harness retainer and position the wiring harness aside.

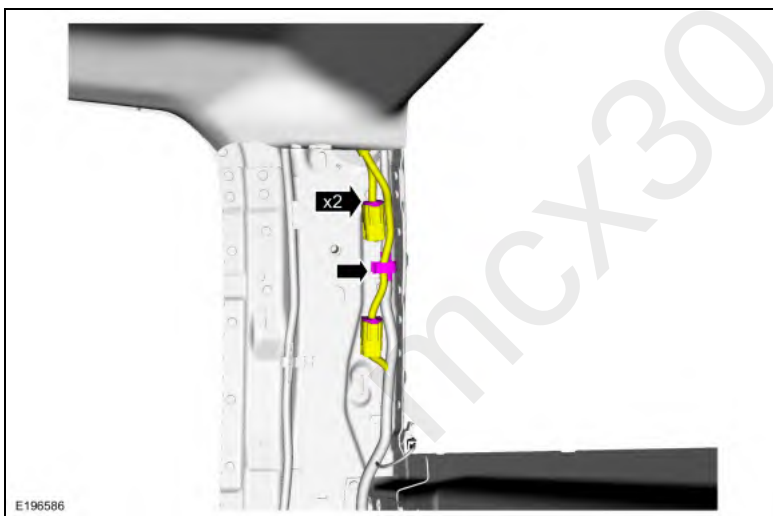

10. Release the clips and lower the headliner.

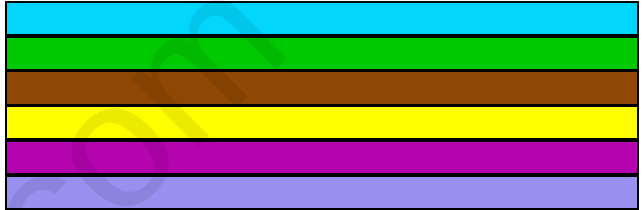

mcx30.com