


Front Fender Moulding - F-250/F-350


Removal

NOTE: Removal steps in this procedure may contain installation details.


- 1. If equipped with mud flaps.
Remove the bolts and clips.

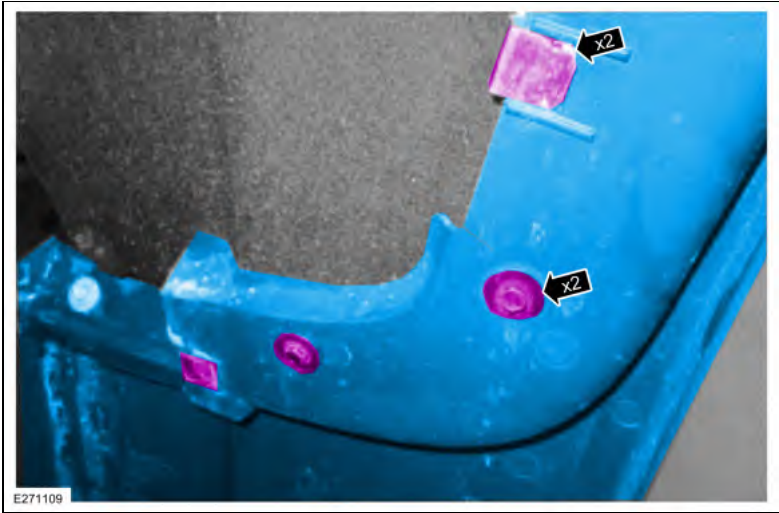


- 2. Remove the bolts.

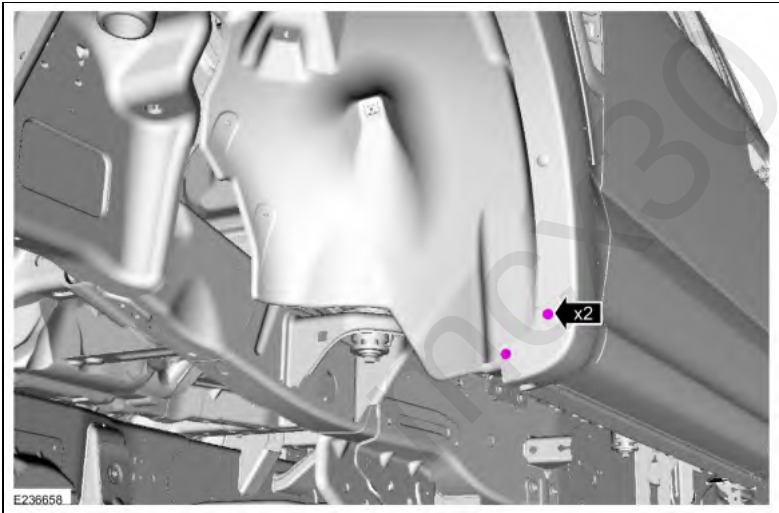

- 3. Remove the push pins and the retainer.

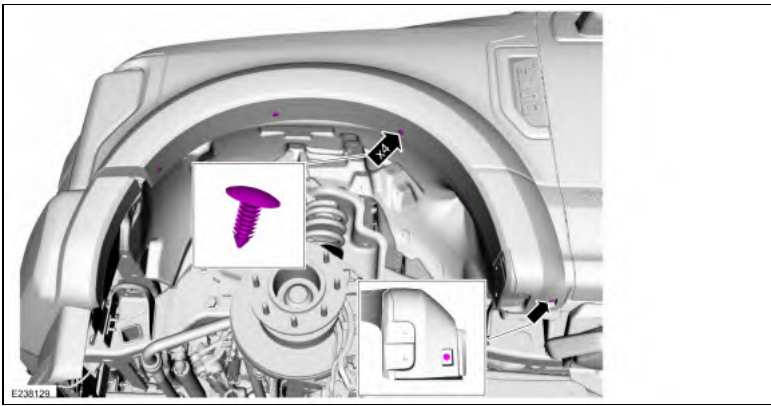

4. Using a non-marring trim tool, disengage the push pin type retainers, trim clips and remove the front fender moulding.

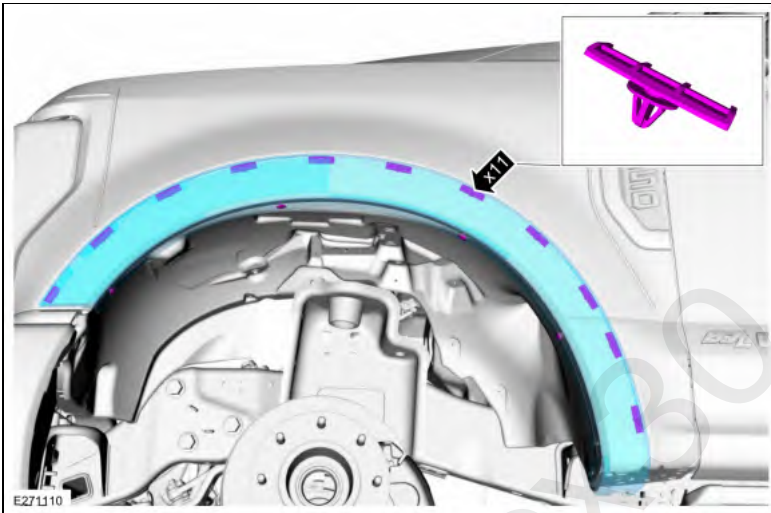

Installation

- 1. To install, reverse the removal procedure.