


Removal and Installation

Removal


1. Refer to: [Front Subframe](#) (502-00 Uni-Body, Subframe and Mounting System, Removal and Installation).

2.

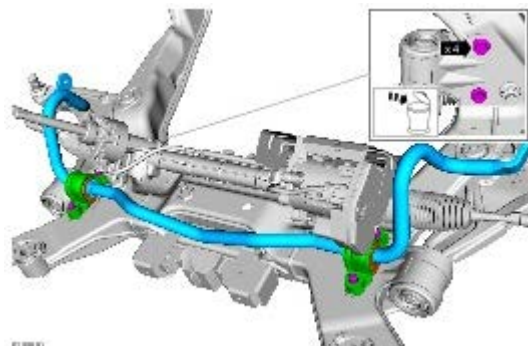


Installation

1.  **NOTICE:** Do not use any lubrication on the stabilizer bar or the bushings or damage to the bushings may occur.
NOTE: Stabilizer bar bushings must be installed with slits facing the rear of the vehicle.

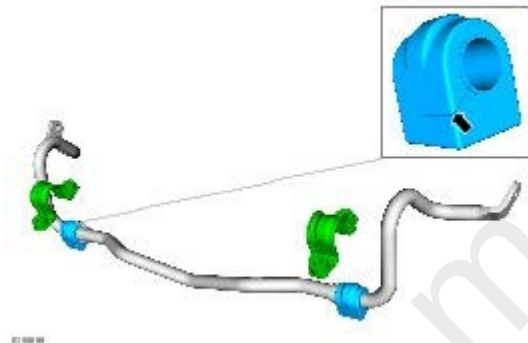

2. Torque: 165 Nm

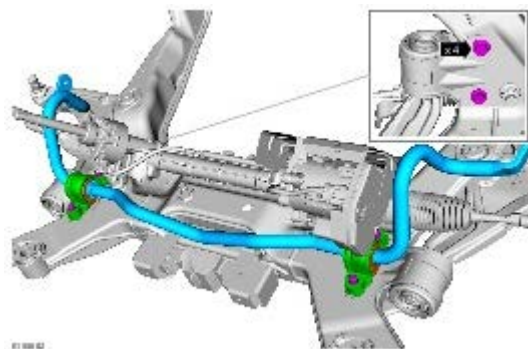

3. Refer to: [Front Subframe](#) (502-00 Uni-Body, Subframe and Mounting System, Removal and Installation).