

Removal and Installation

General Equipment

Trolley Jack
Wooden Block


Materials

Name	Specification
Thread Locking Adhesive	WSK-M2G351-A6

Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Refer to: [Brake Master Cylinder - RHD FWD](#) (206-06 Hydraulic Brake Actuation, Removal and Installation).
2. Refer to: [Powertrain Control Module \(PCM\)](#) (303-14B Electronic Engine Controls, Removal and Installation).
3.  NOTICE: Make sure that the brake pedal remains in the rest position.
Refer to: [Stoplamp Switch](#) (417-01 Exterior Lighting, Removal and Installation).
4. NOTE: The brake pedal actuating rod pin will be damaged during removal.

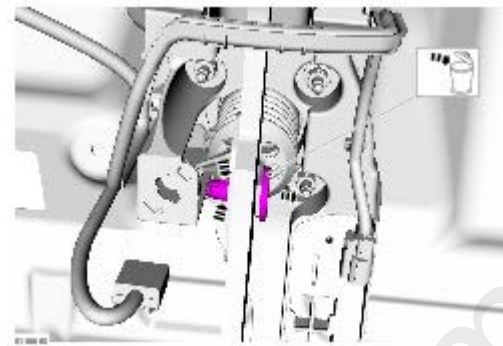


5. Torque: 23 Nm



6. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
- 7.

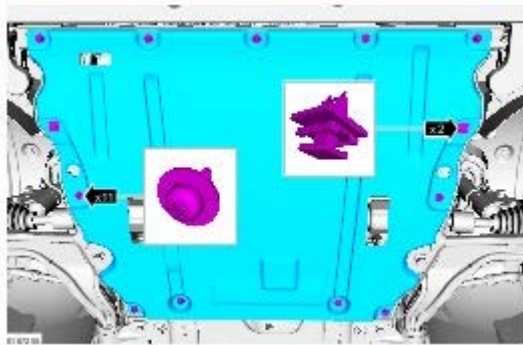

8. Material: [WSK-M2G351-A6](#) (Thread Locking Adhesive)
Torque: 115 Nm

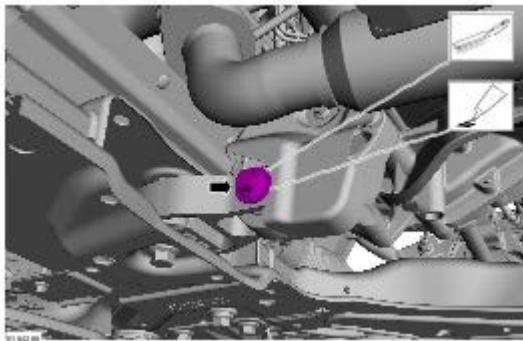

9. Torque: 48 Nm




10. Torque: 24 Nm




11. Lower the vehicle.


- 12.

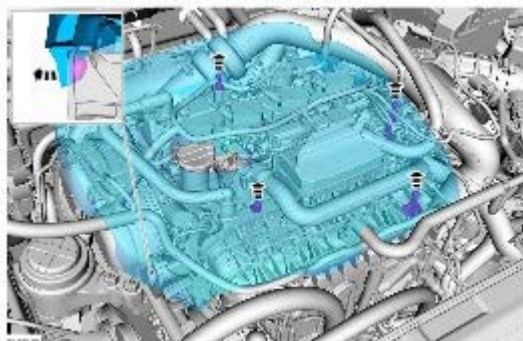


13.

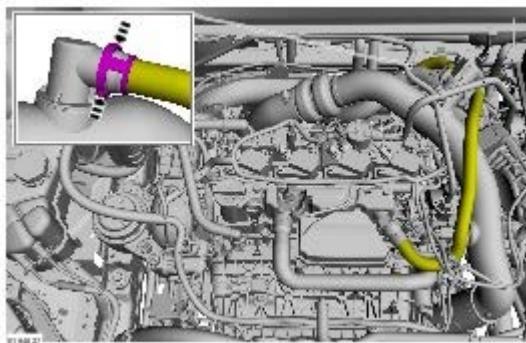


14.

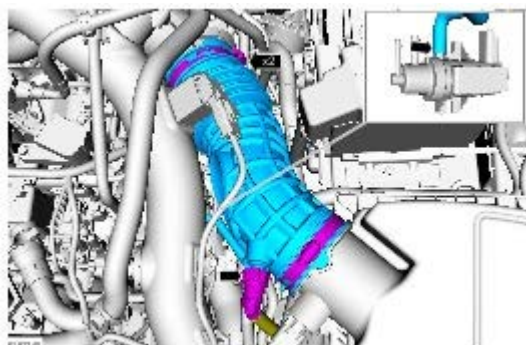


15.

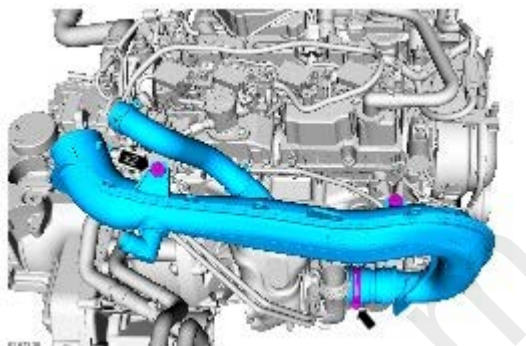

16. Use the General Equipments: [Trolley Jack](#), [Wooden Block](#)

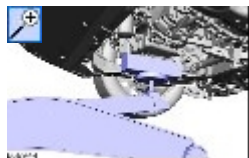


17. NOTE: Note the position of the component before removal.

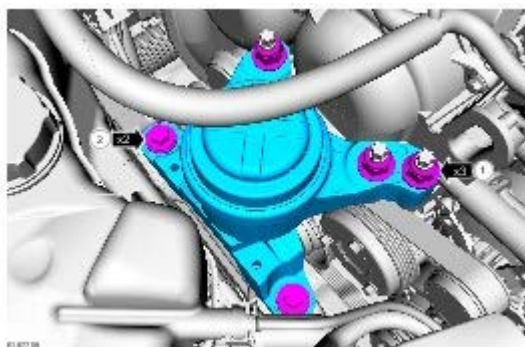


18. NOTE: Only use moderate force.
NOTE: Make sure that no components catch.




19.

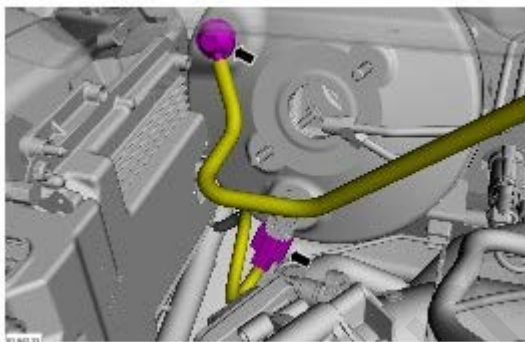

20.

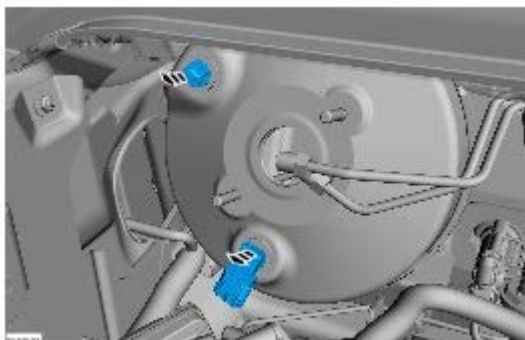


21.  NOTICE: Make sure that the brake booster push rod is correctly located.

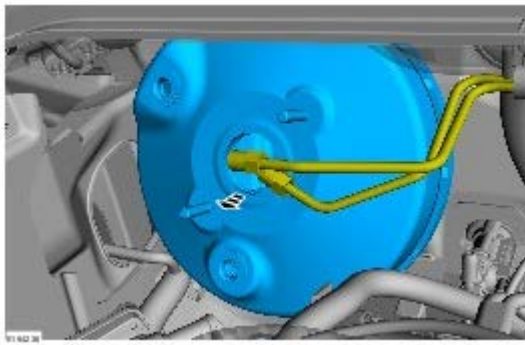

Installation

1. To install, reverse the removal procedure.


2. Torque: 10 Nm

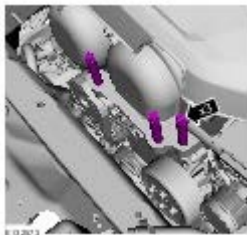

3. NOTE: Make sure that the component is installed to the position noted before removal.


1. Torque: 90 Nm

2. NOTE: Only tighten the bolts finger tight at this stage.

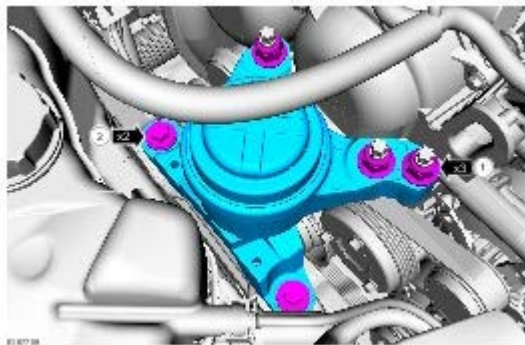

4. Remove the General Equipments: [Trolley Jack](#), [Wooden Block](#)

5. Torque: 90 Nm

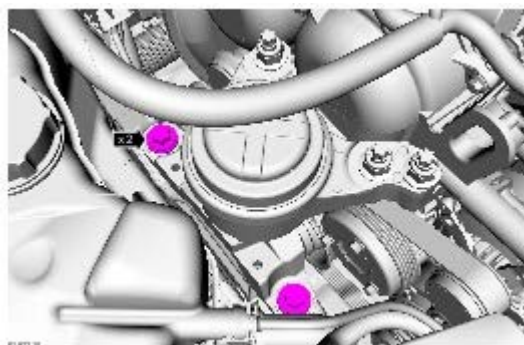

mcx30.com