

Removal and Installation

General Equipment

Vise
Vise Jaw Protectors

Materials


Name	Specification
Grease - Silicone	ESE-M1C171-A

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Steering Gear](#) (211-02 Power Steering, Removal and Installation).
2. NOTE: Make sure that the tie rod end is installed with the same number of turns as when removed.

Torque: 70 Nm

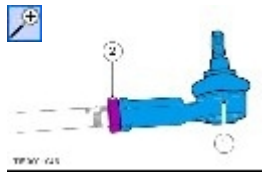


3.  NOTICE: Note the position of the components before removal.

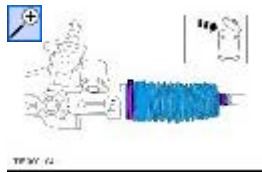


- 4.



5.
 1. Use the General Equipment: [Vise](#)
 2. Use the General Equipment: [Vise Jaw Protectors](#)

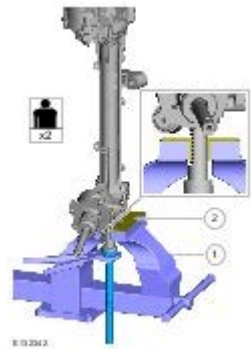

6.
 1. Use the General Equipment: [Vise](#)
 2. Use the General Equipment: [Vise Jaw Protectors](#)

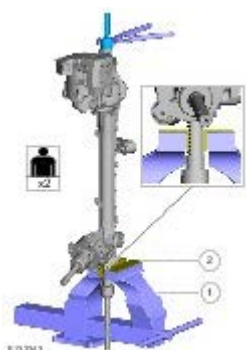


Installation

1. To install, reverse the removal procedure.
2. Torque: 90 Nm



3. Material: [ESE-M1C171-A \(Grease - Silicone\)](#)

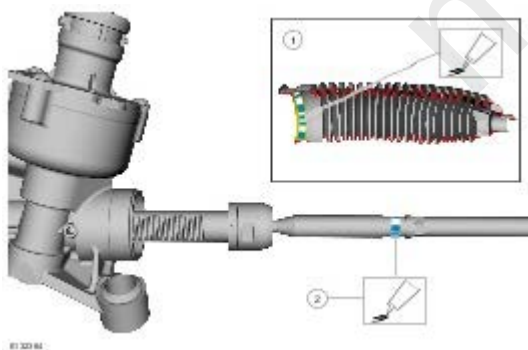

4. **NOTE:** Make sure that the component is installed to the position noted before removal.
Torque: 2 Nm



5. Refer to: Front Toe Adjustment (204-00 Suspension System - General Information, General Procedures).

mcx30.com