

Removal and Installation


General Equipment

Trolley Jack

Wooden Block


Removal

1.

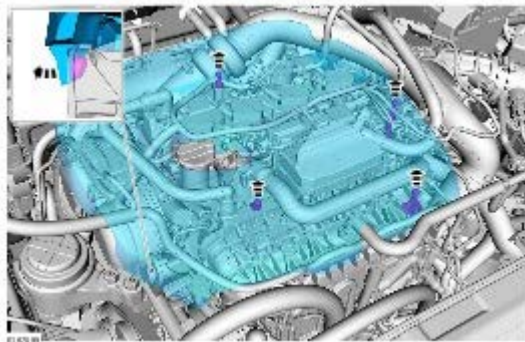

2. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).


3.

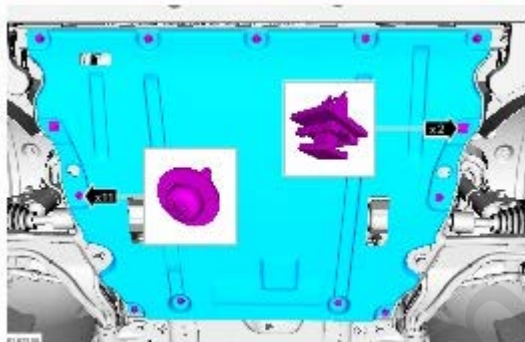


4. Lower the vehicle.

5. Install the following items:

- Use the General Equipments: [Trolley Jack](#), [Wooden Block](#)

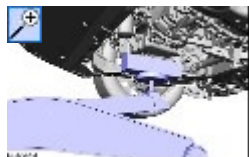


6.

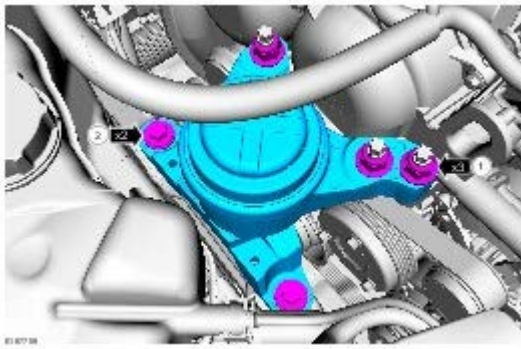


Installation


1. Torque: 10 Nm

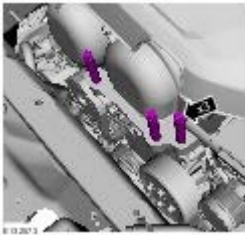


2.
 1. Torque: 90 Nm
 2. NOTE: Only tighten the bolts finger tight at this stage.

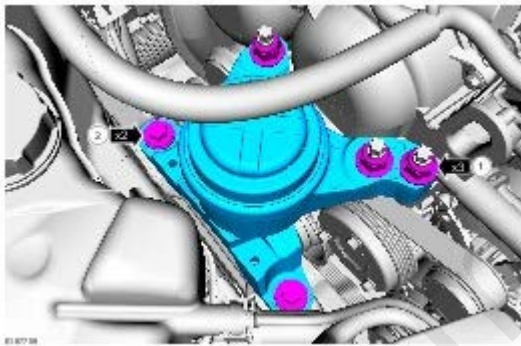

3. Remove the following items:
 - Use the General Equipments: [Trolley Jack](#), [Wooden Block](#)

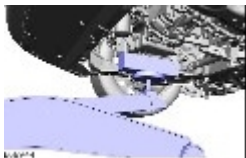


4. Torque: 90 Nm

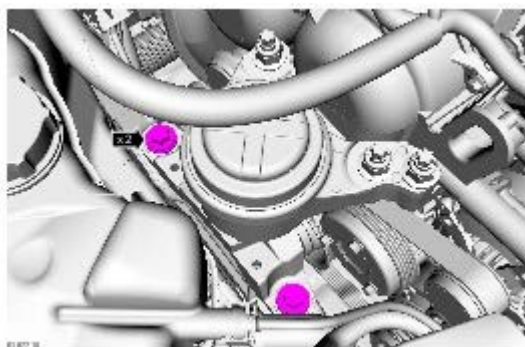

5. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).

6.

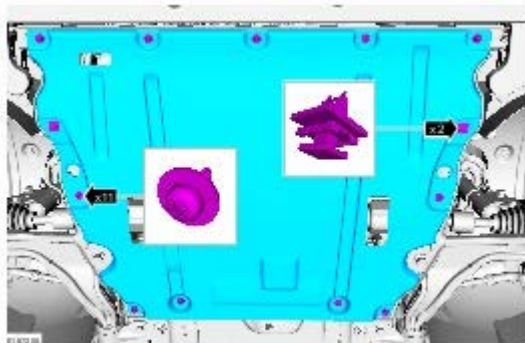

7. Lower the vehicle.

8.

