


14.

Remove the bolt and separate the CAC from the radiator.

Torque

: 53 lb.in (6 Nm)

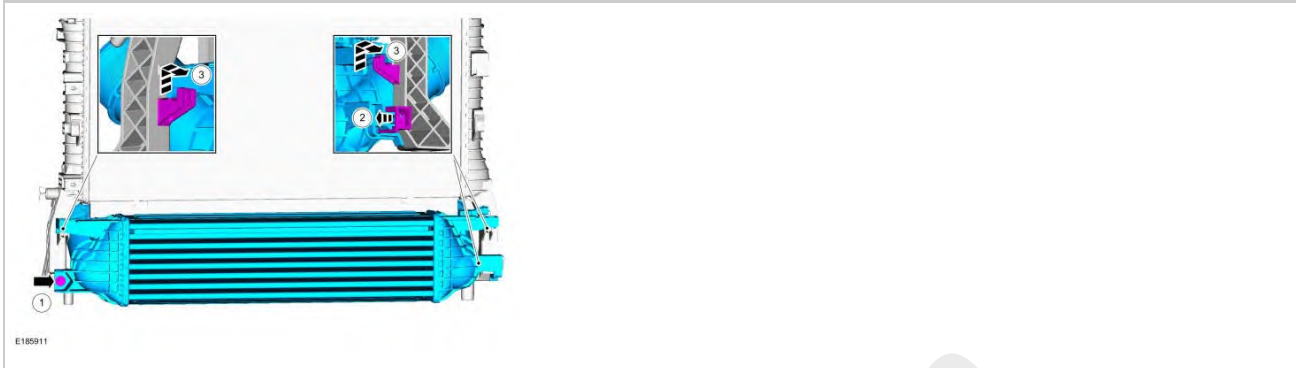

REMOVAL AND INSTALLATION > RADIATOR > INSTALLATION

1.

To install, reverse the removal procedure.

2.

Fill and bleed the cooling system. Refer to: Cooling System Draining and Vacuum Filling .

REMOVAL AND INSTALLATION > THERMOSTAT HOUSING

Special Tool(s) / General Equipment

Hose Clamp Remover/Installer

REMOVAL AND INSTALLATION > THERMOSTAT HOUSING > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.

1.

Drain the cooling system. Refer to: Cooling System Draining and Vacuum Filling .

2.

Remove the nuts and the engine appearance cover.