



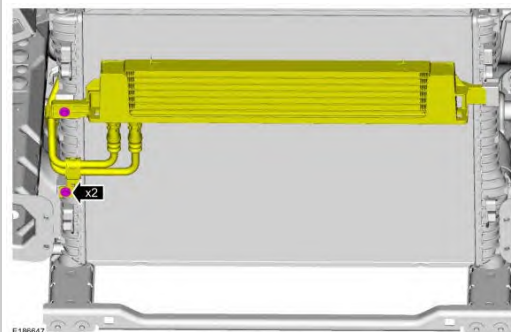

 **NOTE:** Front bumper removed for clarity.

10.
Remove the radiator.

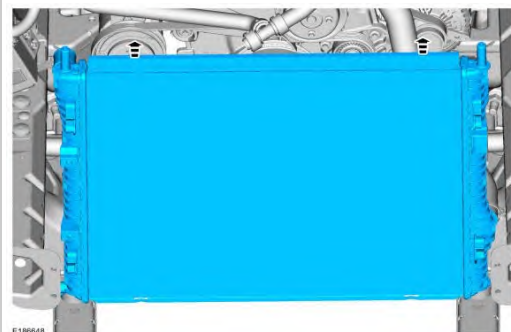

REMOVAL AND INSTALLATION > RADIATOR > INSTALLATION

1.
To install, reverse the removal procedure.
2.
Fill and bleed the cooling system. Refer to: Cooling System Draining and Vacuum Filling .

REMOVAL AND INSTALLATION > THERMOSTAT

Materials

Name	Specification
Motorcraft® Orange Antifreeze/Coolant Concentrated (U.S.) VC-3-B (U.S.)	WSS-M97B44-D