

REMOVAL AND INSTALLATION > MANIFOLD ABSOLUTE PRESSURE AND TEMPERATURE (MAPT) SENSOR > INSTALLATION



NOTE: Second fastener hole available for use during re-install if needed.

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > POWERTRAIN CONTROL MODULE (PCM) > REMOVAL



NOTE: This step is only necessary when installing a new component.




NOTE: PCM installation DOES NOT require new keys or programming of keys, only a Parameter Reset of the PATS.

1.

Download the module information to the diagnostic tool using the PMI routine. Refer to: MODULE CONFIGURATION .

2.

Unclip and position aside the BJB.

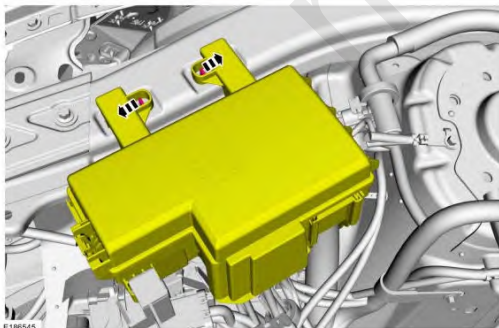

3.

1.

Disconnect the PCM electrical connectors.

2.