


INSTALLATION



NOTE: CV cage is shown in illustration assembled.

1.


Clean and inspect the CV joint cage.

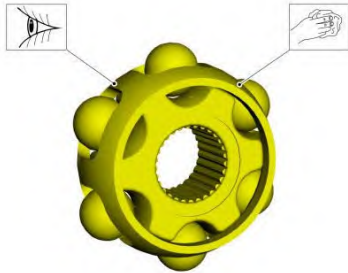

E185899

2.

Using boot clamp pliers, install the new CV joint boot and the new small CV joint boot clamp. Use the General Equipment: Boot Clamp Pliers

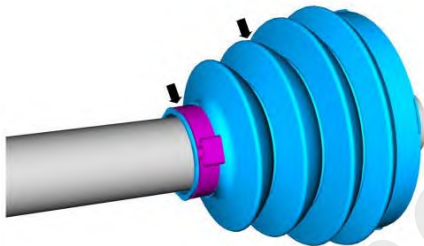


E185594



NOTE: The CV joint cage is a snug fit and may need to be tapped on with a soft face mallet.


3.

Using a soft face mallet, install the CV joint cage. Use the General Equipment: Rubber Mallet

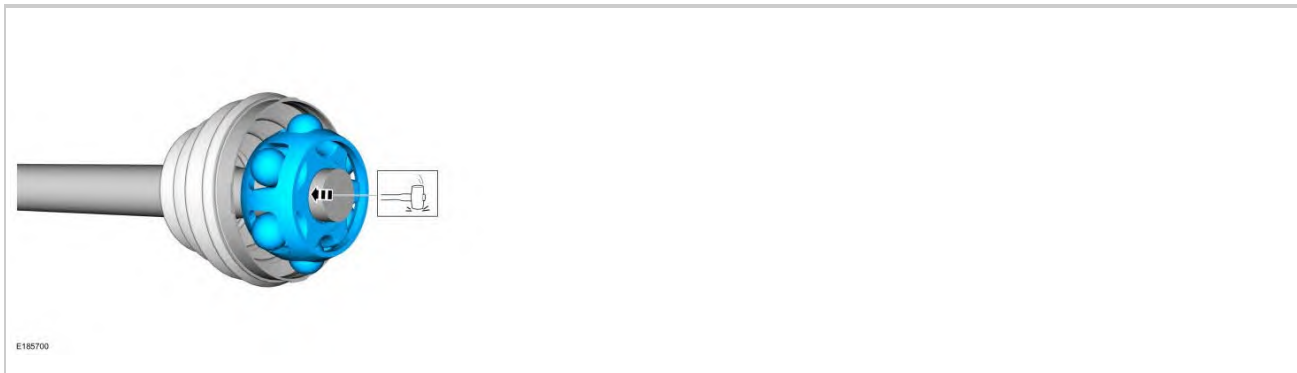

4.

Install the new CV joint cage circlip.

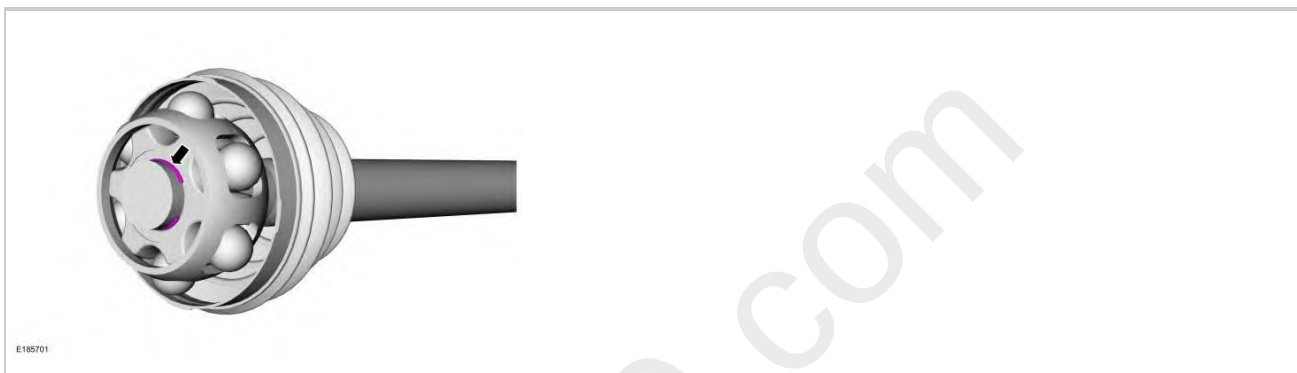


5.

Install the grease sachet evenly in the CV joint boot and housing.

Material

: Constant Velocity Joint Grease (High Temperature) / XG-5 (WSS-M1C258-A1)

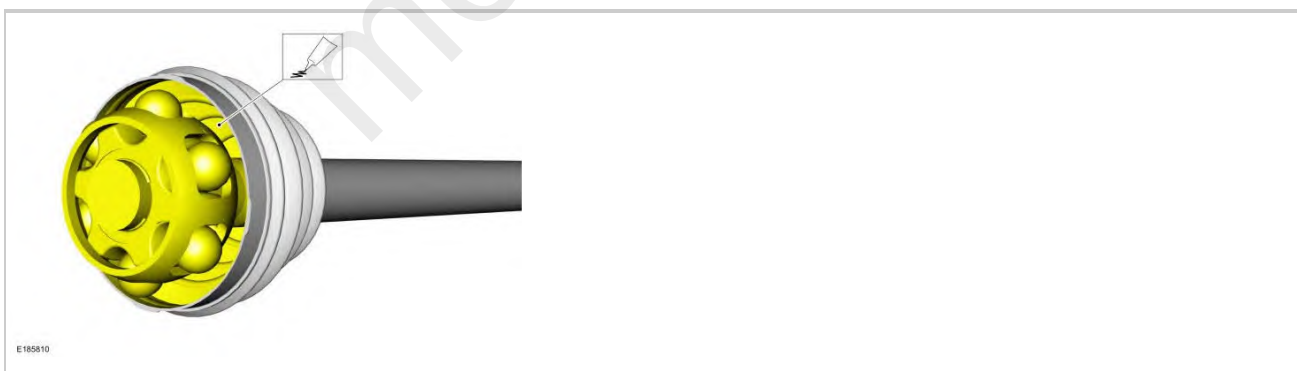

 **NOTE:** When installing the CV joint housing, insert a small flat blade screwdriver under the CV joint boot seat to allow air to escape.

6.

Install the inner CV housing.

1.