

General Procedures

General Equipment

Long Nose Pliers

Flushing

1. **NOTE:** Vehicles build December 15, 2015 onwards don't require flushing after a PAS system repair based on a new permanent filter that is part of the reservoir.
 1. Standard reservoir used for vehicles build up to December 14, 2015 inclusive.
 2. Reservoir with permanent filter used for vehicles build December 15, 2015 onwards.

①



E250690

②



160mm

2.




E141117

3.




E170494

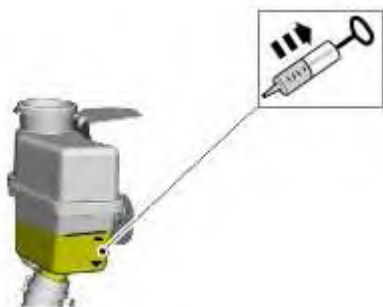

4. **NOTE:** Make sure that a new component is installed.

Use the General Equipment: [Long Nose Pliers](#)

E170538

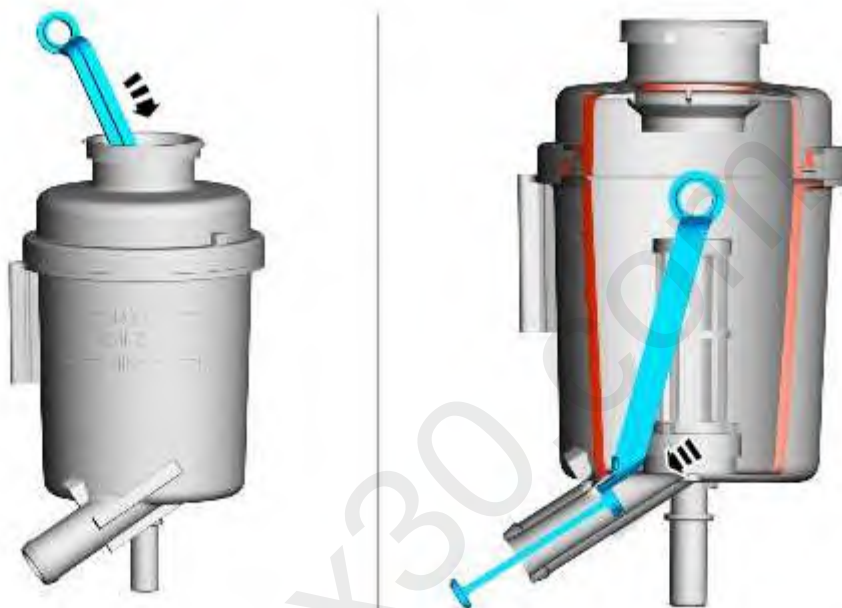

5. Refer to: [Specifications](#) (211-00 Steering System - General Information, Specifications).




E141099




6. Slowly turn the steering wheel from lock to lock for 30 seconds and add power steering fluid until the fluid level remains constant at the MAX mark.


①

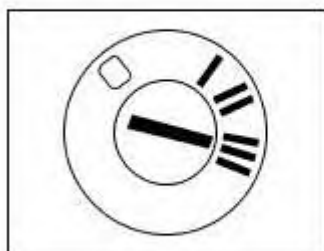

②

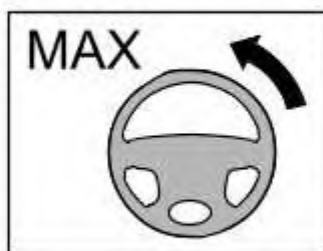

③

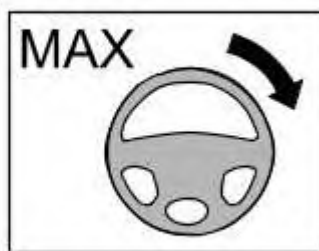

E131522

7.



①



②

E170073

Filling

1. Refer to: [Specifications](#) (211-00 Steering System - General Information, Specifications).



E141099

2.



E141117

mcx30.com