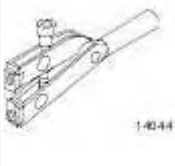


Removal and Installation

Special Tool(s) / General Equipment

	204-169 Clamping Tool, Boot Retaining Clamp
Vise	
Vise Jaw Protectors	

Materials


Name	Specification
Grease - Silicone	ESE-M1C171-A

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Steering System Health and Safety Precautions](#) (100-00 General Information, Description and Operation).
2. Refer to: [Steering Gear](#) (211-02 Power Steering, Removal and Installation).
3. **NOTE:** Make sure that the tie rod end is installed with the same number of turns as when removed.


Torque: 90 Nm

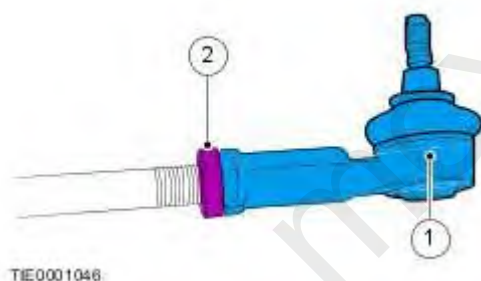

4.  **NOTICE:** Note the position of the components before removal.

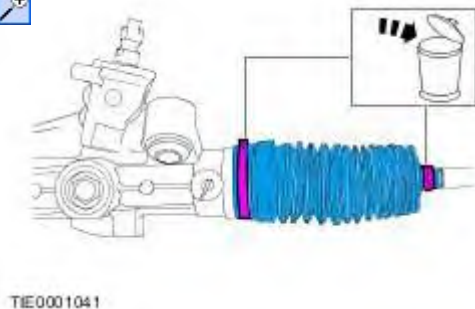


- 5.

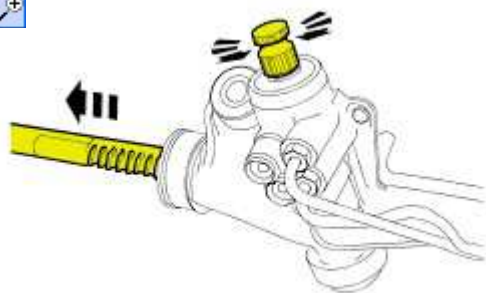

TIE0001042

6.


1. Use the General Equipment: [Vise](#)
2. Use the General Equipment: [Vise Jaw Protectors](#)

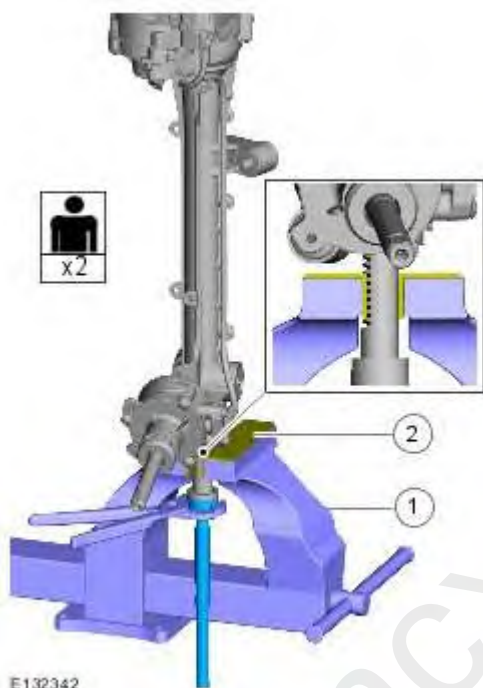

E132342


7.

1. Use the General Equipment: [Vise](#)
2. Use the General Equipment: [Vise Jaw Protectors](#)

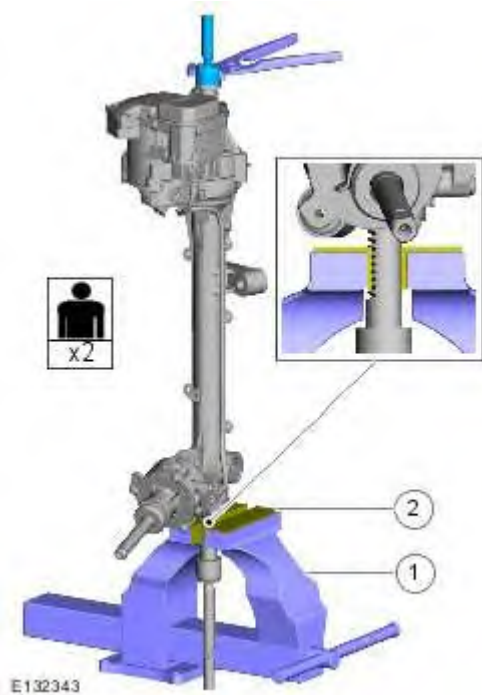


Installation


1. To install, reverse the removal procedure.
2. *Torque:* 90 Nm

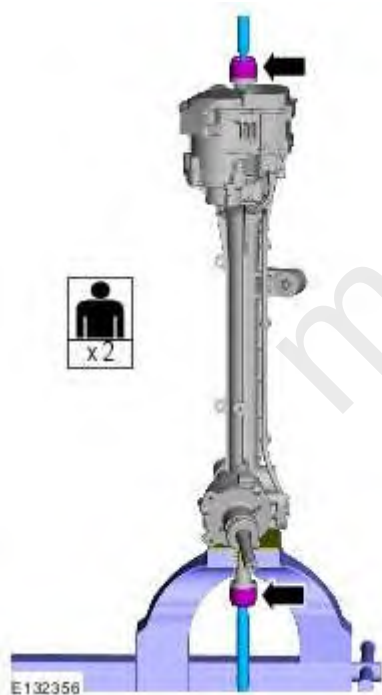

3. *Material:* [ESE-M1C171-A](#) (Grease - Silicone)

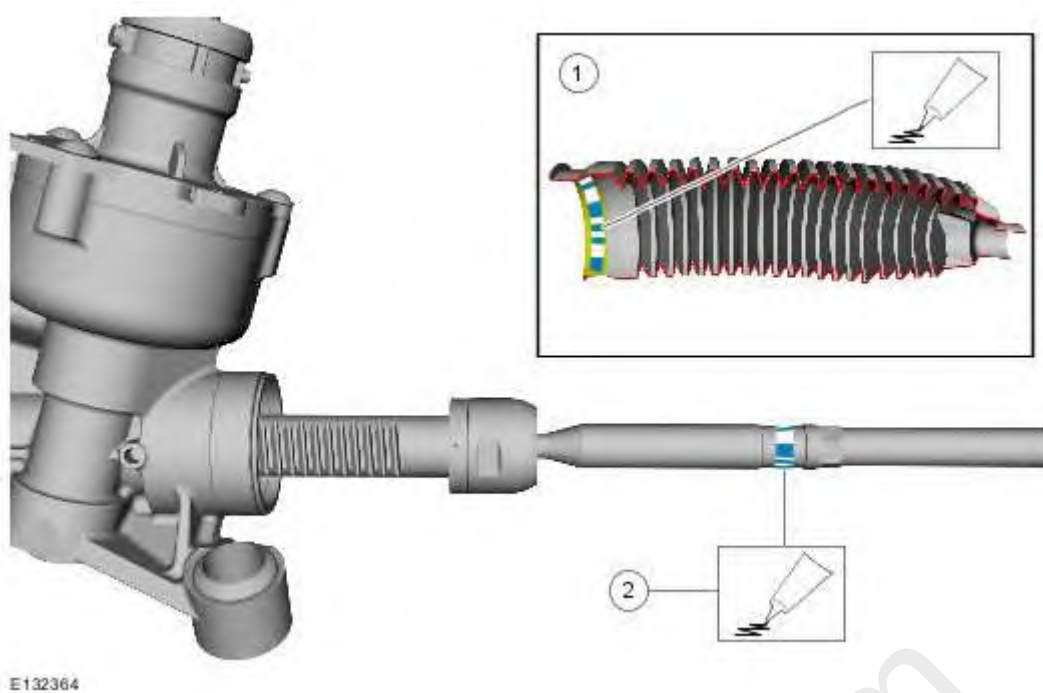

4. Install Special Service Tool: [204-169](#).

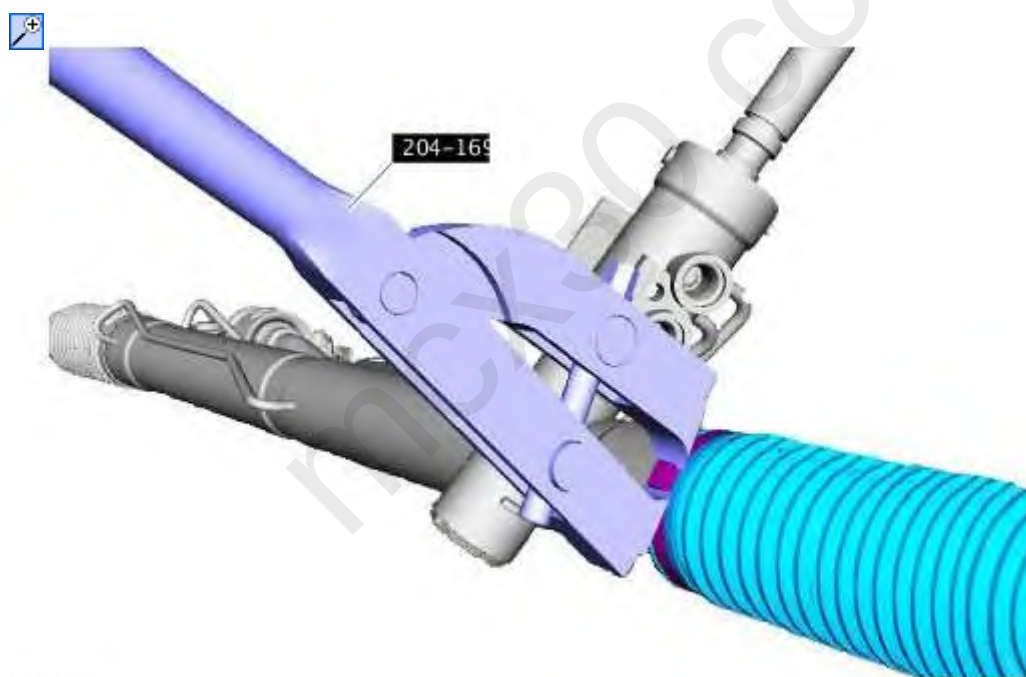

5.