

General Procedures

General Equipment


Ford Diagnostic Equipment

Materials

Name	Specification
Automatic Transmission Fluid	MERCON® LV WSS-M2C938-A


Check

1. Start and run the engine at idle.
2. Fully apply the brake pedal and parking brake.
- 3.

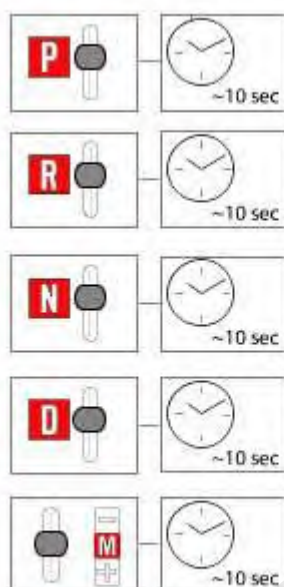

E232956

4. Use the General Equipment: [Ford Diagnostic Equipment](#)

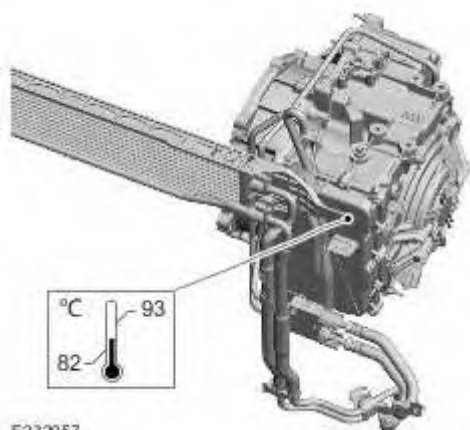

E232957

5.



E162476


6.



E232954

7.

1. Material: [MERCON® LV](#) ; [WSS-M2C938-A](#) (Automatic Transmission Fluid)

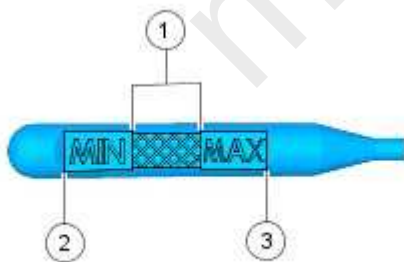

E150605

8.



9.

