

VEHICLE GENERAL INFORMATION


Programming – Reprogramming the computers

01B

TRACE FILE (upon the request of Techline)

Creating the trace file

- After starting up the **CLIP** software, click on the **Tools** tab, then on **Tool configuration**.

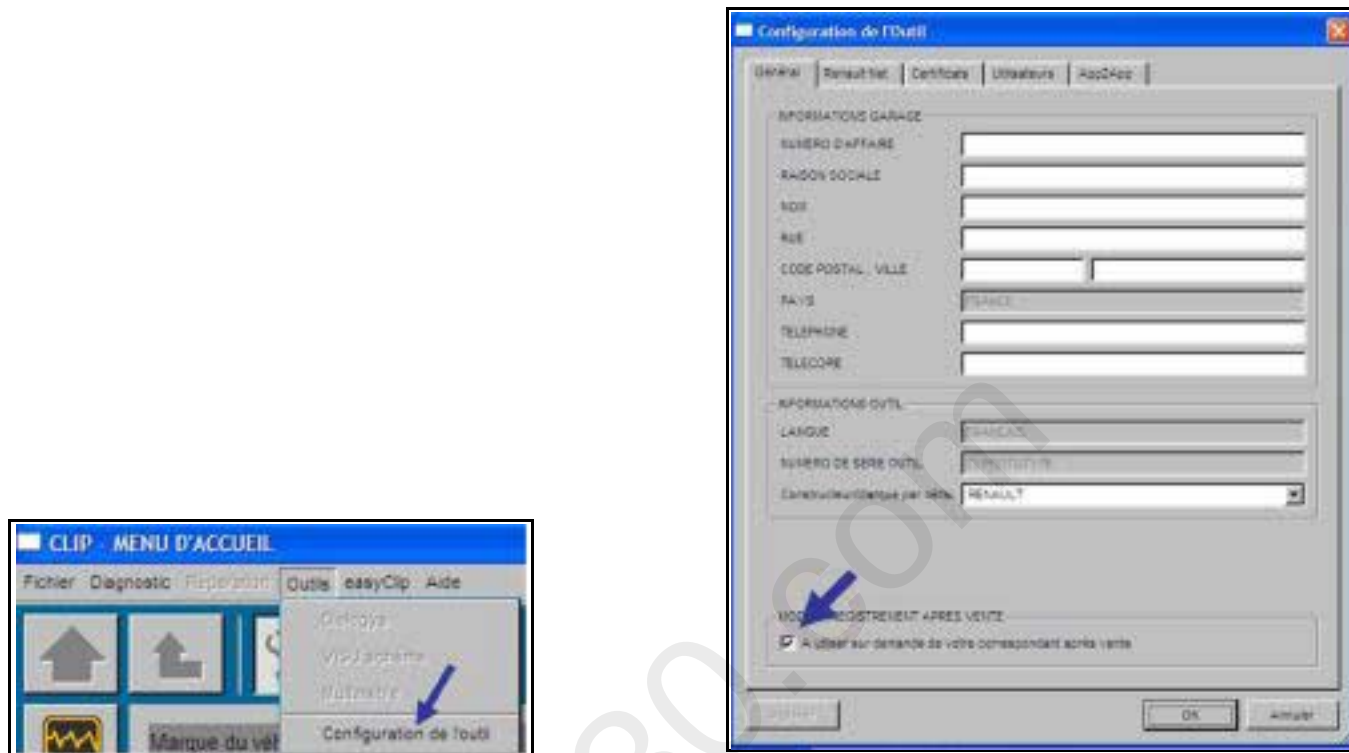

- In the **Tool configuration** window.
 - Tick the **AFTER-SALES SAVE MODE** box, then confirm with **OK**.
- Carry out the Calibration - reprogramming until the error message is displayed.

Recovering the trace file after programming - reprogramming

- Close the CLIP application (Return to the CLIP home page then EXIT).
- In the Windows **Start** menu (bottom left-hand corner of the Windows screen), select **My Computer**. Then select (double left click) the following: **Local disc (C:) / CLIP / DATA/ USER / LOGS**.

Send this file to your Techline by e-mail.

Note:

For all RENAULT CLIP diagnostic tools under **Windows XP**, compress the file "clip.log":

- Select the **clip.log** trace file.
- Right click the on the **clip.log** file, and select **Properties**.
- Then **send_to Compressed (zipped) folder**.