


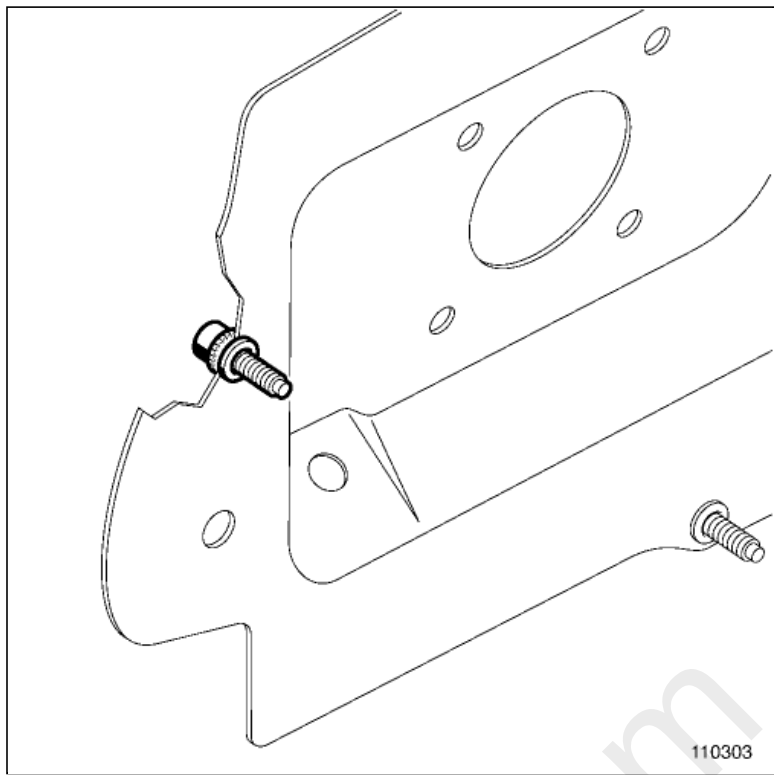

110303

Check that the mounting is perpendicular before the end of the crimping operation.



Repair-40x01x34x14-02x21-2-1-1.xml



XSL version : 3.02 du 22/07/11

BOLTED CONNECTION WITH FLOWDRILLED NUT

Special tooling required

Tool for fitting crimped nuts.

Car. 1504

Fluo tapped threading is repaired by fitting of captive nut([see 40H, Bolted connections, Screw connection with crimped mounting: Description](#)) and using the Tool for fitting crimped nuts.([Car. 1504](#)) .

1. PREPARATION

