

Refit the front brake pads([see 31A, Front axle components, Front brake calliper assembly: Exploded view](#)) .

Fit the front brake calliper.

Proceed in the reverse order to removal.

Set the wheels straight ahead.

Clip the front brake hose cap onto the base of the shock absorber by aligning the marks made at (1) .



WARNING

To avoid any accident, bring the pistons, brake pads and brake discs into contact by depressing the brake pad several times.



[Repair-13x03x03x01-01x37-1-37-1.xml](#)



FRONT BUMPER MOUNTING: REMOVAL - REFITTING

REMOVAL

1. REMOVAL PREPARATION OPERATION



Position the vehicle on a two-post lift [Vehicle: Towing and lifting](#) .



Remove:



the front wheel arch liners [Exterior body front trim assembly: Exploded view](#) ,



the front bumper [Front bumper assembly: Exploded view](#) ,




the front headlights [Front signals - lighting assembly: Exploded view](#) .




Remove the front wing [Exterior body front trim assembly: Exploded view](#) .

2. REMOVAL OPERATION

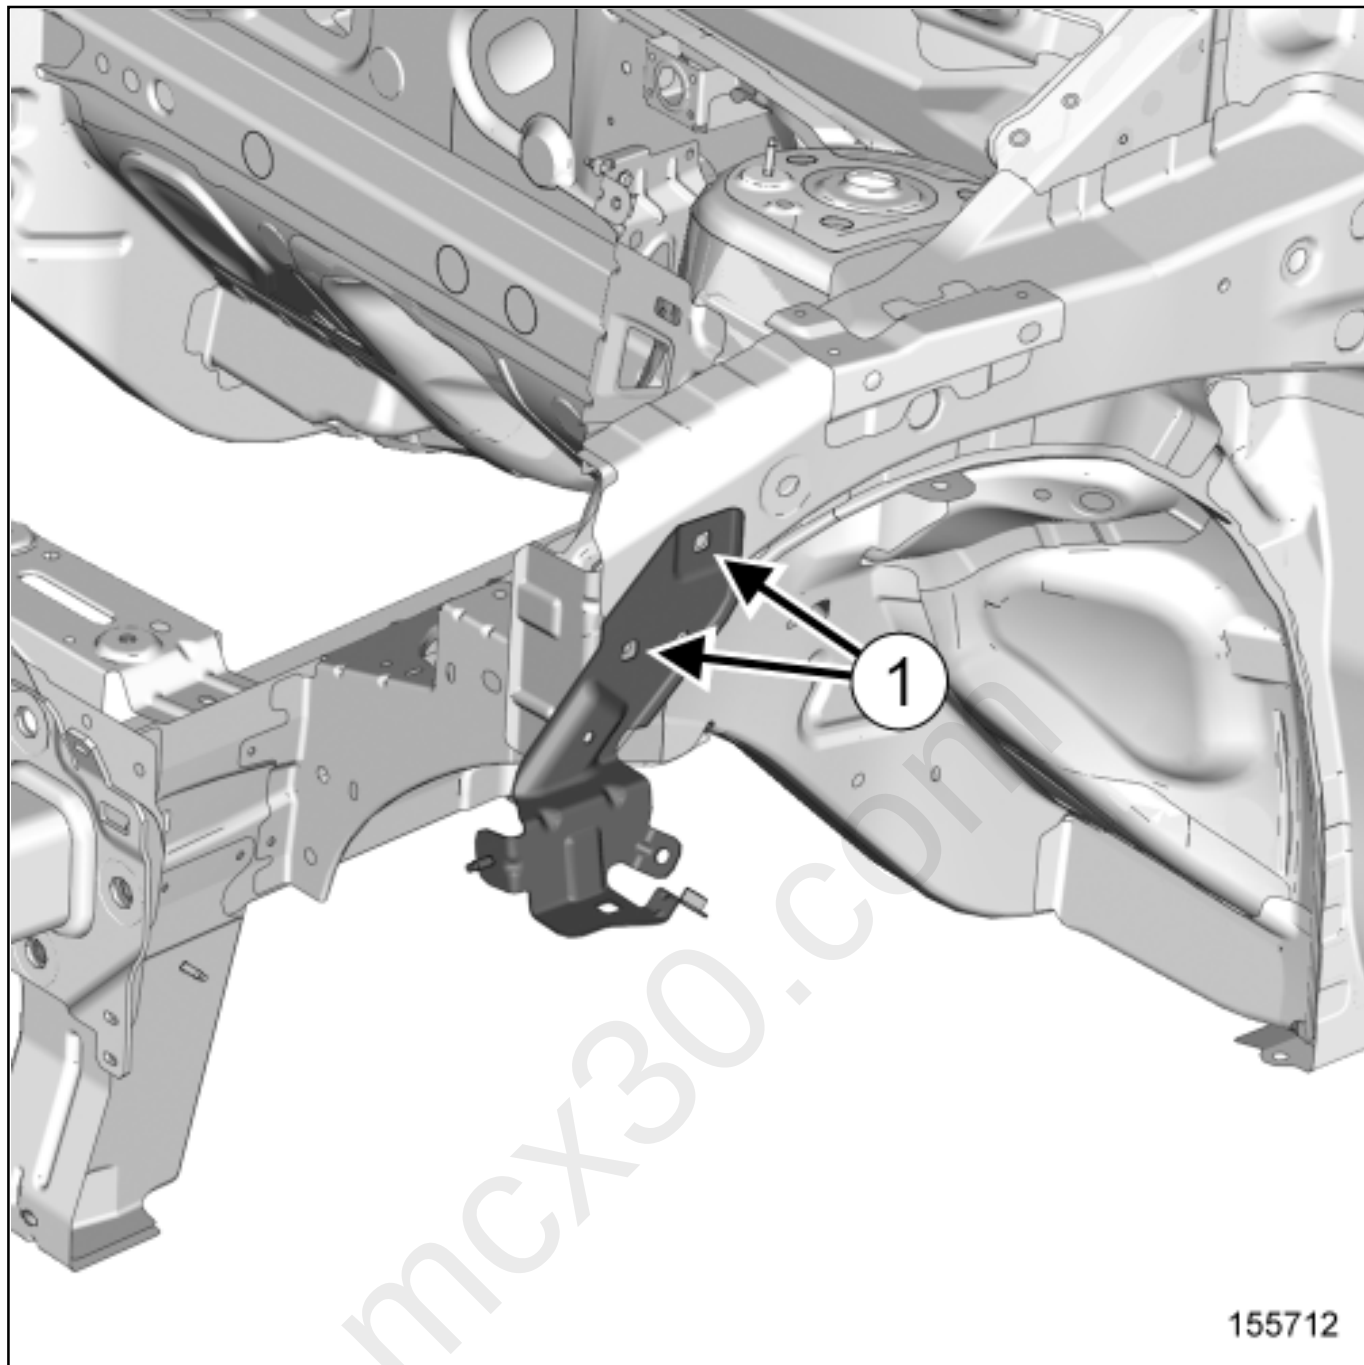

155712

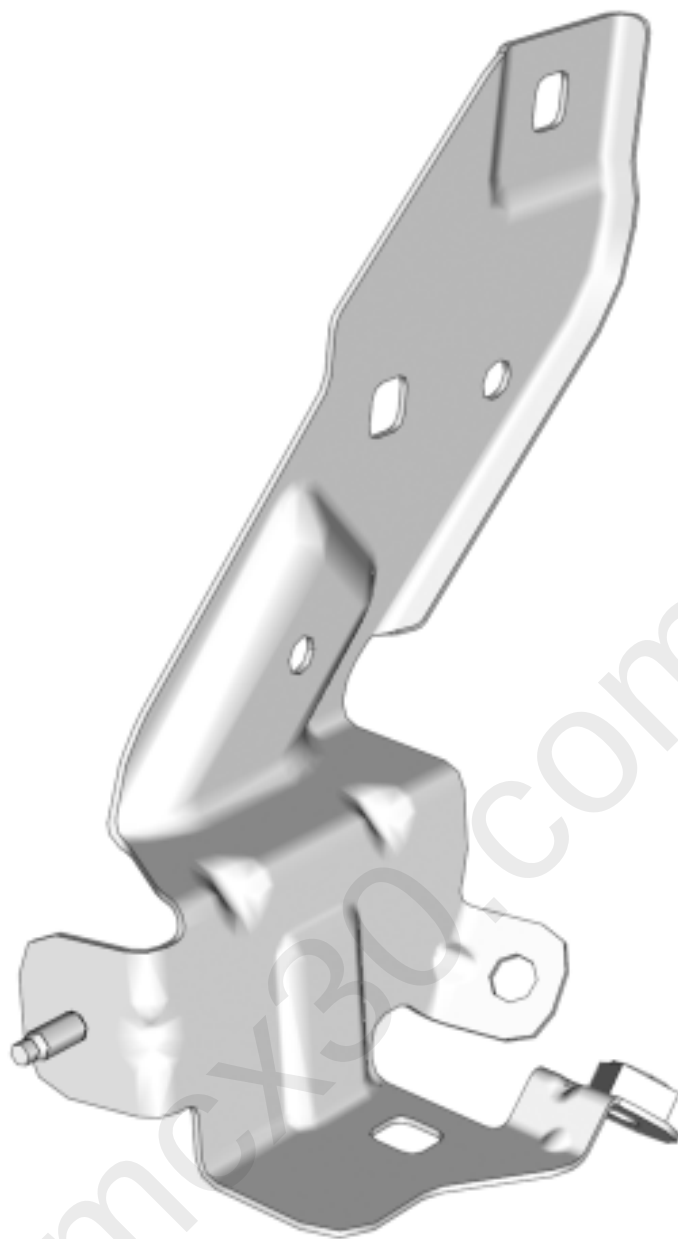

155713

Remove:



the bolts(1) ,



the front bumper support.