




mcx30.com

PRODUCTS AND EQUIPMENT FOR BOLTED ASSEMBLY

1. NUTS AND STUDS TO BE CRIMPED

Use when a thread on a bodywork component is damaged or when fitted on a new part.

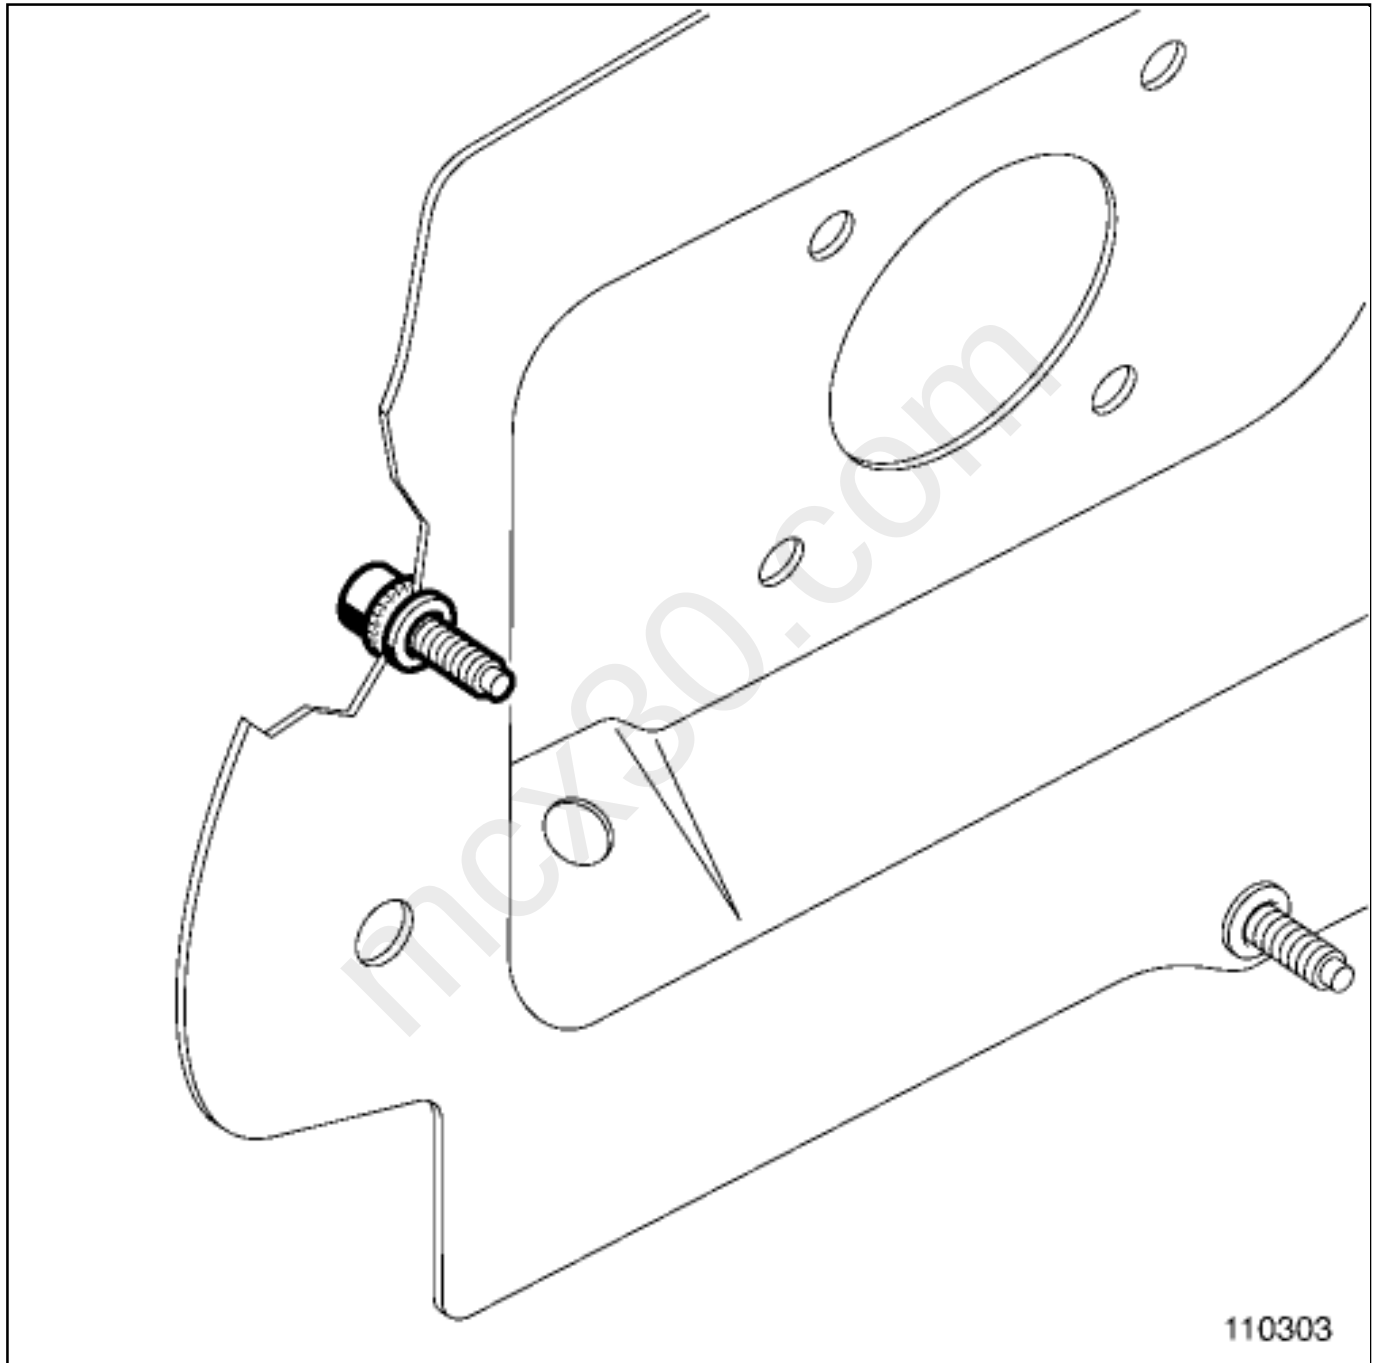

Advantages:



Fitting before or after painting.

Disadvantages:



The support has to be drilled.



For nuts, M10 thread maximum.

Operator protection:




obligatory hand protection,



obligatory eye protection.

2. NUTS AND STUDS TO BE WELDED

Use for welding studs on new components or the vehicle structure.

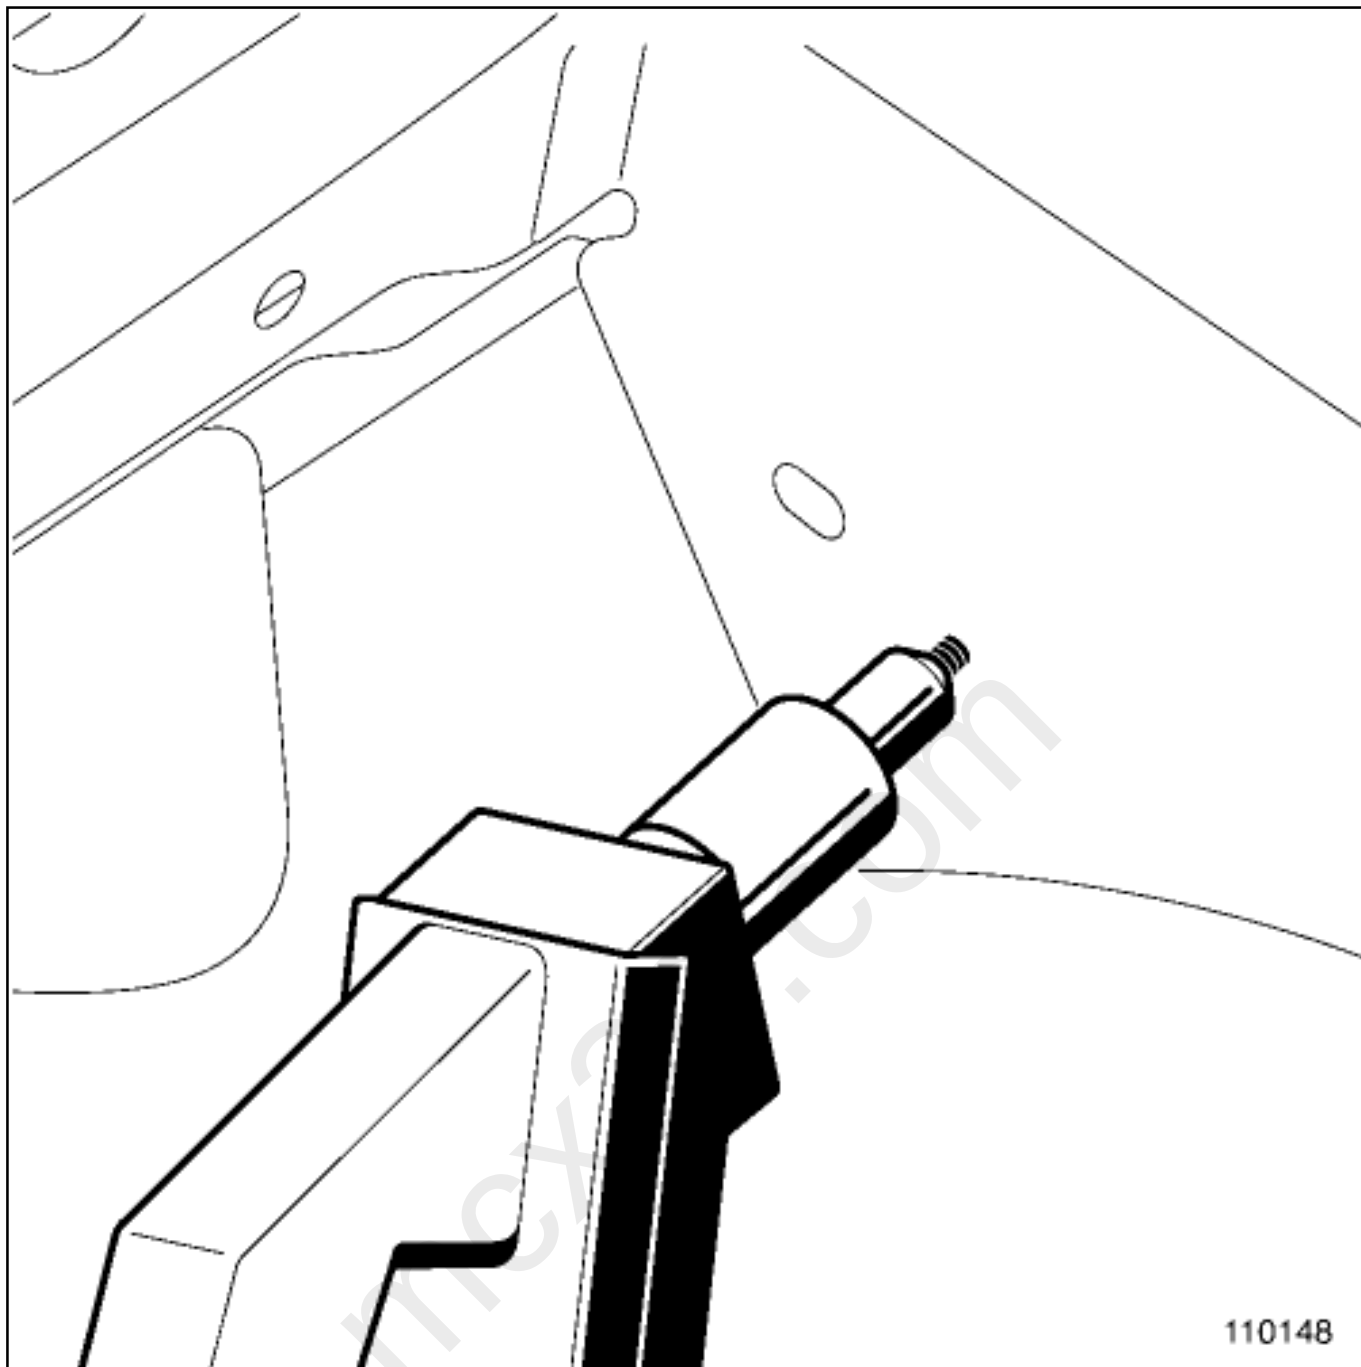

Advantages:



Allows fitting on all steel panel supports.

Disadvantages:



The support has to be stripped.

