



mcx30.com

STRUCTURALACOUSTICPROTECTION

(see 04F, Bodywork products and mountings, Soundproofing products after assembly: Use)

1. SHOCK ABSORBING PANELS


1- PREPARATION

Cut out the panel according to the shape and the dimensions of the original.


Clean the application area on the vehicle.

2- BONDING

mcx30.com

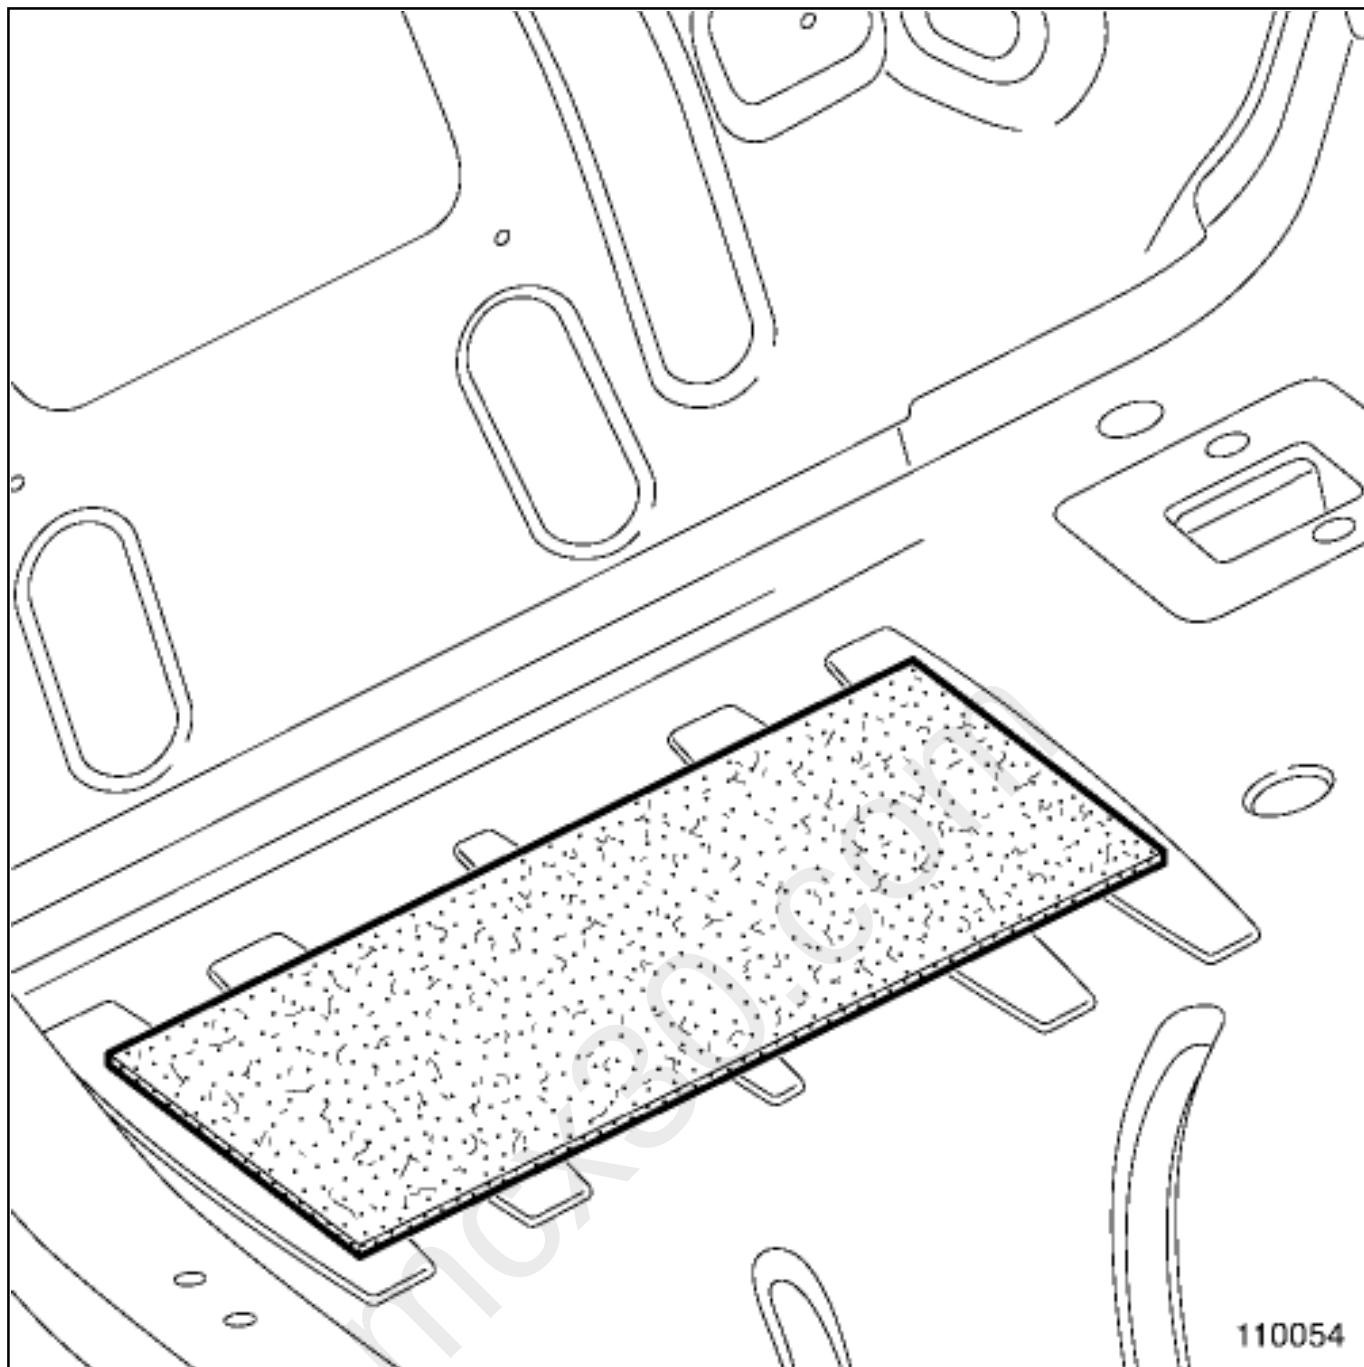

Apply the panel on the original location.

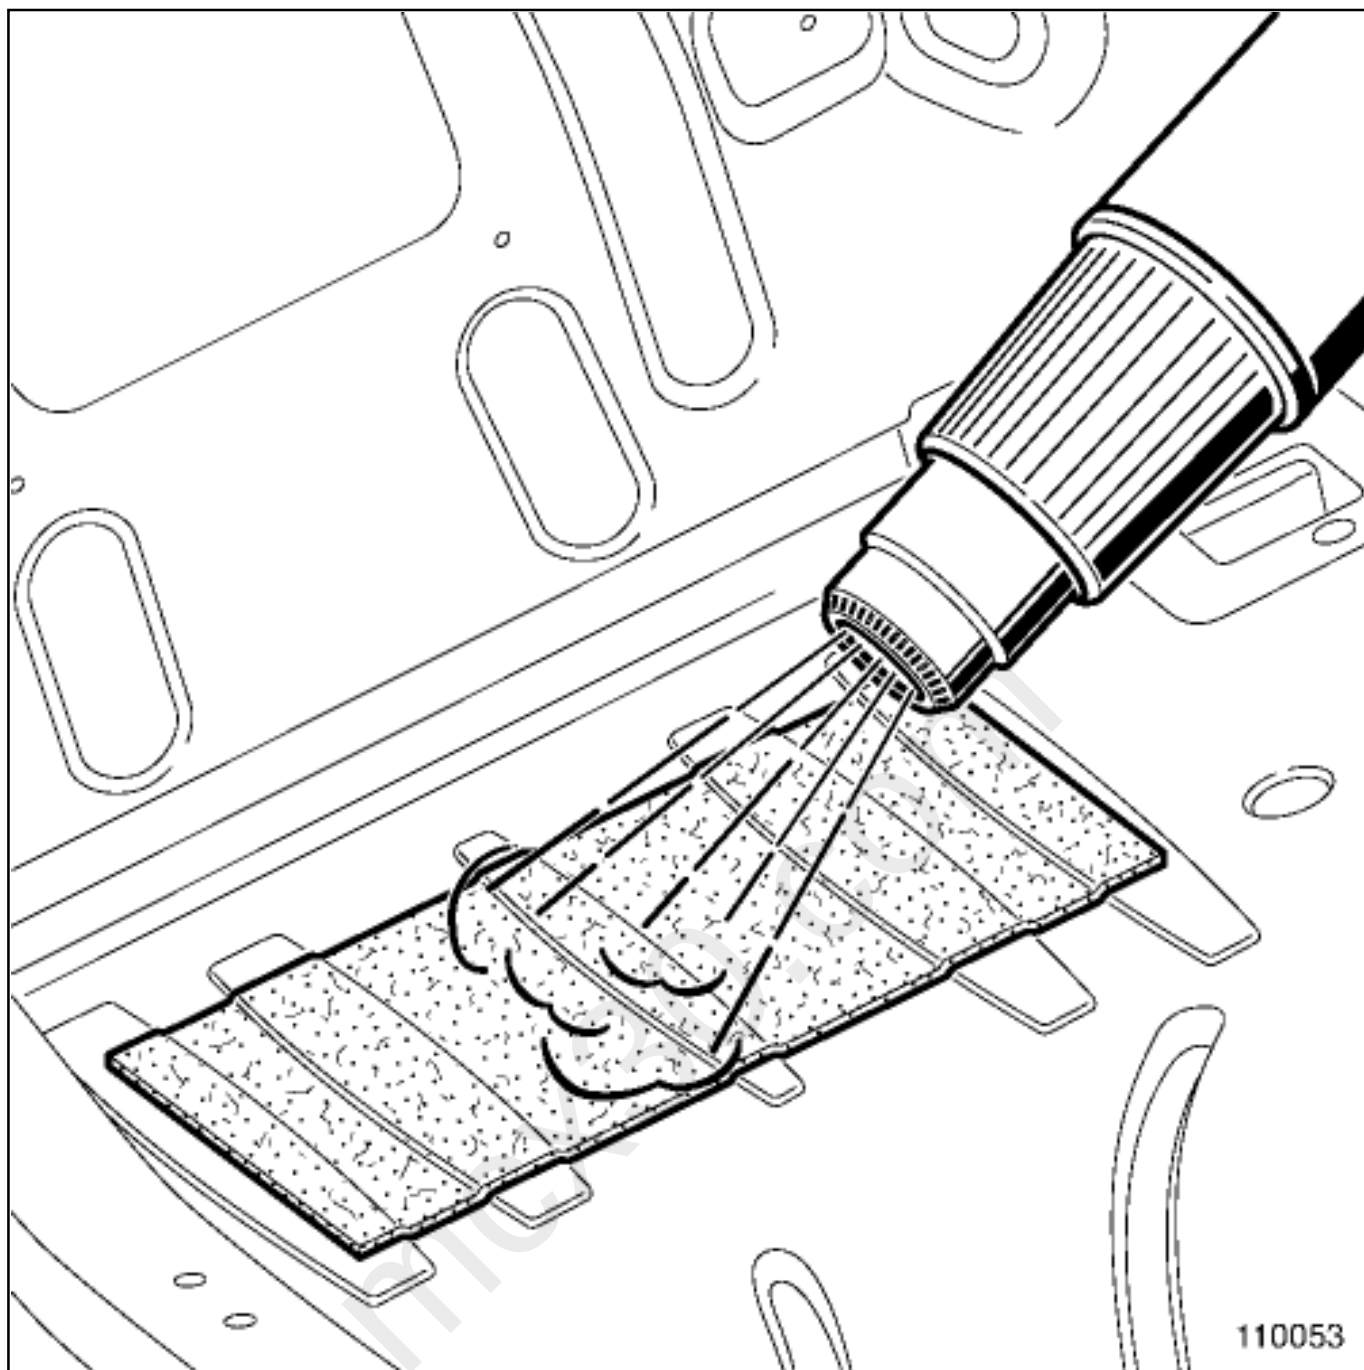


Remove the protective film on the sticky side of the panel.

Lightly and regularly heat the panel by flattening it with a spatula to optimise the adherence and the shaping of the panel in relation to the support shape.

After cooling, check for the absence of air bubbles; if then appear, the area should be reheated.

2. HOLLOW SECTION INSERT

Clean the insert fitting area on the vehicle and on the new part.

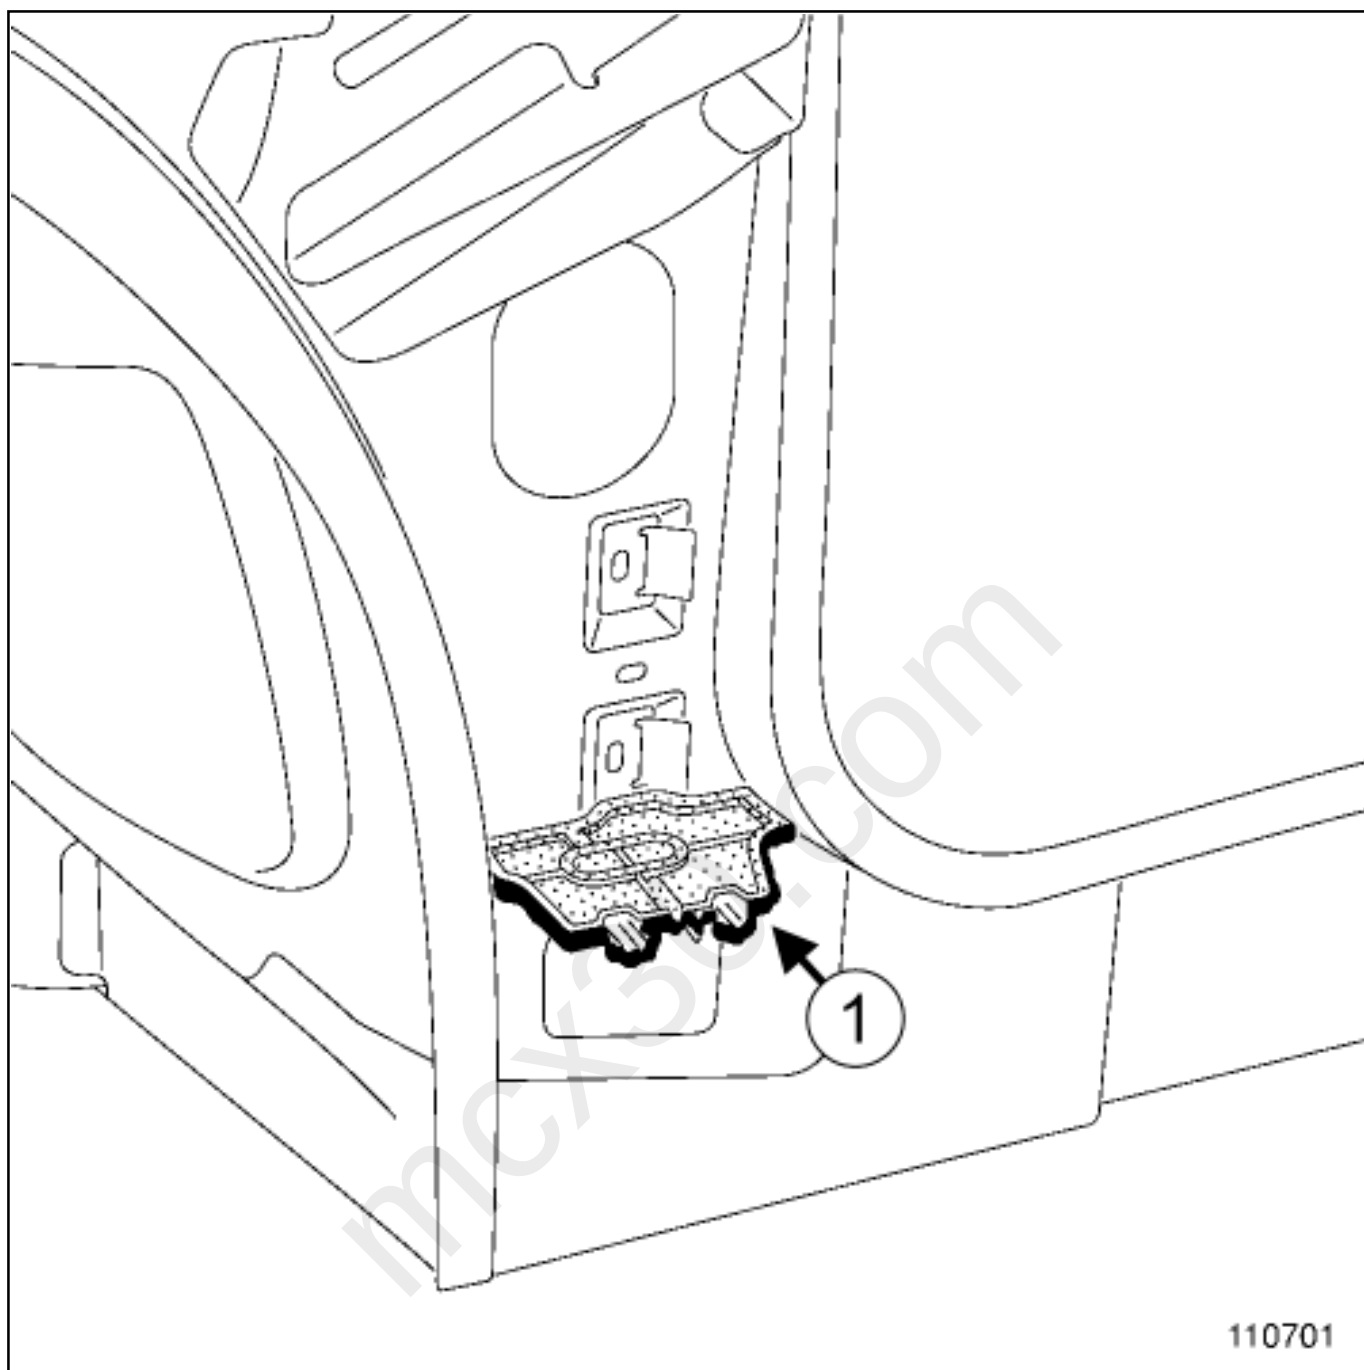

Position the preformed masticbeading (1) on the vehicle in the same position as the original insert.