



Components

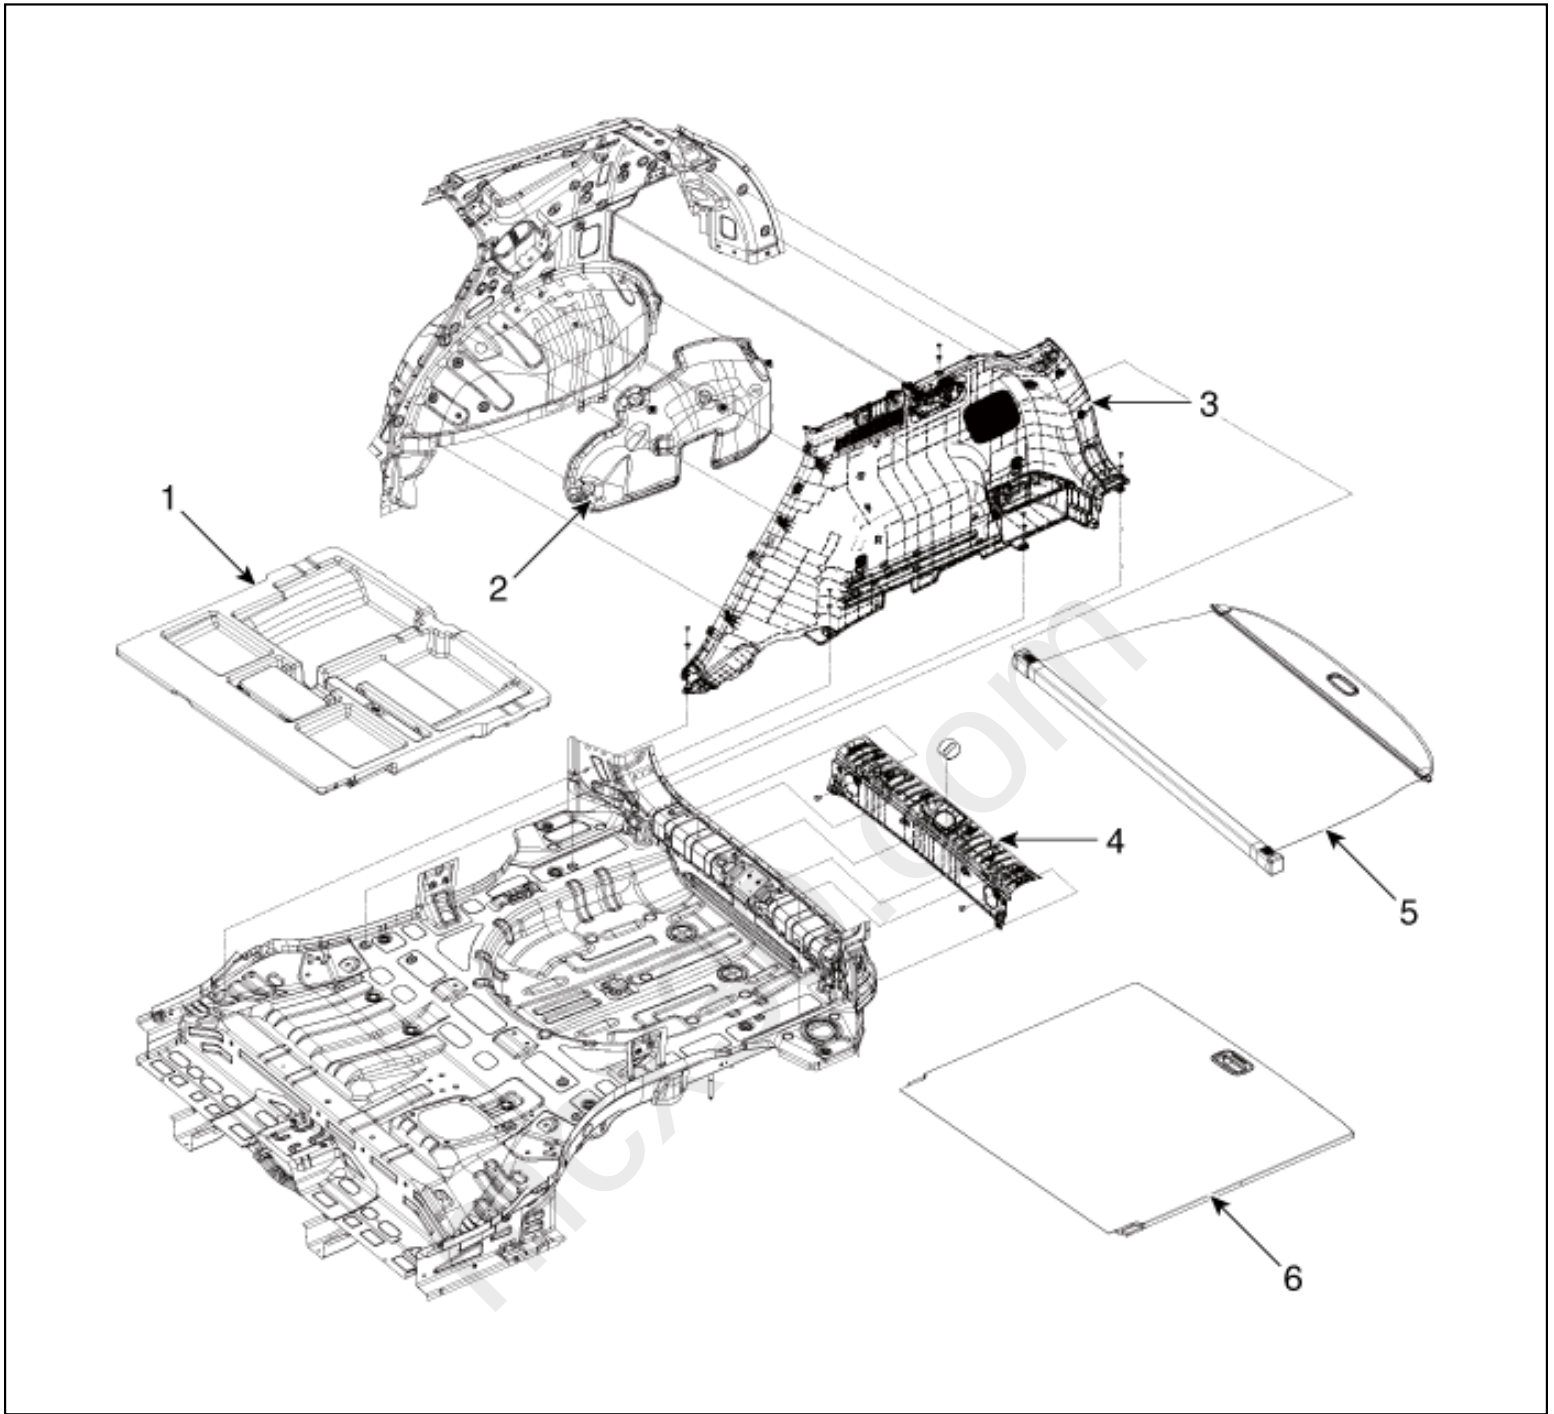

1. Luggage tray
2. Wheel house pad
3. Luggage side trim

4. Rear transverse trim
5. Cargo screen
6. Luggage board

Component
Location

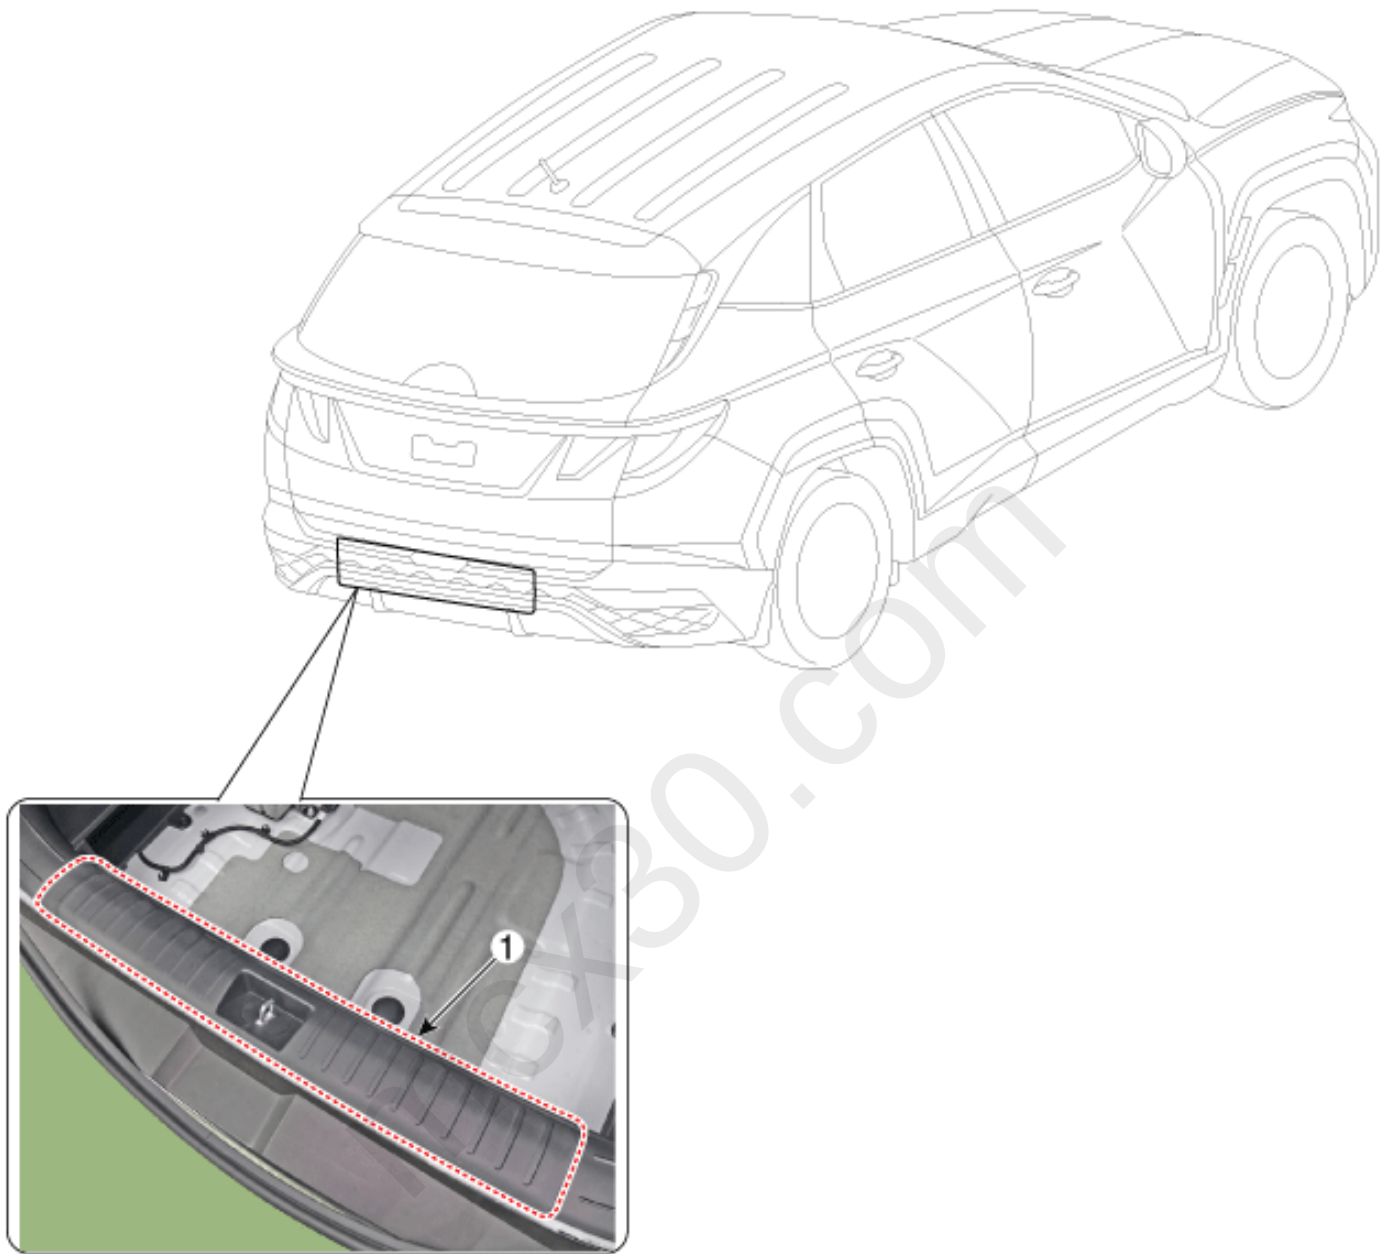

1. Rear transverse trim

Replacement



- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- Put on gloves to prevent hand injuries.




- Take care not to bend or scratch the trim and panels.


1. Remove the tailgate weatherstrip.
(Refer to Tail Gate - "Tail Gate Weatherstrip")
2. Remove the luggage board (A).



3. Remove the luggage tray (A).

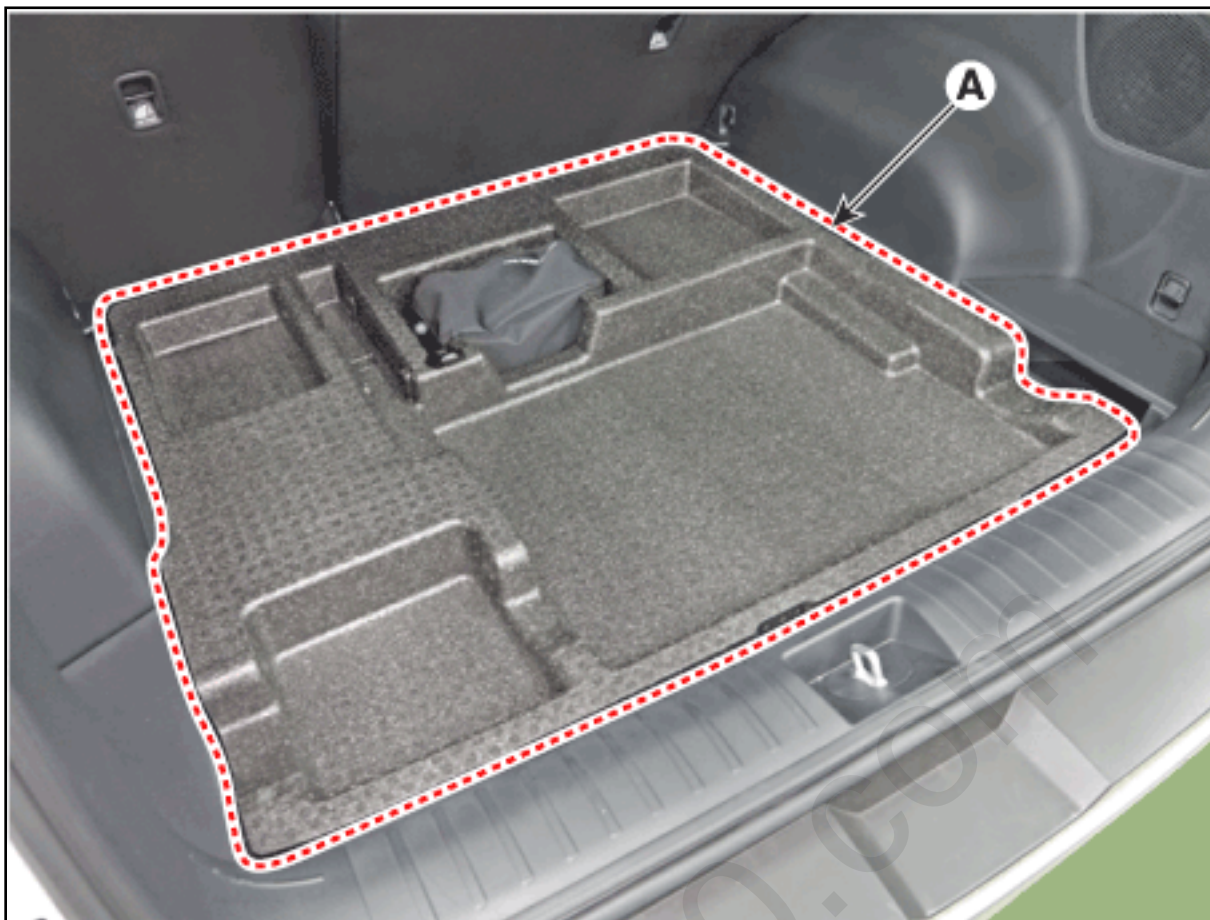

4. Remove the rear transverse trim (A).

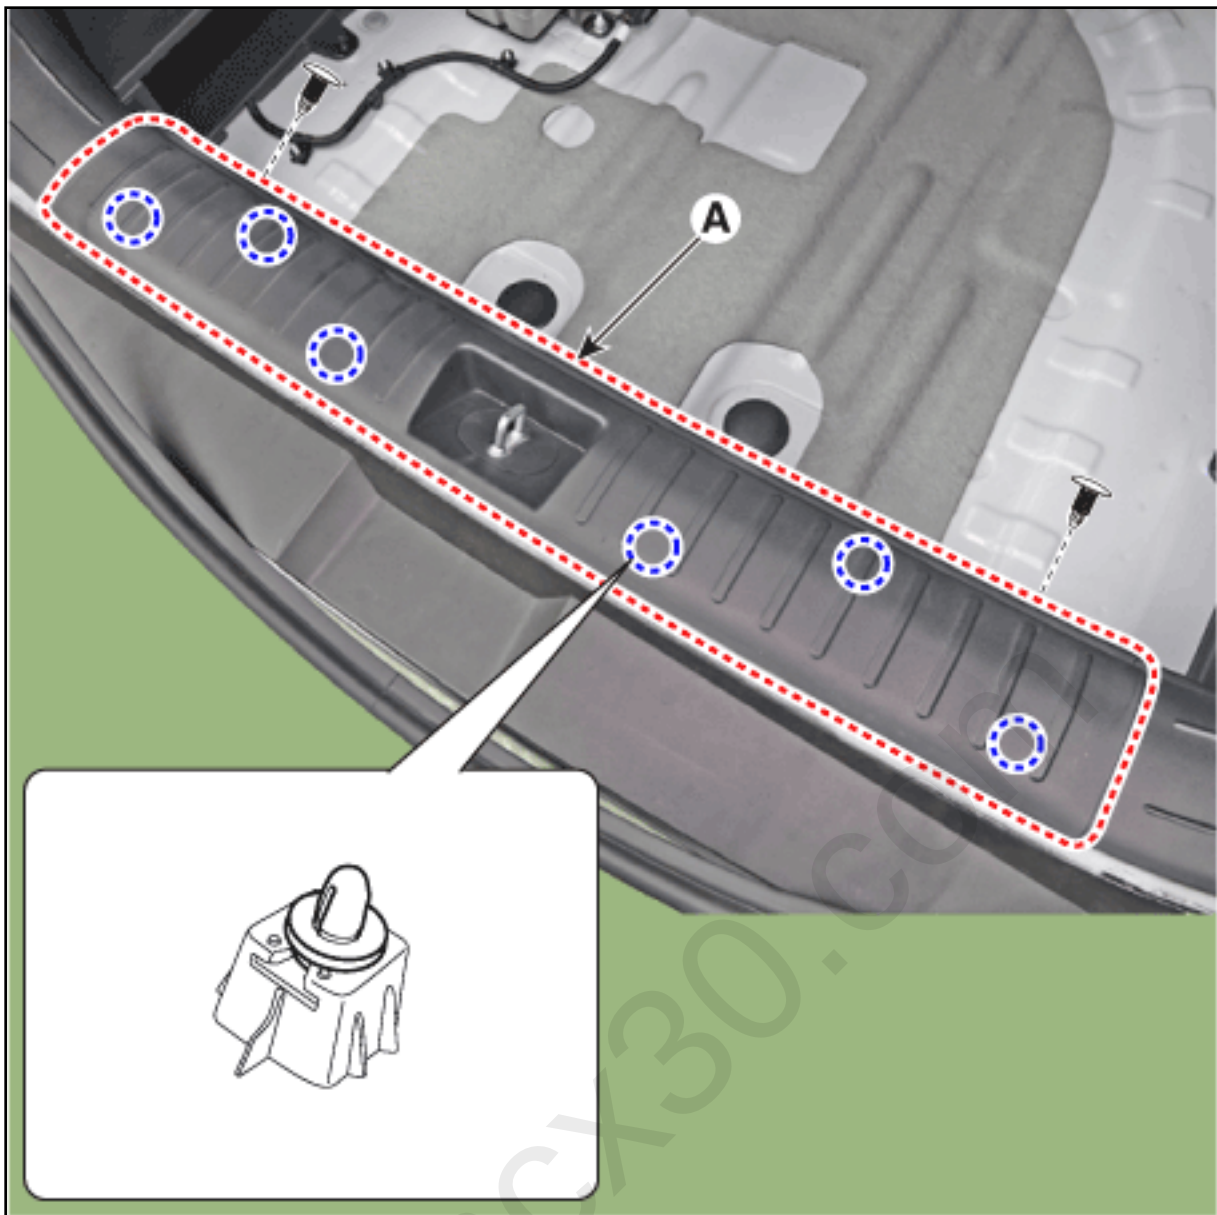


5. To install, reverse removal procedure.



- Replace any damaged clips (or pin-type retainers).

Component
Location

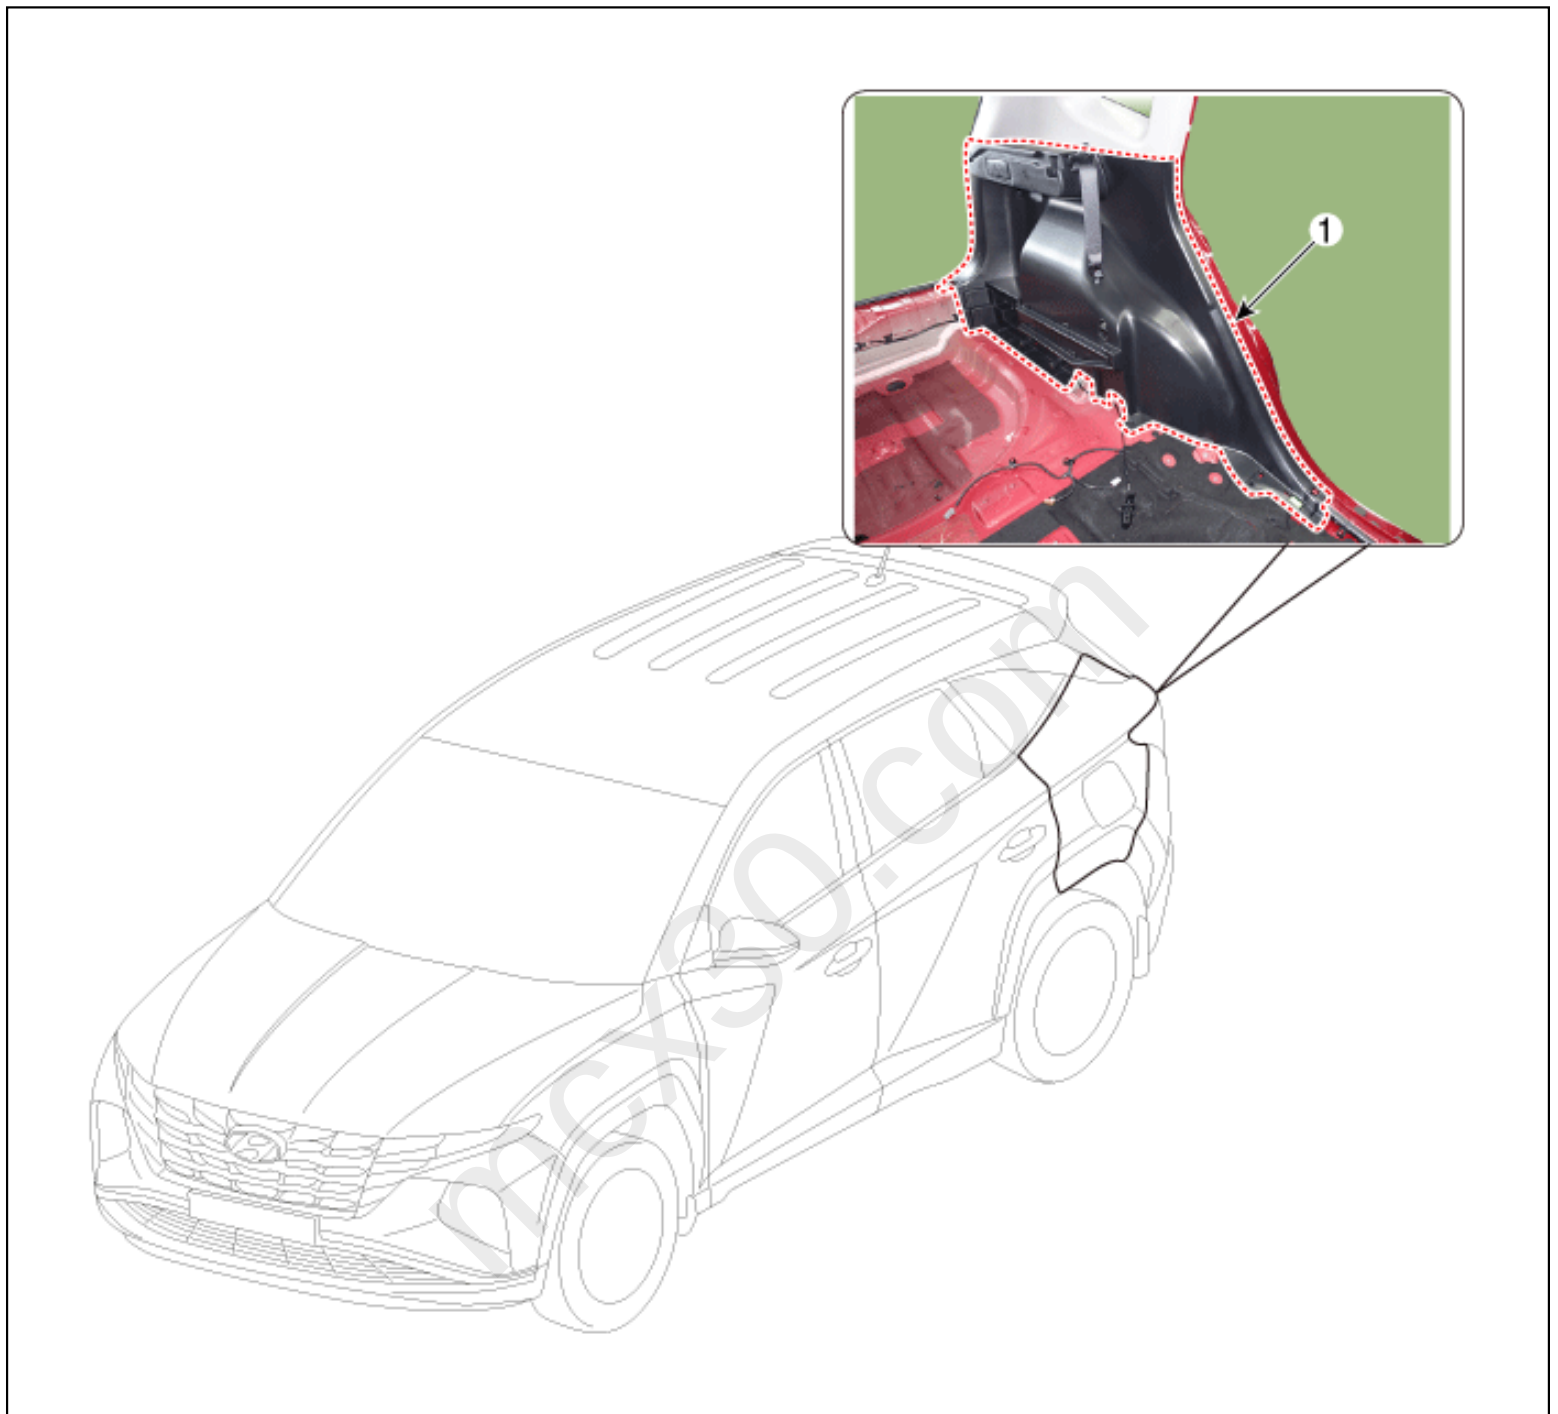

1. Luggage side trim

Replacement




- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- Put on gloves to prevent hand injuries.




- Take care not to bend or scratch the trim and panels.



1. Disconnect the negative (-) battery terminal.
2. Remove the rear seat assembly.
(Refer to Rear Seat - "Rear Seat Assembly")
3. Remove the rear transverse trim.
(Refer to Trunk Trim - "Rear Transverse Trim")
4. Loosen the mounting bolt, remove the second seat belt lower anchor (A).

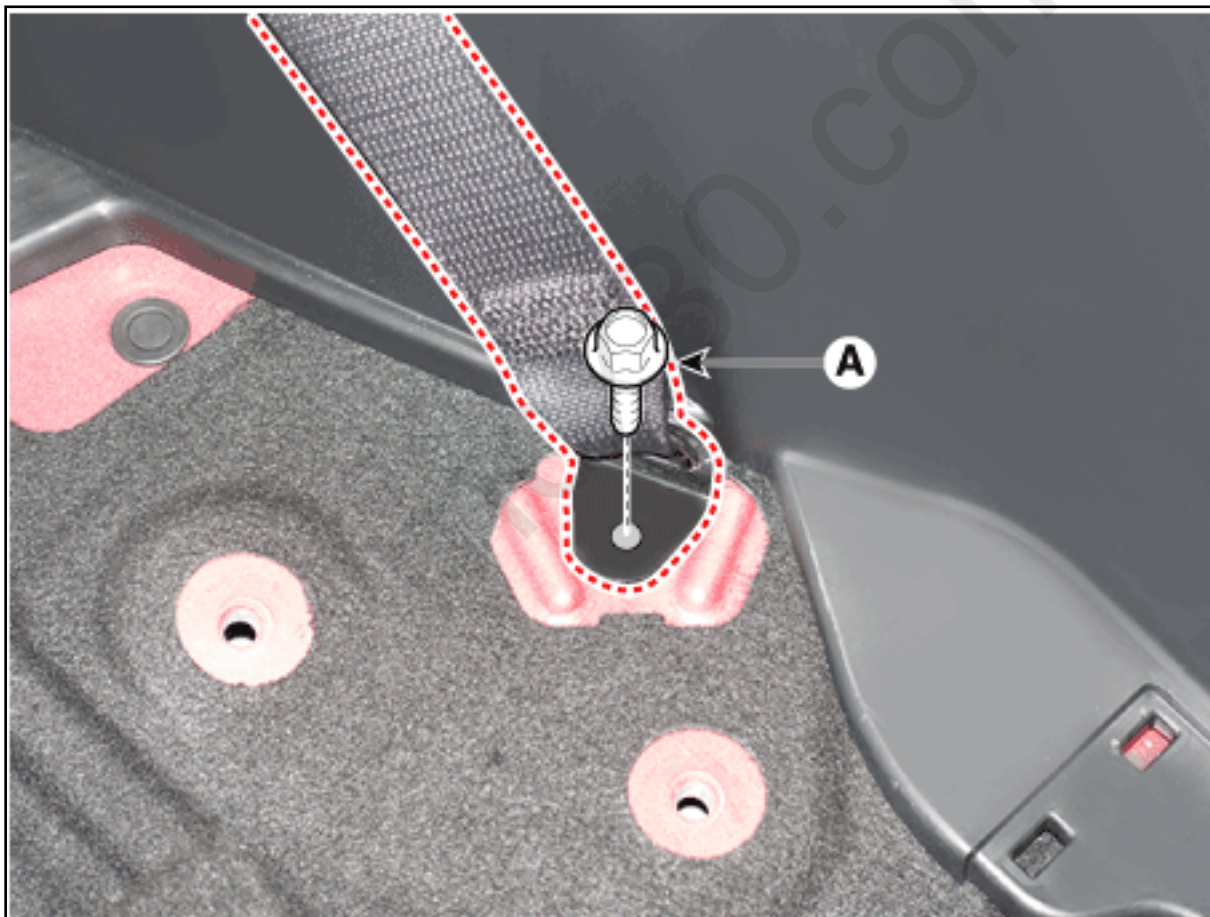

5. Loosen the mounting screws and remove the luggage side trim (A).

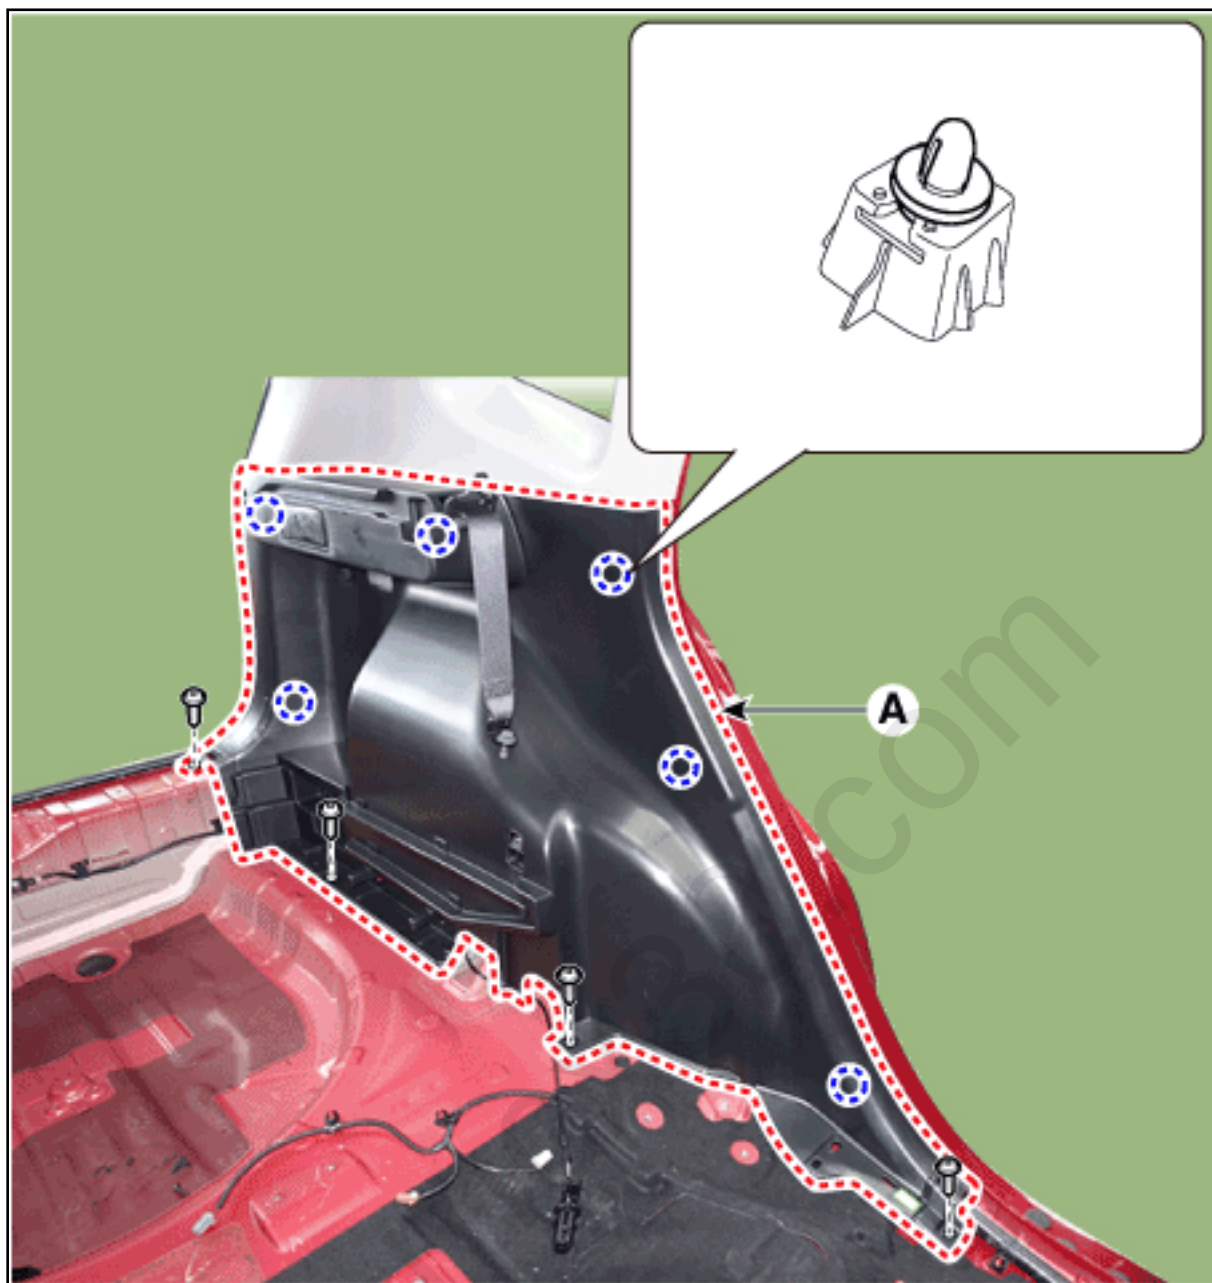

6. Disconnect the connectors (A).

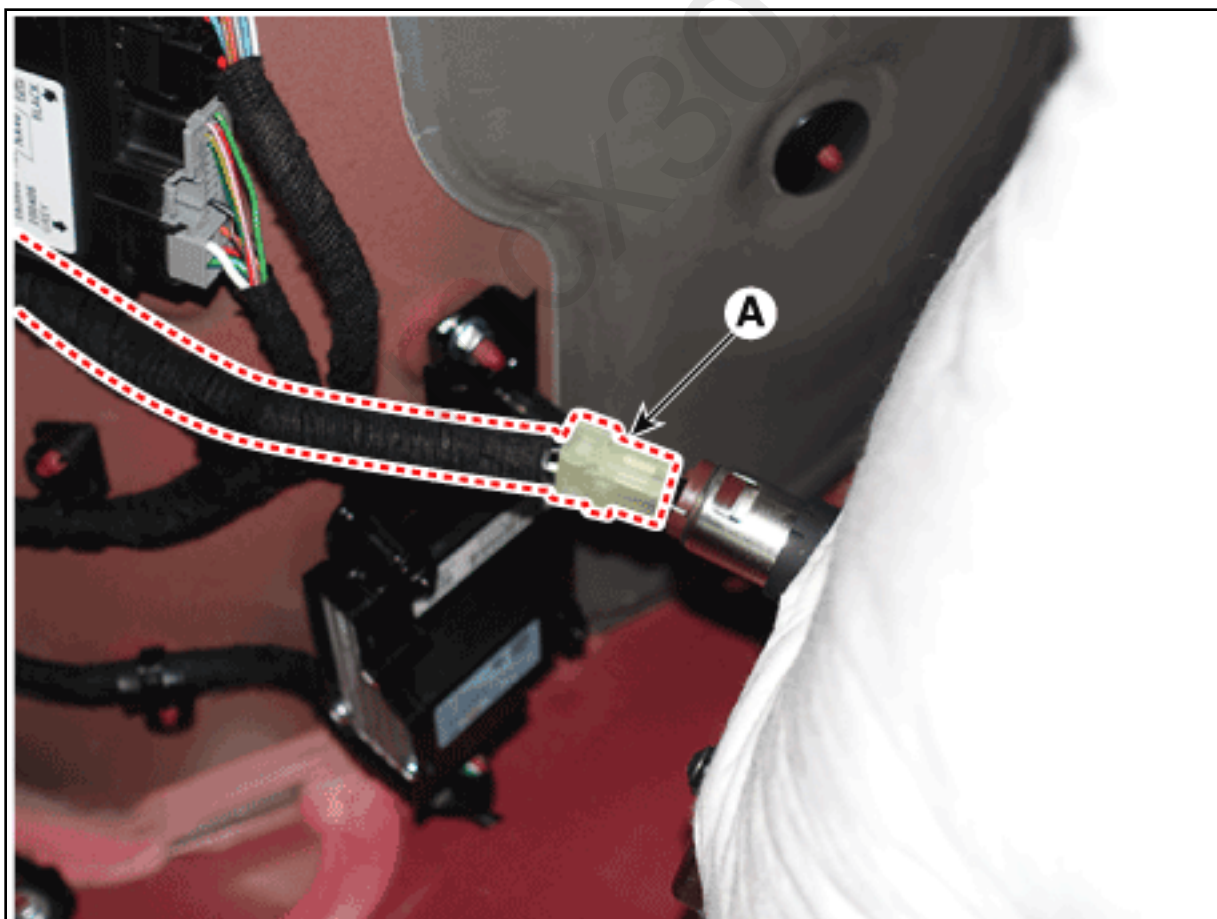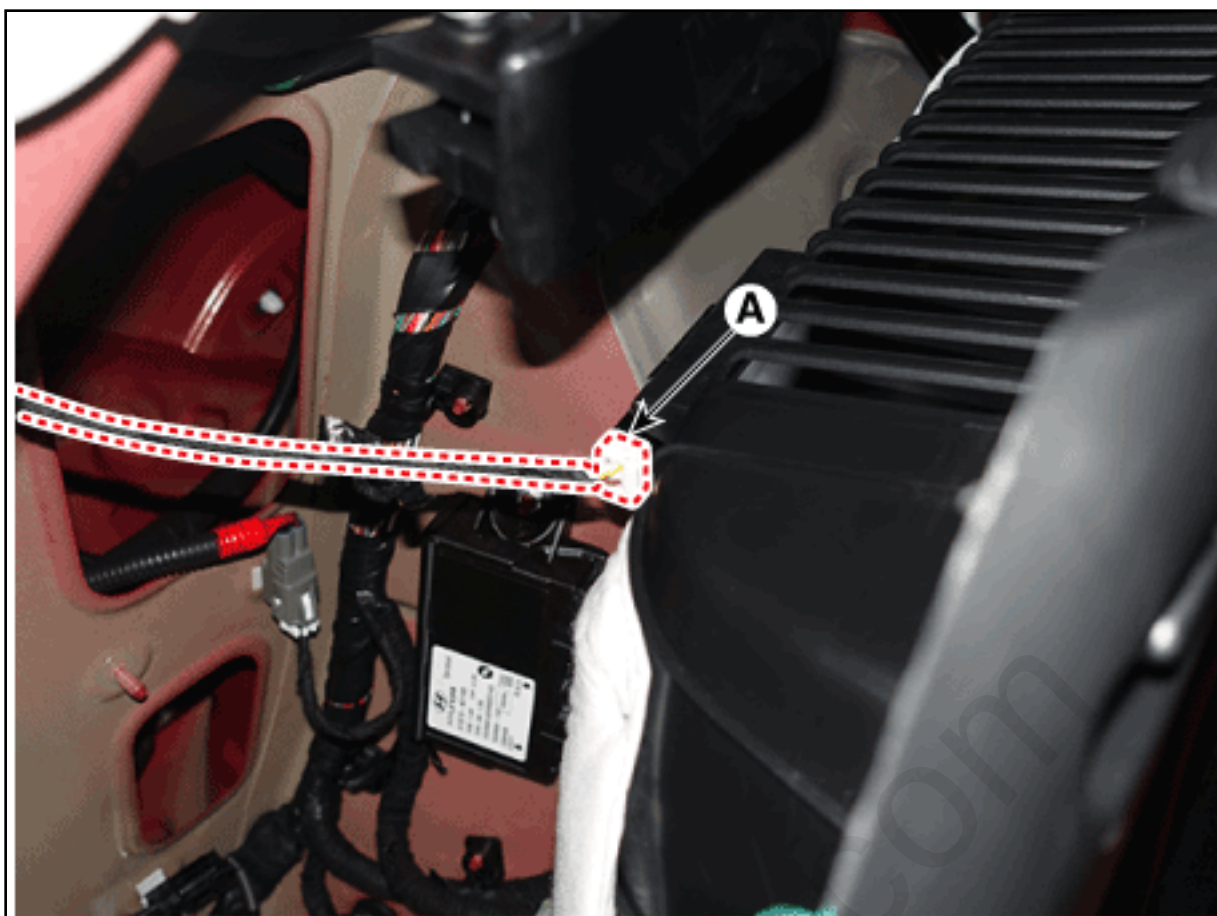

7. To install, reverse removal procedure.



- Replace any damaged clips (or pin-type retainers).
- Make sure the connectors are plugged in properly, and the antenna lead is connected properly.

mcx30.com