

PUBLISHED: 11-SEP-2020
2020.0 DEFENDER (LE), 401-01

PARKING AID

DRIVER ASSISTANCE DOMAIN CONTROLLER (G2732625)

mcx30.com

GENERAL EQUIPMENT

EQUIPMENT NAME

Jaguar Land Rover approved diagnostic equipment

REMOVAL



NOTES:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.


The following step(s) applies to:

All vehicles

1. Disconnect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

2.

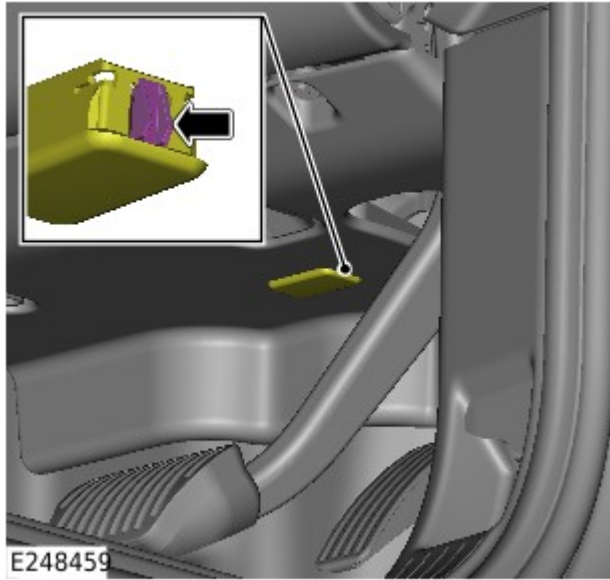


- Release the 2 clips.
- Release the footwell lamp.

3.




- Disconnect the electrical connector.
- Remove the footwell lamp.

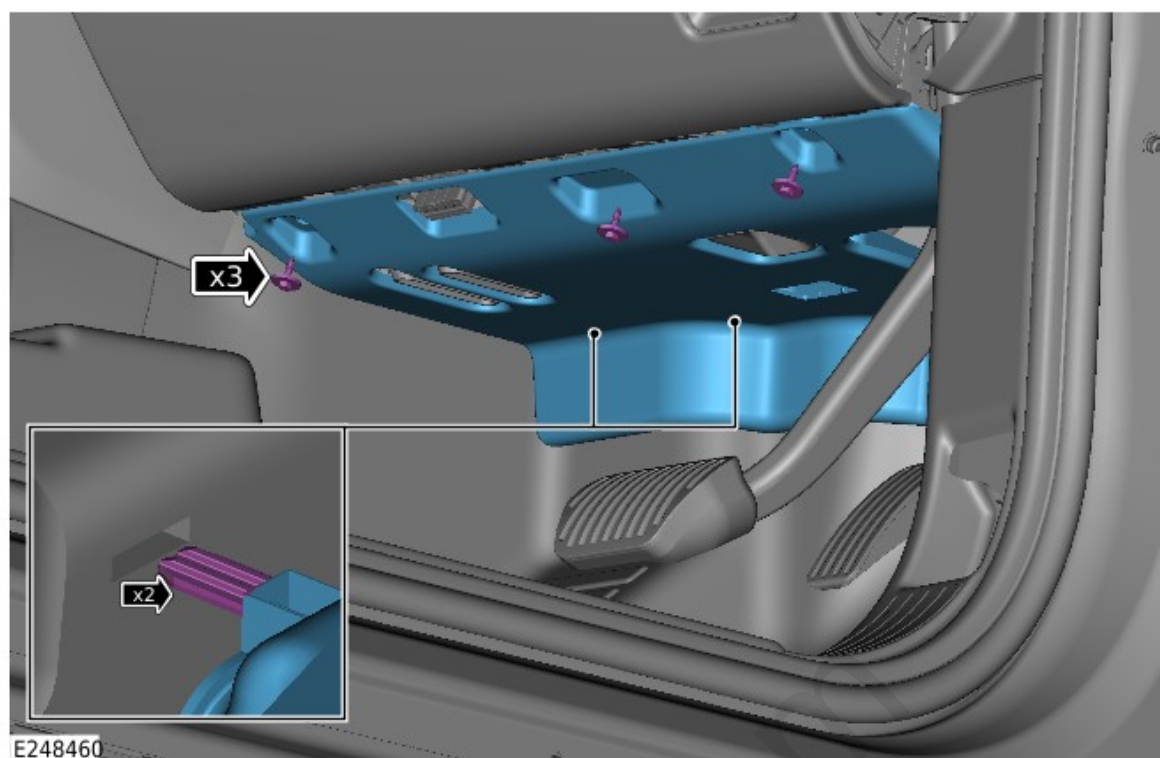

- Remove the 3 screws.
- Release the 2 clips.
- Remove the footwell trim panel.


The following step(s) applies to:
Right hand drive vehicles

5.

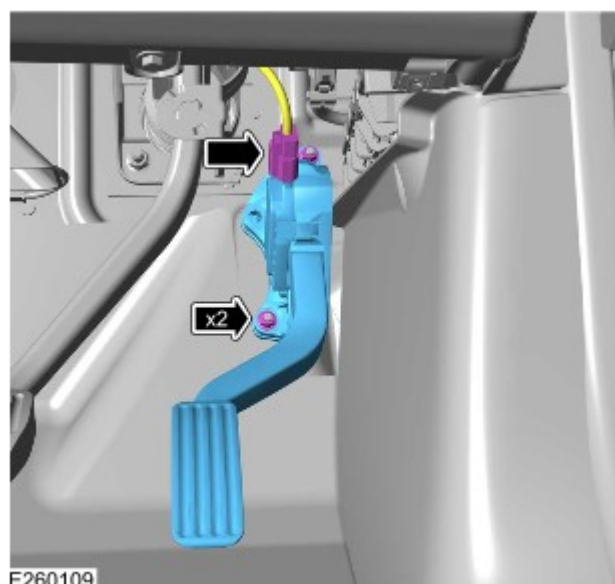

- Disconnect the electrical connector.
- Remove the 2 nuts.
- Remove the accelerator pedal assembly.


6.

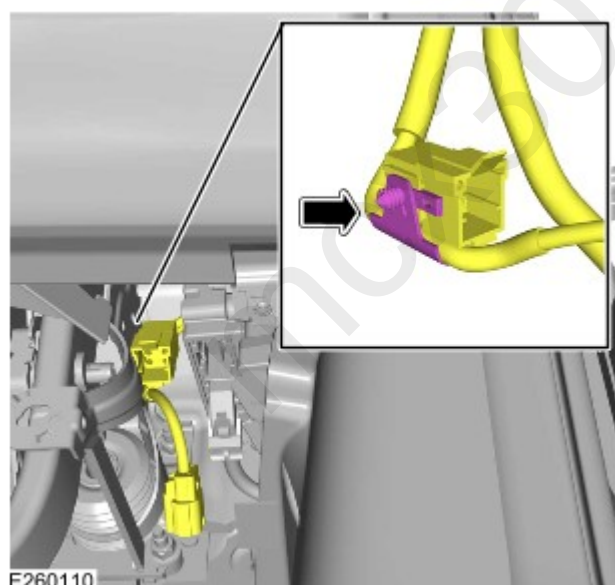

Release the wiring harness clip.

The following step(s) applies to:
All vehicles

7.

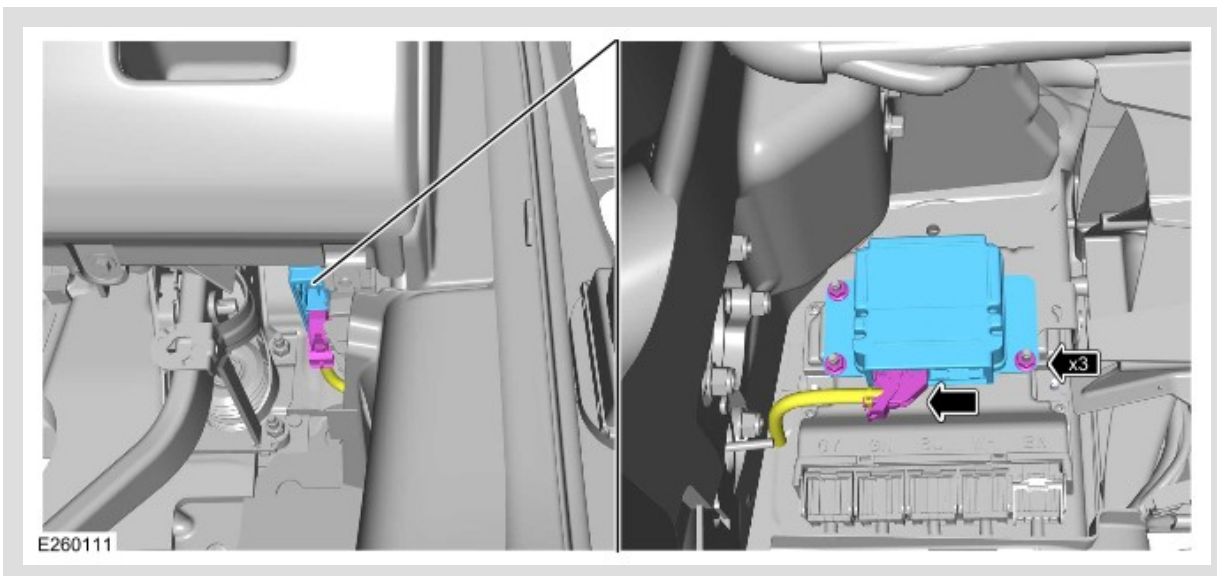

- Disconnect the electrical connector.
- Remove the 3 nuts.
- Remove the Driver Assistance Domain Controller (DADC).

INSTALLATION

The following step(s) applies to:

All vehicles

1.

- Install the DADC.
- Install and tighten the 3 nuts.
Torque: 10Nm
- Connect the electrical connector to the DADC.

The following step(s) applies to:

Right hand drive vehicles

2.

Install the wiring harness clip to the brake pedal bracket.

3.

- Install the accelerator pedal assembly.
- Install and tighten the 2 nuts.
Torque: 10Nm
- Connect the electrical connector to the accelerator pedal assembly.

The following step(s) applies to:

All vehicles

4.

- Install the footwell trim panel.
- Install and tighten the 3 screws.

5.

- Connect the electrical connector to the footwell lamp.
- Install the footwell lamp at the 2 clips.

6.

Connect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

7.

 NOTE:

This step is only required if a new component is installed.

- Use the Jaguar Land Rover (JLR) approved diagnostic equipment to configure the new module.
General Equipment: [Jaguar Land Rover approved diagnostic equipment](#)
- Follow all on-screen instructions to complete this task.