

PUBLISHED: 18-FEB-2020
2020.0 DEFENDER (LE), 413-08

MESSAGE CENTER

HEAD UP DISPLAY (G2323752)

mcx30.com

GENERAL EQUIPMENT

EQUIPMENT NAME

Jaguar Land Rover approved diagnostic equipment

REMOVAL

 CAUTION:

Take extra care not to damage the Head Up Display (HUD) lens when removing or installing the component.

 NOTES:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.


1. Disconnect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

2. Remove the instrument panel upper section.


Refer to: [Instrument Panel Upper Trim](#) (501-12 Instrument Panel and Console, Removal and Installation).

3.

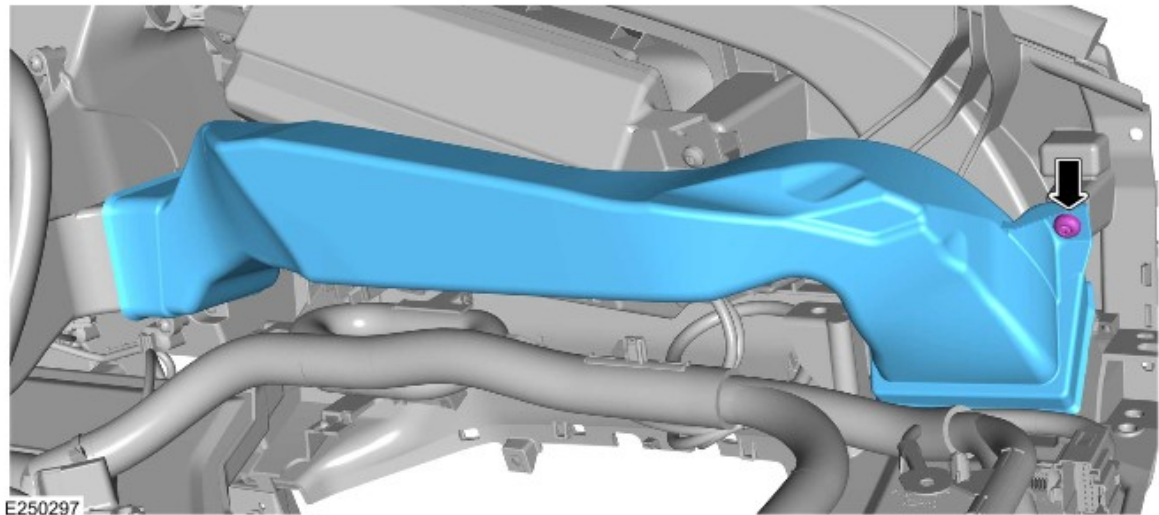

- Remove the screw.
- Remove the face level vent duct of the driver side.

4.

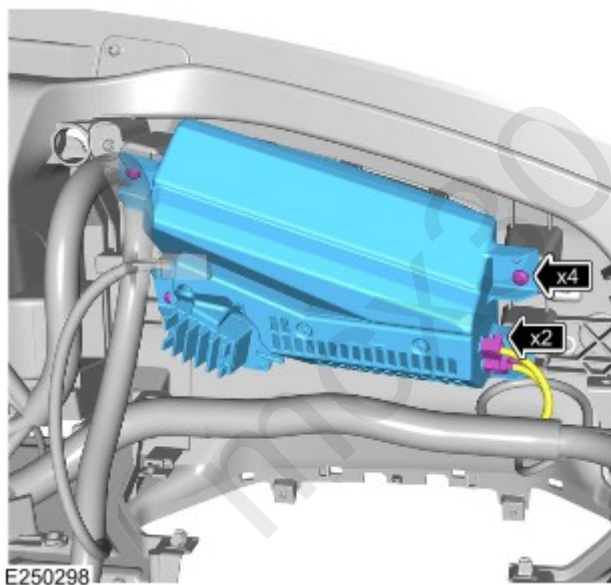

- Disconnect the 2 electrical connectors from the Head Up Display (HUD).
- Remove the 4 bolts.
- Remove the HUD.

INSTALLATION

1.

CAUTION:

If a new Head Up Display (HUD) is installed, after installation make sure that the protection cover is removed from the lens using the protection cover pull tab.

- Install the Head Up Display (HUD).
- Install and tighten the 4 bolts.
Torque: 5Nm
- Connect the 2 electrical connectors to the HUD.

2.

- Install the face level vent duct of the driver side.
- Install and tighten the screw.
Torque: 2.2Nm

3.

Install the instrument panel upper section.

Refer to: [Instrument Panel Upper Trim](#) (501-12 Instrument Panel and Console, Removal and Installation).

4.

Connect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

5.

NOTES:

- This step is only required if a new component is installed.
- SRO to be claimed separately.
- Use the Jaguar Land Rover (JLR) approved diagnostic equipment to configure the new module.
General Equipment: [Jaguar Land Rover approved diagnostic equipment](#)
- Follow all on-screen instructions to complete this task.